

Philips  
Blu-ray Disc/ DVD player

DivX Plus HD  
USB2.0 Media Link

BDP2600



## Enjoy sharp, HD images

Impressively sharp, HD images are yours to experience with the Philips Blu-ray disc player BDP2600. Enjoy full HD 1080p from Blu-ray discs and near-HD quality from DVD video upscaling. Play videos and music from the USB/hard disk drive too.

### See more

- Blu-ray Disc playback for sharp images in full HD 1080p
- Full HD 1080p for razor sharp images
- 1080p at 24 fps for cinema-like images
- DivX Plus HD Certified for high definition DivX playback
- DVD video upscaling to 1080p via HDMI for near-HD images
- Subtitle Shift for widescreen without any missing subtitles

### Hear more

- Dolby TrueHD and DTS-HD MA for HD 7.1 surround sound


### Engage more

- Enjoy all your movies and music from CD and DVD
- USB 2.0 plays video/music from USB flash/hard disk drive
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- EasyLink to control all HDMI CEC devices via a single remote

# PHILIPS

# Highlights

## Blu-ray Disc playback

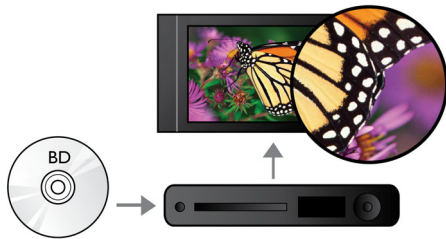

Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. Scenes come to life as details leap at you, movements smoothen and images turn crystal clear. Blu-ray also delivers uncompressed surround sound - so your audio experience becomes unbelievably real. The high storage capacity of Blu-ray Discs also allow a host of interactive possibilities to be built in. Seamless navigation during playback and other exciting features like pop-up menus bring a whole new dimension to home entertainment.

## 1080p at 24 fps



Bring true cinema experience into your living room with 24 frames-per-second video. Original films are all recorded at this frame rate, providing an ambience and image texture that is so unique. Philips Blu-ray Disc players are equipped to bring you 24fps directly from Blu-ray Discs - thus giving you sensational cinema-like high definition images that will astound you.-

## DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

## Subtitle Shift




Subtitle Shift is an enhancement feature that lets users manually adjust a movie's subtitle positioning on the television or computer screen. Using the remote control, users can shift the subtitles up and down on the screen. On widescreen displays, such as 21:9 cinema and projectors, the subtitles sometimes get cut off. In order to see them clearly, the user has to change the display aspect ratio, which defeats the purpose of the widescreen. With the Subtitle Shift feature, the user can retain the correct display aspect ratio and have the subtitles ideally positioned on the screen.

## USB 2.0

The Universal Serial Bus or USB is an industry standard that allows high-speed, easy

connection of peripherals to PCs, consumer electronics and mobile products. The USB 2.0 provides better and faster performance - up to 40 times quicker than the USB 1.0 and with a data transfer rate of up to 480 Mbps from the original 12 Mbps. When plugged in, everything configures automatically. With USB 2.0, simply plug in your USB portable devices or hard disk drives, select the movie, music or photo and play away.

## Dolby TrueHD and DTS-HD MA

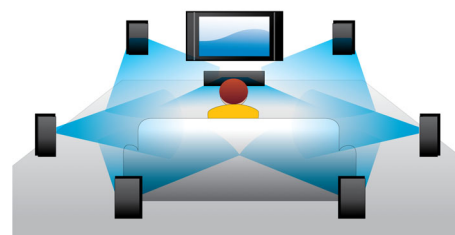

DTS-HD Master Audio and Dolby TrueHD delivers 7.1 channels of the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. DTS-HD Master Audio and Dolby TrueHD complete your high definition entertainment experience.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

# Specifications

## Picture/Display

- Aspect ratio: 21:9, 16:9, 4:3
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

## Video Playback

- Playback Media: BD Video, BD-ROM, BD-R/RE 2.0, DVD, DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD, CD-R/CD-RW, USB flash drive, DivX
- Compression formats: H.264, MPEG4 (AVC), VC-1, MPEG2, DivX Plus™ HD, MKV, XviD
- Disc Playback Modes: Standard Play, Pause, Search forward/reverse, Slow Forward, Resume Playback from Stop, Skip, Disc Menu, Repeat, A-B Repeat, Zoom, Angle
- Video Enhancement: Deep Color, x.v. Color, Video Upscaling, Progressive Scan
- BD Region Code: A
- DVD Region.: 4

## Sound

- Sound System: Dolby True HD, Dolby Digital Plus, Dolby Digital, DTS-HD Master Audio, DTS

## Audio Playback

- Playback Media: CD, CD-R/RW, MP3-CD, MP3-DVD, USB flash drive
- Compression format: DTS, Dolby Digital, AAC, MP3, PCM

## Digital Photo Playback

- Playback Media: USB flash drive, CD-R/RW, DVD+R/+RW, DVD-R/-RW
- Picture Compression Format: JPEG
- Picture Enhancement: High Definition Resolution,

Slideshow, Rotate, Zoom, Slideshow with MP3 playback

## Connectivity

- Rear Connections: HDMI output, Ethernet, Digital coaxial out
- Front / Side connections: USB 2.0

## Convenience

- EasyLink (HDMI-CEC): One touch play, One touch standby
- On-Screen Display languages: English, Brazilian Portuguese, Mexican Spanish
- Child Protection: Parental Control
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade

## Accessories

- Included accessories: HDMI cable, Remote Control, User Manual, Product Registration Card, \*Flat pin adaptor
- User Manual: Brazilian Portuguese, Mexican Spanish

## Power

- Power supply: 220-230V, 50Hz
- Power consumption: 14 W
- Standby power consumption: 0.56

## Dimensions

- Packaging dimensions (W x H x D): 420 x 90 x 303 mm
- Weight incl. Packaging: 2.0 kg
- Product dimensions (W x H x D): 360 x 44 x 210 mm
- Product weight: 1.25 kg



Issue date 2015-08-07

Version: 2.1.3

12 NC: 8670 000 85094  
UPC: 6 09585 22164 2

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)