


Philips
Smart clothes drying rack

2-mode air drying

Smart heat drying
Adjustable rods
Obstacle recovery

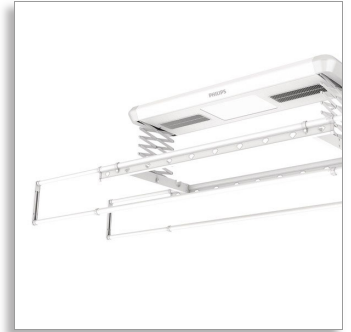

SDR102UBW0

Clothes drying made faster

With air drying and heat drying

Alpha supports air-drying and heat-drying, allowing efficient clothes drying in all weathers. So you can enjoy fresh and clean clothes everyday.

Caring design for more drying possibilities

- With 4 rods
- For more efficient use of space
- Designed to dry more clothes

Designed to ease your life

- To realize rack lifting with one click
- To enhance security

Smart operation for convenient life

- Ensure fast clothes drying
- For worry-free clothes drying in all weathers

Multiple protections to keep you safe

- Brought by multiple protections
- Ensured by durable scissor frame

PHILIPS

Highlights

2-mode air drying




Two cross flow fans of Alpha can efficiently remove moisture from clothes with strong airflow, making clothes drying faster than ever. Air drying lasts for 2 hours, then stops automatically. While saving energy, it also helps to increase the rack's lifespan.

SDR102UB097-



The 35 kg load capacity allows you to dry more laundry at one time. If laundry on the rack exceed 35 kg, the motor stops automatically with an alert to secure your safety.


Adjustable rods

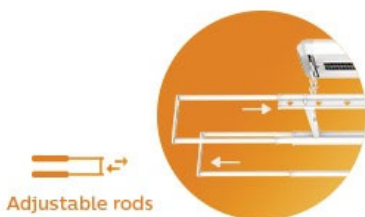

The 1.2+0.95 m adjustable rods means a maximum rod length of 2.15 m. You can extend the rods for larger drying space and retract them to save space. The drying rack can also be installed at two sides of you balcony to avoid influencing the look of your balcony or

your leisure activities there. All that makes Alpha a perfect choice for small-sized balcony.

Enhanced security

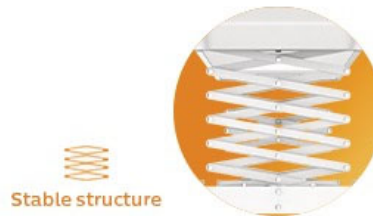

Alpha supports multiple safety-protection functions such as overload alert and overheating protection, designed to keep you safe.

Meet various drying needs



Alpha offers more laundry drying options with 2 clothes rods and 2 bedsheet rods. The well-distributed hanging hoops on clothes rods ensure sufficient airflow and sunlight, enabling effective laundry drying anytime.

Obstacle recovery



Once encountering any obstacle during rising or descending, the rack retract 10 cm upward automatically to keep the safety in use.

Remote control




Enjoy one click on remote control to monitor clothes drying. The DC motor lets the drying rack move quietly and fast. It takes only 20 seconds for the rack to rise or descend. Without too much waiting, you can enjoy a more efficient life.

Smart heat drying



With two cross flow fans and a temperature-controlled heater, the drying rack can keep venting 40-50 °C warm air, creating a dry space within the rack area. So even during plum rain season, your clothes can dry fast.

Stable structure

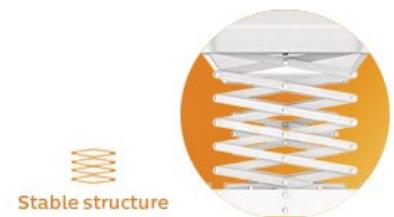

Triangle structure of the scissor frames gives the drying rack great stability and balance. Coupled with the strengthened force-bearing points at the top side of the scissor frames, Alpha is made highly resistant to deformation and strong wind.

Specifications

Color scheme

- White

Dimensions of product (LxWxH)

- 2,160x512x200 mm

Net weight of product

- 12.5 kg

Drop distance

- 0-1,100 mm

Maximum load

- 35 kg

Power supply

- Input voltage: 220 V
- Rated power of product: 772 W
- Rated power of heat drying: 350 W*2
- Rated power of air drying: 12 W*2
- Rated power of LED lamp: 12 W



Issue date 2022-11-16

Version: 1.0.1

12 NC: 8670 001 88595
EAN: 69 73746 14108 2

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

** The disinfection rate of the UVC lamps is tested under standardized laboratory conditions (Minister of Health 2020 edition-2.1.5.4) and can be up to 99.99%. Actual disinfection rate may vary in actual use environment.