



Philips 7000 series  
Smart lever door lock

### Dual verification

Auto locking  
Wi-Fi connection

DDL173LCGCW

## Stable and lasting performance

Even better with one grip to unlock

Integrated the lever with a fingerprint sensor, Philips 7300-5HB-HK allows you to have one-grip unlocking. Besides, the upgraded Wi-Fi module brings you to view access logs and remotely share temporary PIN codes without space constraints.

#### Smart life lock with excellence

- One-grip opening in one go
- One step to close the door and go

#### Multiple protection in one for overall home safety

- Technical lock-picking time exceeds 270 mins
- Protect home security at all time
- Instant alert upon inside unlocking

#### Easy life doesn't stop here

- Security protection is always online
- Protect real password from being peeping
- One button to prevent safety risks while away

# PHILIPS

Smart lever door lock  
Dual verification Auto locking, Wi-Fi connection

# Highlights

## Intuitive fingerprinting




The fingerprint sensor is integrated at the axis of the handle so that when you hold the handle, your fingertip will naturally fall on the semiconductor fingerprint reader. Upon successful authentication, you can press down the handle and unlock the door swiftly, bringing you a fast and convenient door opening experience.

## Auto locking



Philips 7300-5HB-HK adopts an automatic mortise. Without the need for any extra action, the deadbolt will spontaneously pop out after shutting down the door. If the door is not locked properly, it will trigger an alert to remind you of the door lock status.

## C-grade lock cylinder

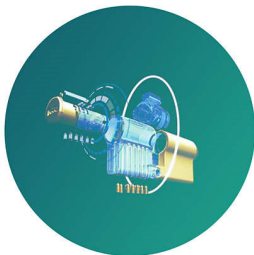

The lock cylinder is the key component that controls the opening of the lock. The Philips 7300-5HB-HK employs multiple anti-theft technologies with a unique pin tumbler and vane structure, makes the technical lock-

picking time exceeds 270 min\*. Plus the concealed lock cylinder design, the lock's security level has been further enhanced.

## Multiple alerting



It is featured alerting function that includes the anti-dismantling alert, low battery level alert, abnormal bolt alert, and outside forced lock alert, etc., which enhances the family security level and guards you and your family at all times.

## Outside forced lock



When going out, long-press the outside forced lock key for 2 seconds to enable outside forced lock mode. Under this mode, an alert will trigger if the door is unlocked from inside, effectively reminding the potential safety risks and upgrading the level of home security.

## Dual verification



With any two verification methods among fingerprint, PIN code, and key tag under dual verification mode, you can unlock the door,

DDL173LCGCW/30

which provides double protection for home security.

## 32-digit hidden PIN code



Featured with the 32-digit hidden PIN code technology, Philips 7300-5HB-HK allows you to enter any random number combination for verification and unlock the door as long as there is a consecutive input of the valid password. This feature can effectively prevent peeping and safeguard the real password.

## Safehandle



Once the safe handle function is enabled, the indoor handle would lock up, allowing nobody to open the door by pressing down the inside handle. This feature can effectively prevent the suspicious unlocking from the inside through the door viewer, or children and pets from unlocking the door accidentally by pressing down the indoor handle, thus reducing security risks for the family.

# Specifications

## Design & Appearance

- Color: Red copper
- Handle: Lever handle
- Fingerprint Sensor: Semiconductor

## Access Solution

- Fingerprint
- Password/PIN Code
- Card/Key Tag
- Mechanical Key

## Lock Capacity

- Master PIN Code: 1
- One-time PIN Code: 1

## Power Specification

- Time of Use: 10 months\*
- Maximum Batteries Capacity: 4 batteries
- Emergency Power Supply: 5V power bank

## Easy Operation

- Indicator: Door locks status prompt, Low battery prompt, Mute status prompt, Outside forced lock prompt, System locking prompt
- Voice Guide: Human voice guide

## Smart Lock Functions

- Mortise: C grade lock cylinder

## Installation

- Door Thickness: 38-60 mm, 60-90 mm, 90-120 mm, Other range\*
- Door Opening Direction: Left inward opening, Left outward opening, Right inward opening, Right outward opening
- Door Type: Antitheft door, Copper door, Wooden door



Issue date 2024-04-13

Version: 2.0.1

EAN: 69 71318 50365 8

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* May be less depending on the actual usage.

\* 270 mins: Data source from lock cylinder test report.

\* The effect of the digital keypad showed in the photos of this product may be inconsistent with the actual display effect. Please be subject to the digital keypad displaying status under the actual usage scenarios.

\* Other door thickness range: If the thickness of the door is out of the mentioned range, please contact our local dealers or consumer care center.