

# PHILIPS

Smart lever door  
lock


7000 series

C-grade lock cylinder

Dual verification

Auto locking

Wi-Fi connection

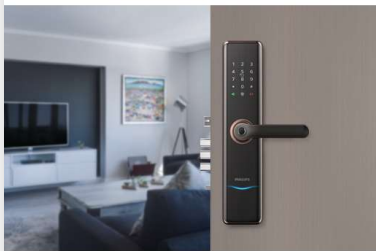

DDL173LCFCW



## Stable and lasting performance

Even better with one grip to unlock

Integrated the lever with a fingerprint sensor, Philips 7300-5HW allows you to have one-grip unlocking. Besides, the upgraded Wi-Fi module brings you to view access logs and remotely share temporary PIN codes without space constraints.

### Smart life "locked" with excellence

- One-grip opening in one go
- One step to close the door and go
- Easy access via the built-in Wi-Fi module

### Multiple protection in one for overall home safety

- Technical lock-picking time exceeds 270 mins
- Protect home security at all time
- Instant alert upon inside unlocking

### Easy life doesn't stop here

- Security protection is always online
- Protect real password from being peeping
- One button to prevent safety risks while away

# Highlights

## Intuitive fingerprinting



The fingerprint sensor is integrated at the axis of the handle so that when you hold the handle, your fingertip will naturally fall on the semiconductor fingerprint reader. Upon successful authentication, you can press down the handle and unlock the door swiftly, bringing you a fast and convenient door opening experience.

## Auto locking



Philips 7300-5HW adopts an automatic mortise. Without the need for any extra action, the deadbolt will spontaneously pop out after shutting down the door. If the door is not locked properly, it will trigger an alert to remind you of the door lock status.


## Wi-Fi connection



A built-in Wi-Fi module allows easy connectivity to the Internet. After binding with the Philips EasyKey app, you can check out the smart lock access logs and PIN code information anywhere. Remote distribution of

temporary PIN codes with a 30-minute validity can also save more time for the visitors. No more worry about keeping your relatives and friends waiting at the door even if you are not at home.

## C-grade lock cylinder

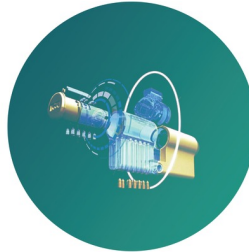


The lock cylinder is the key component that controls the opening of the lock. The Philips 7300-5HW employs multiple anti-theft technologies with a unique pin tumbler and vane structure, makes the technical lock-picking time exceeds 270 min\*. Plus the concealed lock cylinder design, the lock's security level has been further enhanced.

## Multiple alerting



It is featured alerting function that includes the anti-dismantling alert, low battery level alert, abnormal bolt alert, and outside forced lock alert, etc., which enhances the family security level and guards you and your family at all times.

## Outside forced lock

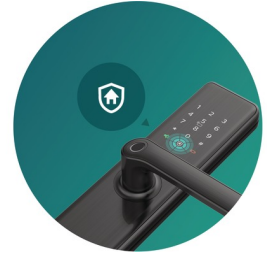

When going out, long-press the outside forced lock key for 2 seconds to enable outside forced lock mode. Under this mode, an alert will trigger if the door is unlocked from inside, effectively reminding the potential safety risks and upgrading the level of home security.

## Dual verification



With any two verification methods among fingerprint, PIN code, and key tag under dual verification mode, you can unlock the door, which provides double protection for home security.

## 32-digit hidden PIN code



Featured with the 32-digit hidden PIN code technology, Philips 7300-5HW allows you to enter any random number combination for verification and unlock the door as long as there is a consecutive input of the valid password. This feature can effectively prevent peeping and safeguard the real password.

# Specifications

## Access Solution

Card/Key Tag  
Fingerprint  
Mechanical Key  
Password/PIN Code

## Design & Appearance

Color: Red copper  
Fingerprint Sensor: Semiconductor  
Handle: Lever handle  
Main Material: Zinc alloy

## Easy Operation

Indicator: Door locks status prompt, Low battery prompt, Mute status prompt, Outside forced lock prompt, System locking prompt  
Voice Guide: Human voice guide

## Installation

Door Opening Direction: Left inward opening, Left outward opening, Right inward opening, Right outward opening  
Door Thickness: 38-60 mm, 60-90 mm, 90-120 mm, Other range\*  
Door Type: Antitheft door, Copper door, Wooden door

## Lock Capacity

Card/Key Tag: Up to 100  
Master PIN Code: 1  
One-time PIN Code: 1  
User PIN Code: Up to 20

## Mode

Operation Mode: Auto mode, Manual mode

## Power Specification

Battery Type: Alkaline Batteries  
Maximum Batteries Capacity: 8 batteries  
Power Supply: 4 AA batteries  
Time of Use: 10 months\*  
Working Voltage: 4.5-6V

## Smart Lock Functions

Alarm Function: Abnormal bolt alarm, Outside forced lock alarm  
Mortise: C grade lock cylinder  
Safety Function: Dual verification, Fake PIN code, Outside forced lock function, Safe handle function



\* May be less depending on the actual usage.  
\* 270 mins: Data source from lock cylinder test report.  
\* The effect of the digital keypad showed in the photos of this product may be inconsistent with the actual display effect. Please be subject to the digital keypad displaying status under the actual usage scenarios.  
\* Other door thickness range: If the thickness of the door is out of the mentioned range, please contact our local dealers or consumer care center.