



Philips
LCD TV

117cm/46" class

Full HD 1080p
digital TV



46PFL3505D

Clearly the smart choice

with an Eco TV™

Whether movies, sports or games - experience great pictures and sound with this HD ready TV. With Philips quality and its sophisticated design this TV is the right choice for any room of your house.

Hear crisp and clear sound

- Incredible Surround for enhanced audio enjoyment
- Dolby Digital output for connection to a home theatre system

See vivid and razor sharp pictures

- Pixel Plus 3 HD for most sharp and clear pictures
- Full HD LCD display, with a 1920x1080p resolution

Easy to connect and enjoy

- Enjoy photo and music playback via USB
- 3 HDMI inputs with Easylink for a full HD connection
- PC input (HDMI)

PHILIPS

LCD TV
117cm/46" class Full HD 1080p, digital TV

46PFL3505D/F7

Highlights

Pixel Plus 3 HD

Pixel Plus 3 HD offers the unique combination of ultimate sharpness, natural detail, vivid colors and smooth natural motion on all qualities of HD, standard TV signals and multimedia content, for high definition displays. Each pixel of the incoming picture is enhanced to better match the surrounding pixels, resulting in a more natural picture. Artifacts and noise in all sources from multimedia to standard TV and also in highly compressed HD are detected and reduced ensuring that the picture is clean and razor sharp.

Full HD LCD display 1920x1080p



The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future proof as it supports 1080p signals from all sources, including the most recent like Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It

produces brilliant flicker-free progressive scan pictures with superb brightness and colors.

Incredible Surround



Incredible Surround is an audio technology from Philips that dramatically magnifies the sound field to immerse you in the audio. Using state-of-the-art electronic phase shifting, Incredible Surround mixes sounds from left and right in such a way that it expands the virtual distance between the two speakers. This wider spread greatly enhances the stereo effect and creates a more natural sound dimension. Incredible Surround allows you to experience total surround with greater depth and width of sound, without the use of additional speakers.

Dolby Digital output


Dolby Digital output for connection to a home theatre system

3 HDMI inputs with EasyLink

EasyLink uses the HDMI CEC industry standard protocol to share functionality between

connected devices and the TV. With Easylink only one remote control is needed to operate main functionalities on your TV and connected devices. HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI uses HDCP copy protection. With 2 HDMI inputs on the back and 1 HDMI on the side of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and Game Console or Digital Camcorder.

USB for photo & music playback

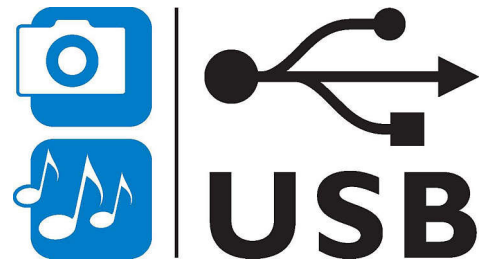

The USB connector allows access to jpeg photos and mp3 music of most USB-sticks (USB memory-class device). Plug the USB into the slot at the side of the TV and access the multimedia content using the easy on screen content browser. You can now view and share your photos and music.

PC input (HDMI)

With PC input you can use your TV as a PC monitor via a HDMI-DVI cable/converter.



Specifications

Picture/Display

- Aspect ratio: Widescreen
- Contrast ratio (typical): 5000:1
- Response time (typical): 8 ms
- Diagonal screen size (inch): 46 inch
- Diagonal screen size (metric): 117 cm
- Visible diagonal screen size: 116.8 cm
- Panel resolution: 1920x1080p
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, Digital Noise Reduction, Dynamic contrast enhancement, Progressive scan, Pixel Plus 3 HD
- Brightness: 430 cd/m²
- Visible screen diagonal (inch): 46.0 inch
- Viewing angle: 178° (H) / 178° (V)

Supported Display Resolution

- Computer formats: 640 x 480, 60Hz, 800 x 600, 60Hz, 1024 x 768, 60Hz, 1280 x 768, 60Hz, 1280 x 1024, 60Hz, 1360 x 768, 60Hz, 1440 x 900, 60 Hz, 1400 x 1050, 60Hz, 1680 x 1050, 60Hz, 1920 x 1080, 60Hz
- Video formats: 480i, 60Hz, 480p, 60Hz, 720p, 60Hz, 1080i, 60Hz, 1080p, 60Hz

Sound

- Equalizer: 5-bands
- Sound System: Dolby Digital (AC-3), Stereo, SAP
- Sound Enhancement: Incredible Surround

Loudspeakers

- Built-in speakers: 2

Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer
- Ease of Use: Auto Volume Leveller (AVL), Channel list, Settings assistant Wizard, Side Control
- Remote Control: TV
- Screen Format Adjustments: 16:9, 4:3, Movie Expand, Normal, Zoom, Full, Wide, unscaled (dot by dot)
- Ease of Installation: Autostore

Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: MP3, JPEG Still pictures

Tuner/Reception/Transmission

- Aerial Input: 75 ohm F-type
- TV system: ATSC, NTSC
- Video Playback: NTSC
- Tuner bands: UHF, VHF

Connectivity


- Other connections: Analog audio Left/Right out
- EasyLink (HDMI-CEC): One touch play, Power status, System info (menu language), System audio control, System standby
- Audio Output - Digital: Coaxial (cinch)
- AV 1: Audio L/R in, YPbPr
- AV 2: Audio L/R in, CVBS in, S-Video
- AV 3: Audio L/R in, CVBS in, S-Video in
- USB: USB
- HDMI 1: Analog audio L/R in, HDMI
- HDMI 2: HDMI
- HDMI 3: HDMI

Power

- Mains power: 120V/60Hz
- Power consumption: 228 W
- Standby power consumption: < 0.1W
- Ambient temperature: 5°C to 35°C (41°F to 95°F)

Dimensions

- Product weight (lb): 47.66 lb
- Box height (inch): 31.69 inch
- Box width (inch): 55.91 inch
- Box depth (inch): 10.63 inch
- Wall mount compatible: 400 x 400 mm
- Set Width (inch): 44.34 inch
- Set Height (inch): 26.80 inch
- Set Depth (inch): 4.31 inch
- Set width (with stand) (inch): 44.34 inch
- Set depth (with stand) (inch): 11.22 inch
- Set height (with stand) (inch): 29.33 inch
- Product weight (+stand) (lb): 55.12 lb
- Weight incl. Packaging (lb): 65.04

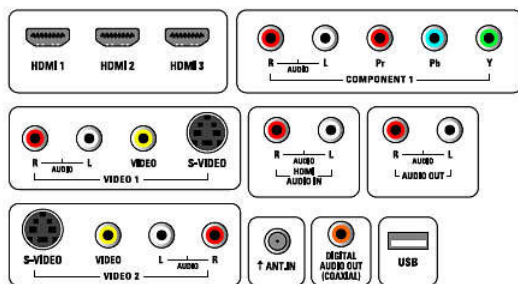

Issue date 2024-08-16

Version: 3.3.2

UPC: 6 09585 20325 9

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com