




Philips
Smart safe box

Fingerprint unlocking

Free handle
Dual authentication
Abnormal alert

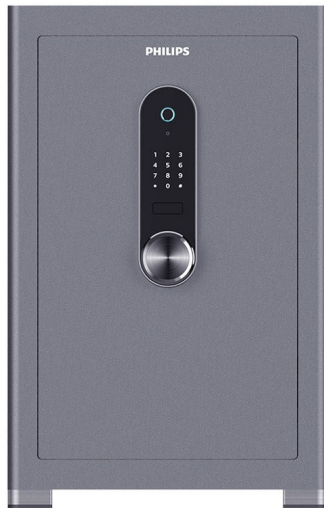

SBX601C6L0

Secure your valuables

With multi-layered protections

Philips SBX601 supports fingerprints, PIN codes and mechanical keys, making unlocking impressively convenient and efficient. With 'Dual Authentication Mode' and its one-piece cabinet, it offers a highly secure space for your valuables.

Smarter, more secure

- Allow fast and convenient unlocking
- Take security one step further

High quality ensures reliability

- Leave no hidden risk and give full security
- Prevent violent unlocking

Caring details to protect your private space

- Offer bigger storage space
- Give full-time protection

PHILIPS

Highlights

Abnormal alert



SBX601 supports multiple alerts, including vibration alert, false alert, and low-voltage alert. In case of anomalies, the safe will alert you with high-pitch sound alarm, giving your valuables all-day protection.

Dual authentication



Under the "Dual Authentication Mode", a combination of two sets of codes, either fingerprints or PIN codes, are needed to unlock the safe, an upgraded protection measure to better protect your valuables.

Free handle



After being locked, the handle of the safe separates from gearing and enters into free state. In this way, it eliminates the threat of forced unlocking by breaking safe handle.

Multiple unlocking methods



Mechanical key is not the only option to open your safe. Equipped with a semi-conductor sensor and touch keypad, SBX601 also supports unlocking with fingerprints and PIN codes. Wake up the system with a light touch and have quick identification, safe unlocking has never been so easy and efficient. We also keep unlocking with mechanical key for your use in emergence.

One-piece cabinet



The one-piece cabinet makes SDR601 solid and secure. The built-in touch keypad gives it a simplistic look and offers better protection to the electronic circuit board. All makes this safe box highly functional, stylish, secure and trustworthy.

Separate storage sections



With a proper interior layout and the sliding jewelry drawers, the safe is perfectly fit for small valuables like jewelry. The interior is stylish and of high quality, giving the safe soft touch and bringing pleasant storing experience.

Specifications

Color scheme

- Elegant blue

Dimensions of product (LxWxH)

- 650x430x390 mm

Net weight of product

- 87 kg

Power supply

- Working voltage: 4.5 ~ 6 V
- Battery for backup system: 4 pieces AA battery
- Battery life*: 6-12 months

Unlocking methods

- Fingerprint: maximum 30 sets
- PIN code: maximum 10 sets
- Mechanical key

Indicator lights

- Blue: normal working
- Green: recognition succeeded
- Red: recognition failed
- Red light flashing: low voltage, abnormal alert



Issue date 2022-09-28

Version: 1.0.2

12 NC: 8670 001 80996
EAN: 69 73746 14055 9

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* The battery life (stand-by time) depends on the actual usage.