

Philips
Blu-ray Disc player

BDP5320



Play your Blu-ray Discs

with high definition picture and superior sound

Enjoy the thrill of full high definition pictures delivered by the BDP5320. Indulge in every detail, silky smooth action and vivid colors with Deep Color. Current DVD favorites can also be enjoyed, with upconversion to 1080p via HDMI.

See more

- 1080p at 24 fps for cinema-like images
- Blu-ray Disc playback for sharp images in full HD 1080p
- Full HD 1080p for razor sharp images
- Netflix-Streaming TV Episodes and Movies over the Internet
- Now play BLOCKBUSTER movies direct on your TV
- CinemaNow, over 1500 titles at your fingertips

Hear more

- Dolby TrueHD for high fidelity 7.1 surround sound


Engage more

- Ethernet port for convenient software upgrades
- EasyLink to control all HDMI CEC devices via a single remote
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- Online content directly on your TV whenever you like

PHILIPS

Highlights

Blu-ray Disc playback

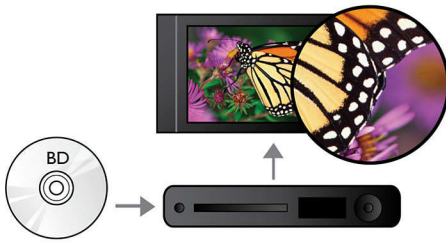

Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. Scenes come to life as details leap at you, movements smoothen and images turn crystal clear. Blu-ray also delivers uncompressed surround sound - so your audio experience becomes unbelievably real. The high storage capacity of Blu-ray Discs also allow a host of interactive possibilities to be built in. Seamless navigation during playback and other exciting features like pop-up menus bring a whole new dimension to home entertainment.

Full HD 1080p



Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. This can only mean you get the best possible TV picture quality available today - so prepare to feast your eyes.

1080p at 24 fps



Bring true cinema experience into your living room with 24 frames-per-second video. Original films are all recorded at this frame rate, providing an ambience and image texture that is so unique. Philips Blu-ray Disc players are equipped to bring you 24fps directly from Blu-ray Discs - thus giving you sensational cinematic high definition images that will astound you.

EasyLink




EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

BD-Live (Profile 2.0)



BD-Live opens up your world of high definition even further. Receive up-to-date content just by connecting your Blu-ray Disc player to the internet. Exciting new things like exclusive downloadable content, live events, live chats, gaming and on-line shopping all await you. Ride the high definition wave with Blu-ray Disc playback and BD-Live

Dolby TrueHD

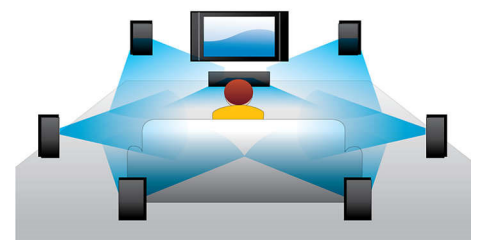

Dolby TrueHD delivers 7.1 channels of the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD completes your high definition entertainment experience.



Specifications

Picture/Display

- Aspect ratio: 16:9, 4:3
- Picture enhancement: Progressive scan, Video upscaling, High Def (720p, 1080i, 1080p), Noise Reduction
- D/A converter: 12 bit / 150MHz

Sound

- Sound System: DTS, Dolby Digital Plus, Dolby True HD
- D/A converter: 24 bit, 192 kHz
- Frequency response: (20kHz) ± 0.5 dB (Max./Min. 2ch, DVD) Hz
- Signal to noise ratio: 120 dB
- Dynamic Range (1kHz): 100 dB

Convenience

- Child Protection: Parental Control
- OSD Languages: English, French, Spanish

Multimedia Applications

- Playback Formats: JPEG Still pictures, MP3

Connectivity

- Rear Connections: Analog audio Left/Right out, Analog audio Multi-channel out, Component Video output, Composite video (CVBS) output, Digital coaxial out, HDMI output, Ethernet

Power

- Power consumption: 29 W
- Standby power consumption: 0.8W
- Power supply: 120V, 60Hz

Dimensions

- Set Height: 50 mm
- Set Width: 435 mm
- Set Depth: 215 mm
- Packaging Depth: 343 mm

- Weight incl. Packaging: 3.4 kg
- Packaging Height: 153 mm
- Packaging Width: 543 mm
- Set weight: 2.3 kg

Accessories

- Included accessories: Audio Cable, Quick start guide, IFU / User Manual, Product Registration Card, Remote Control, 2 x AAA Batteries, USB Wireless LAN adaptor
- User Manual: English, French, Spanish

Video Playback

- Playback Media: CD-R/CD-RW, DVD-Video, DVD-R/-RW, CD, DivX, DVD, BD Video, BD-R/RE 2.0, BD-ROM
- Compression formats: MPEG2, H.264, VC-1, DivX 6.0
- Video disc playback system: NTSC
- Video Enhancement: Progressive Scan, Video Upscaling
- Disc Playback Modes: Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Skip, Search forward/reverse, Slow Forward, Standard Play
- DVD Region: 1
- Picture Quality Enhancements: Video upscaling

Audio Playback

- Compression format: MP3, PCM, Dolby Digital, DTS
- Playback Media: MP3-CD, CD-R/RW, CD, MP3-DVD
- Multichannel decoding: Dolby Digital

Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: CD-R/RW, DVD-R/-RW
- Picture Enhancement: Slideshow, Rotate, Zoom, High Definition Resolution



Issue date 2024-08-10

Version: 7.7.3

UPC: 6 09585 18632 3

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com