



Philips  
4000 series LED-LCD TV

• 39" class/po



39PFL4408

## Beauty meets simplicity

LED Brilliance with Full HD picture performance

Get sleek styling and crystal clear Full 1080p HD from this LED television. With the ultimate in sharpness, detail and vivid colors, your favorite shows will look better in Philips LED brilliance.

### Enlarge your viewing experience

- Brilliant LED images with low power consumption
- Full 1080p HD display, with a 1920x1080p resolution
- Digital Crystal Clear for detail depth and clarity
- SRS TruSurround XT sound performance for unmatched audio

### Complete digital connectivity made simple

- Seamless connectivity with 3 HDMI inputs
- PC-input allows you to use your TV as a PC monitor

### Simple to set up, easy to use

- Auto picture mode for an optimized viewing experience



# PHILIPS

# Highlights

## LED with low power consumption




LED lighting technology is the most advanced available. In this TV it combines an eye-catching minimalistic design with stunning image quality, as well as being the lowest power consumption in its category. Another environmental benefit is that LED lighting technology does not contain hazardous materials. With an LED backlight you can enjoy low power consumption, high brightness, incredible contrast and sharpness and vibrant colors.

## Full HD 1080p display

Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. This can only mean you get the best possible TV picture quality available today - so prepare to feast your eyes.

## Digital Crystal Clear

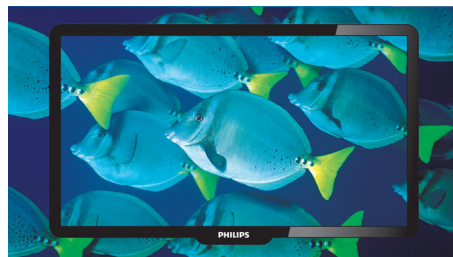

Digital Crystal Clear is a package of picture innovations that digitally adjusts and optimizes

picture quality to optimal contrast, color and sharpness levels. It's like watching vivid cinema-like images.

## SRS TruSurround XT

SRS TruSurround XT® creates an immersive, feature-rich surround sound experience from two speakers, complete with rich bass, high frequency detail and clear dialog.

## PC input (VGA)

With PC input you can connect your TV to a computer by a VGA cable and use the TV as a PC monitor.



# Specifications

## Picture/Display

- Panel resolution: 1920x1080p
- Brightness: 270 cd/m<sup>2</sup>
- Aspect ratio: Widescreen
- Response time (typical): 8 ms
- Contrast ratio (typical): 4000:1
- Diagonal screen size: 39 inch / 99.06 cm
- Visible screen diagonal (inch): 38.6 inch
- Viewing angle: 176° (H) / 176° (V)
- Picture enhancement: Digital Crystal Clear, 3D Comfilter, Digital Noise Reduction, Progressive scan, Dynamic contrast
- Display screen type: LED Full HD Display

## Supported Display Resolution

### Computer formats

Resolution	Refresh rate
640 x 480	60, 72, 75Hz
720 x 400	70Hz
800 x 600	60, 72, 75Hz
848 x 480	60Hz
1024 x 768	60, 70, 75Hz
1280 x 768	60Hz
1280 x 1024	60Hz
1360 x 768	60Hz
1400 x 1050	60Hz
1440 x 900	60 Hz
1680 x 1050	60Hz
1920 x 1080	60Hz

### Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	60Hz
576p	60Hz
720p	60Hz
1080i	60Hz
1080p	24,30,60Hz

## Sound

- Equalizer: Bass / Treble
- Output power (RMS): 2 x 8W
- Sound System: Stereo, SAP
- Sound Enhancement: SRS TruSurround XT

## Loudspeakers

- Built-in speakers: 2

## Convenience

- Clock: Sleep Timer
- Ease of Installation: Autostore
- Ease of Use: Auto Volume Leveller (AVL), AutoPicture, AutoSound
- Remote Control: TV
- Screen Format Adjustments: 16:9, 4:3, Zoom 1, Zoom 2, Just Scan, Dot by Dot
- Multimedia: auto slideshow

## Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: JPEG Still pictures

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm F-type
- TV system: NTSC
- Video Playback: NTSC, PAL, SECAM
- Tuner bands: UHF, VHF

## Connectivity


- AV 1: CVBS in, Shared audio L/R in
- AV 2: YPbPr, Shared audio L/R in
- HDMI 1: HDMI, Shared PC audio in
- HDMI 2: HDMI, Shared PC audio in
- HDMI 3: HDMI, Shared PC audio in
- Audio Output - Digital: Coaxial (cinch)
- Other connections: Headphone out, PC audio in, PC-In VGA
- USB: USB

## Power

- Mains power: 120V,220-240V, 50/60Hz
- Power consumption: 56 W
- Standby power consumption: < 0.5W
- Ambient temperature: 5°C to 40°C (41°F to 104°F)

## Dimensions

- Set dimensions in inch (W x H x D): 35.91 x 21.34 x 2.36 inch
- Set dimensions with stand in inch (W x H x D): 35.91 x 23.54 x 8.66 inch
- Product weight (lb): 18.96 lb
- Product weight (+stand) (lb): 22.05 lb
- Box dimensions in inch (W x H x D): 42.32 x 25.00 x 4.69 inch
- Weight incl. Packaging (lb): 27.12
- VESA wall mount compatible: 300 x 300 mm

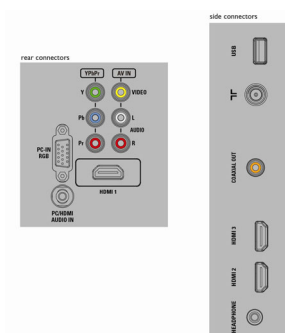

Issue date 2013-08-28

Version: 3.0.4

12 NC: 8670 001 03308  
UPC: 6 09585 23398 0

© 2013 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)