

Philips
Blu-ray Disc/ DVD player

BD/DVD/CD playback

Netflix, YouTube & VUDU
Built-in WiFi
DVD video upscaling to HD

BDP2501



Enjoy wireless online entertainment

with Netflix, YouTube and Vudu

With BDP2501, movies never looked better. Incredibly sharp images in full HD 1080p are delivered from Blu-ray discs, and DVD upscaling offers near-HD video quality. Enjoy the best of internet on your TV with Netflix, YouTube and Vudu.

See more

- DVD video upscaling to 1080p via HDMI for near-HD images
- Blu-ray Disc playback for sharp images in full HD 1080p

Hear more

- DTS2.0 Digital Out
- Dolby Audio for the ultimate movie experience

Enhanced Accessibility for ease of use

- Enhanced Accessibility enabled product


Engage more

- Direct remote access to Netflix and Vudu movie services
- Built-in WiFi-n for faster, wider wireless performance
- EasyLink to control all HDMI CEC devices via a single remote
- Netflix subscription based streaming of TV shows and Movies
- BD-Live* (Profile 2.0) to enjoy online Blu-ray bonus content

PHILIPS

Highlights

Blu-ray Disc playback

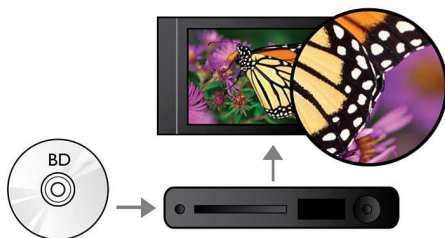

Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. Scenes come to life as details leap at you, movements smoothen and images turn crystal clear. Blu-ray also delivers uncompressed surround sound - so your audio experience becomes unbelievably real. The high storage capacity of Blu-ray Discs also allow a host of interactive possibilities to be built in. Seamless navigation during playback and other exciting features like pop-up menus bring a whole new dimension to home entertainment.

DVD video upscaling



HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

DTS2.0 Digital Out

DTS2.0 Digital Out

Direct remote Netflix and Vudu

To speed up the process, and make it more user-friendly, there are Netflix and VUDU shortcut buttons on remote control that allow you to do the basic commands necessary both for watching your video and for controlling the general interface.

Dolby Audio

Dolby Audio for the ultimate movie experience

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Video streaming

Instantly watch TV episodes and movies as often as you want on your TV. All you need is access to a wireless network. Choose from Netflix subscription based membership packages, or VUDU pay as you go on-demand services. Enjoy the latest YouTube videos all from the comfort of your home on your TV.

BD-Live (Profile 2.0)



BD-Live opens up your world of high definition even further. Receive up-to-date content just by connecting your Blu-ray Disc player to the internet. Exciting new things like exclusive downloadable content, live events, live chats, gaming and on-line shopping all await you. Ride the high definition wave with Blu-ray Disc playback and BD-Live.

WiFi-n



WiFi-n, also known as IEEE 802.11n, is the new wireless network standard. It includes many new options to improve the quality of the wireless link, offering faster speed and wider range compared to previous WiFi standards. WiFi-n also features backward compatibility, which makes it possible for this player to transmit to and receive from routers that operate on older WiFi standards.

Enhanced Accessibility

Enhanced Accessibility enabled products provide a more user friendly experience for visually and hearing impaired people to enjoy Philips televisions and home video players. With features such as a voice guide menu, easy to read and navigate user interface, raised guide dots on key remote control buttons and large format support information so visually impaired people can reach customer care; Philips cares about accessibility and wants everyone to enjoy television.



Specifications

Picture/Display

- Aspect ratio: 16:9, 4:3
- Picture enhancement: Video upscaling, Noise Reduction

Sound

- Sound System: Dolby Audio, DTS 2.0 + Digital out

Convenience

- Child Protection: Parental Control
- On-Screen Display languages: English, French, Spanish

Multimedia Applications

- Playback Formats: JPEG Still pictures, PNG still pictures, WAV

Connectivity

- Wireless connection: Wi-Fi (Built-in)
- Front Connections: USB
- Rear Connections: HDMI output

Power

- Power supply: 120V, 60Hz

Dimensions

- Set Height: 41 mm
- Set Width: 280 mm
- Set Depth: 198.5 mm
- Product weight (lb): 2.2 lb
- Packaging (W x H x D): 13.3 x 2.8 x 10.6 inch
- Packaging Depth: 269 mm
- Packaging Height: 70 mm
- Packaging Width: 339 mm
- Set Width (inch): 11.1 inch
- Gross Weight: 2.7 lb

- Set Height (inch): 1.6 inch
- Gross weight: 1.2 kg
- Set Depth (inch): 7.8 inch
- Product weight: 1.0 kg

Accessories

- Included accessories: Quick start guide, Remote Control
- User Manual: English, French, Spanish

Video Playback


- Playback Media: BD, DVD, CD, USB
- Compression formats: H.264, MPEG2, AVCHD
- Video disc playback system: NTSC
- Disc Playback Modes: Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play
- DVD Region: 1
- Picture Quality Enhancements: Video upscaling
- BD Region: A

Audio Playback

- Compression format: Dolby Digital, DTS, PCM, MP3, AAC, FLAC, WAV
- Playback Media: BD, DVD, DVD-R/-RW, CD, CD-R/RW, USB
- Multichannel decoding: Dolby Digital

Still Picture Playback

- Picture Compression Format: JPEG, PNG
- Playback Media: BD, DVD, DVD-R/-RW, DVD+R/-RW, CD, CD-R/RW, USB
- Picture Enhancement: High Definition Resolution, Rotate, Slideshow

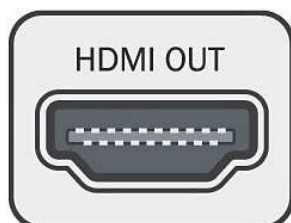

Issue date 2023-12-11

Version: 9.0.1

UPC: 6 09585 25000 0

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* P&F USA Inc. does not warrant access to the Portal or to any of the services, content, software and advertising. P&F USA Inc. may, in its sole discretion, add or remove access to any specific services, content, software and advertising at any time.

* Although P&F USA Inc. will strive to provide a good selection of services, content or software, P&F USA Inc. does not warrant continued access to any specific services, and content or software.