

Philips  
DVD player

**1080p upscaling**  
CD/DVD  
Dolby Audio  
Enhanced Accessibility

**DVP2902**



# Enjoy your favorite DVDs

with HDMI and 1080p upscaling

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player DVP2902 delivers your movies and music entertainment experience.

#### **Bring audio to life**

- Dolby Audio for the ultimate movie experience

#### **Bring video to life**

- Progressive Scan component video for optimized image quality
- DVD video upscaling to 1080p via HDMI for near-HD images

#### **Enhanced Accessibility for ease of use**

- Enhanced Accessibility enabled product


#### **Easy to use**

- EasyLink: easy control of TV & connected device via HDMI CEC

# PHILIPS

# Highlights

## Progressive Scan

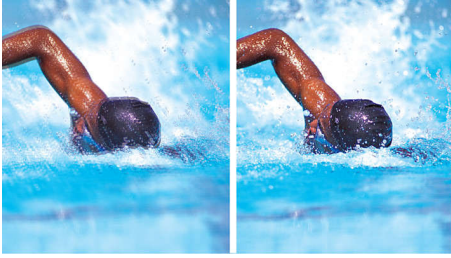

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

## DVD video upscaling



HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard

definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

## EasyLink



EasyLink uses the HDMI CEC industry standard protocol to share functionality between connected devices and the TV. With EasyLink only one remote control is needed to operate main functionalities on your TV and connected devices. EasyLink uses the standard HDMI cable to transfer system commands. It

works between all electronic devices equipped with HDMI CEC.

## Dolby Audio

Dolby Audio for the ultimate movie experience

## Enhanced Accessibility

Enhanced Accessibility enabled products provide a more user friendly experience for visually and hearing impaired people to enjoy Philips televisions and home video players. With features such as a voice guide menu, easy to read and navigate user interface, raised guide dots on key remote control buttons and large format support information so visually impaired people can reach customer care; Philips cares about accessibility and wants everyone to enjoy television.



# Specifications

## Picture/Display

- Aspect ratio: 16:9, 4:3
- Picture enhancement: Color Enhancement, Video upscaling

## Sound

- Sound System: Dolby Audio

## Convenience

- Child Protection: Parental Control
- On-Screen Display languages: English, French, Spanish

## Multimedia Applications

- Playback Formats: JPEG Still pictures

## Connectivity

- Rear Connections: HDMI output, Composite video (CVBS) output, Analog audio Left/Right out

## Power

- Power supply: 120V, 60Hz

## Dimensions

- Set Height: 50.2 mm
- Set Width: 250 mm
- Set Depth: 187.7 mm
- Product weight (lb): 1.95 lb
- Packaging (W x H x D): 12.6 x 4.1 x 10.3 inch
- Packaging Depth: 260 mm
- Packaging Height: 102 mm
- Packaging Width: 319 mm
- Set Width (inch): 9.9 inch

- Gross Weight: 2.98 lb
- Set Height (inch): 2.0 inch
- Gross weight: 1.35 kg
- Set Depth (inch): 7.4 inch
- Product weight: 0.88 kg

## Accessories

- Included accessories: Quick start guide, Remote Control, Audio/Video cable
- User Manual: English, Spanish

## Video Playback


- Playback Media: CD, CD-R/CD-RW, DVD-R/-RW, DVD-Video
- Video disc playback system: NTSC
- Video Enhancement: Progressive Scan, Video Upscaling
- Disc Playback Modes: Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play
- DVD Region: 1

## Audio Playback

- Compression format: Dolby Digital, PCM
- Playback Media: CD, DVD, CD-R/RW, DVD-R/-RW

## Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: DVD, DVD-R/-RW, DVD+R/+RW, CD-R/RW
- Picture Enhancement: Rotate, Slideshow

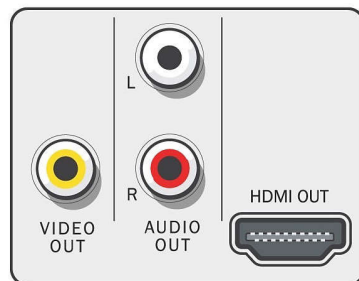

Issue date 2023-12-11

Version: 7.2.1

UPC: 6 09585 25025 3

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)