

Philips 3000 series  
DVD player

USB 2.0  
DivX Ultra



DVP2850

## Enjoy it all - from DVD or USB

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player DVP2850 delivers your movies and music entertainment experience.

### Bring audio and video to life

- 12-bit/108MHz video processing for sharp and natural images
- Screen Fit for optimal viewing every time
- Smart Picture provides personalized image settings

### Play all your movies and music

- DivX Ultra Certified for enhanced DivX video playback
- Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG
- ProReader Drive for smooth playback on virtually any disc
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW
- USB Media Link for media playback from USB flash drives

# PHILIPS

DVD player  
USB 2.0 DivX Ultra

DVP2850/F8

# Highlights

## DivX Ultra Certified




With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

## Multimedia DivX

Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG


## 12-bit/108MHz video processing

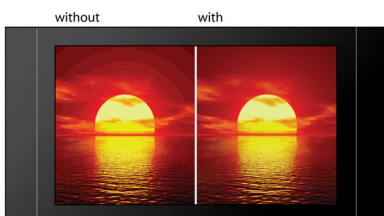

12-bit Video DAC is a superior Digital-to-Analogue-Converter that preserves every detail of the authentic picture quality. It shows

subtle shades and smoother graduation of colors, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.

## Screen Fit



Whatever you're watching, and on any TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full-screen


## ProReader Drive



ProReader Drive lets you enjoy your movies and videos worry-free. Even when old discs get smudgy or scratched, you can rest assured that they will play right through from start to end - without any sign that they have been damaged. Using state-of-the-art technology, ProReader Drive converts weak analog signals into robust digital ones, extracting information that allows


less-than-perfect discs to play smoothly through. Together with its ability to read virtually any video format, ProReader Drive gives you the unbeatable assurance that whatever you pop in will most definitely play.

## Plays it all

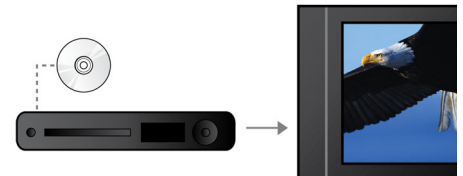

Play virtually any disc you want - whether they be CDs, (S)VCDs, DVDs, DVD+R, DVD-R, DVD+RW or DVD-RW. Experience unbeatable flexibility and the convenience of playing all your discs on one device.

## USB Media Link

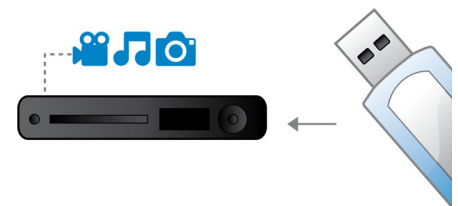

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

**DivX**  
ULTRA

**DOLBY**  
DIGITAL

MP3-CD PLAYBACK  
**MP3**

**PICTURE**  
CD

**ProReader**  
Drive

**DVD**  
VIDEO

**USB**  
HI-SPEED

# Specifications

## File Format

- Audio: mp3, wma
- Picture: JPEG
- Video: avi, divx, mp4, mpeg, mpg

## Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4
- Video disc playback system: NTSC, PAL

## Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, Kodak Picture Disc, SVCD, VCD

## Still Picture Playback

- Compression format: JPEG
- Picture Enhancement: Flip photos, Rotate, Slideshow, Slideshow with MP3 playback, Zoom

## Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, Video upsampling

## Audio Playback

- MP3 bit rates: 8 - 320 kbps
- Compression format: Dolby Digital, MP3, PCM, WMA
- WMA bit rates: 32 - 192 kbps

## Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Crosstalk (1kHz): > 100 dB
- Dynamic Range (1kHz): > 90 dB
- Distortion and Noise (1kHz): > 85 dB
- Sound System: Dolby Digital
- Signal to noise ratio: > 100 dB

## Connectivity

- Front Connections: USB 2.0
- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, Digital coaxial out

## Convenience

- Child Protection: Child Lock, Parental Control

## Power

- Power consumption: < 10 W

- Power supply: 110-127V, 60Hz
- Standby power consumption: < 0.5 W

## Accessories

- Included accessories: AAA Battery (x1), Audio/Video cable, Power cord, Remote Control, User Manual, Warranty Leaflet

## Dimensions

- Product (W x H x D): 10.7 x 1.5 x 7.9 inch
- Product (W x H x D): 270 x 37.5 x 201 mm
- Product weight: 1 kg
- Packaging (W x H x D): 316 x 77 x 280 mm
- Packaging (W x H x D): 12.44 x 3 x 11 inch
- Weight incl. Packaging: 1.38 kg

## Outer Carton

- Gross weight: 2,866 lb
- Gross weight: 1,3 kg
- Outer carton (L x W x H): 12,4 x 11,0 x 3,0 inch
- Outer carton (L x W x H): 31,6 x 28 x 7,7 cm
- Nett weight: 2,205 lb
- Nett weight: 1 kg
- Number of consumer packagings: 1
- Tare weight: 0,661 lb
- Tare weight: 0,3 kg
- UPC: 6 09585 23517 5

## Packaging dimensions

- Packaging dimensions (W x H x D): 28 x 31,6 x 7,7 cm
- Packaging dimensions (W x H x D): 11,0 x 12,4 x 3,0 inch
- Gross weight: 1,3 kg
- Gross weight: 2,866 lb
- Nett weight: 1 kg
- Nett weight: 2,205 lb
- Number of products included: 1
- Packaging type: Dummy
- Tare weight: 0,3 kg
- Tare weight: 0,661 lb
- Type of shelf placement: Dummy
- UPC: 6 09585 23517 5

## Product dimensions

- Product dimensions (W x H x D): 10,6 x 8,3 x 1,3 inch
- Product dimensions (W x H x D): 27 x 21 x 3,3 cm
- Weight: 0,89 kg
- Weight: 1,962 lb



Issue date 2017-04-04

Version: 5.0.7

12 NC: 8670 001 04101  
UPC: 6 09585 23517 5

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)