

Philips  
4K Ultra HD Blu-ray Player

4K Ultra HD Blu-ray playback

Dolby Vision HDR and HDR 10  
4K Netflix & YouTube streaming  
Built-in WiFi

BDP7502



## Enjoy 4K Blu-ray with HDR

The Philips BDP7502 4K Ultra HD Blu-ray player with HDR support is the best way to realize the full potential of your 4K TV. With incredibly sharp 4K images with vivid colors and contrast made possible thanks to High Dynamic Range support.

### See more

- Dramatic Imaging powered by Dolby Vision
- 4K Ultra HD performance for years of worry free enjoyment
- Expanding the possibilities of visual perception
- Experience television in vivid colorful glory
- Higher peak bitrate ensures more detail in fast action scene

### Hear more

- Dolby TrueHD and DTS-HD MA for HD 7.1 surround sound

### Play all your movies and music

- Easily enjoy local media from your home network
- Enjoy your favorite Netflix content in HD and 4K!
- Watch YouTube videos directly on your big screen TV\*

# PHILIPS

## 4K Ultra HD Blu-ray Player

4K Ultra HD Blu-ray playback Dolby Vision HDR and HDR 10, 4K Netflix & YouTube streaming, Built-in WiFi

BDP7502/F7

# Highlights

### 4K UltraHD Connected 4K BDP



With a 4K Ultra HD platform built from the ground up you can rest assured that your 4K Ultra HD Blu-ray player will work flawlessly with other 4K display devices for years to come. Featuring HDMI 2.0/2.0a with HDCP 2.2 and VP9 decoders, your 4K Ultra HD Blu-ray player is built to output glorious 4K HDR content to the latest 4K HDR TVs from 4K HDR Blu-ray discs, streaming media from Netflix and Youtube, and also playback local 4K content from USB and home network multimedia.


### High Dynamic Range 4K BDP



High Dynamic Range technology in Blu-ray Players when connected to a compatible 4K HDR television lets you experience more detail and captivating colors for an even more engaging television experience. More perceivable shades

of blacks, whites and all other colors. This boils down to greater perceived brightness and contrast with darker shadows creating a breathtaking image.

### Higher peak bitrate 4K BDP

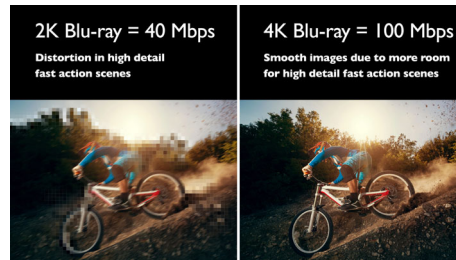

4K Blu-ray format supports more than twice the peak bitrate of 2K Blu-ray which comes in especially handy when watching action movies which have fast paced scenes with a lot of detail. The 100 Mbps peak bitrate of 4K Blu-ray provides enough headroom to store the extra data required to encode high detail fast action scenes and avoid block artifacts.

### Wide Color Gamut (BT.2020)




Wide Color Gamut televisions with BT.2020 video input support, reproduce rich colors almost twice as saturated as a standard

television, which look more vivid and life-like to enhance the TV viewing experience.

### HomeNetwork Multimedia Browser

With support for a vast number of formats such as H.264, AAC, MP3, JPEG, HEVC\*, VP9\* (\* on 4K TVs) and more, conveniently enjoying your personal media via Home Network Multimedia Browser has never been easier.

### Dolby Vision(Video)

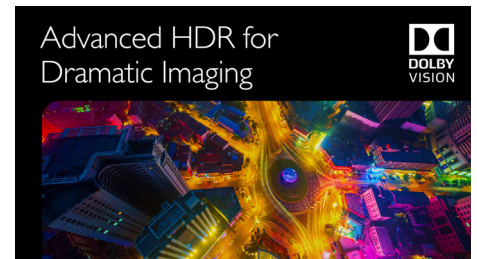

Dolby Vision is a powerful cinema technology that now transforms your TV experience. It Brings entertainment to life dramatic imaging - brightness, color contrast, detail and dimensionality. And with the advanced capabilities in Dolby Vision, you'll see there's more to the story than generic HDR can reveal.



## 4K Ultra HD Blu-ray Player

4K Ultra HD Blu-ray playback Dolby Vision HDR and HDR 10, 4K Netflix & YouTube streaming, Built-in WiFi

BDP7502/F7

# Specifications

### Accessories

- User Manual: English, French, Spanish
- Included accessories: HDMI cable, Product Registration Card, Quick start guide, Remote Control, 2 x AAA Batteries

### Audio Playback

- Compression format: Dolby Digital, DTS, PCM, MP3, AAC, FLAC, WAV, AIFF, APE, M4A, Ogg Vorbis
- Multichannel decoding: Dolby Digital
- Playback Media: BD, DVD, DVD-R/-RW, CD, CD-R/RW, USB

### Connectivity

- Rear Connections: HDMI output, HDMI out for Audio, Ethernet, Optical out
- Front Connections: USB
- Wireless connections: Wi-Fi (Built-in)

### Convenience

- On-Screen Display languages: English, French, Spanish
- Child Protection: Parental Control

### Dimensions

- Set dimensions in inch (W x H x D): 17.0 x 1.9 x 8.2 inch
- Set dimensions (W x H x D): 430 x 46 x 208 mm
- Product weight (lb): 3.75 lb
- Product weight: 1.7 kg
- Packaging (W x H x D): 20.5 x 4.5 x 11.3 inch
- Packaging dimensions (W x H x D): 520 x 112 x 286 mm
- Gross Weight: 5.3 lb
- Gross weight: 2.4 kg

### Multimedia Applications

- Playback Formats: JPEG Still pictures, PNG still

pictures, FLAC, M2TS, M4A, MOV, MP4, MPG, MTS, TS, WAV, AAC, AIF, APE, MP3, Ogg Vorbis

### Picture/Display

- Picture enhancement: Video upscaling, Noise Reduction

### Power

- Power supply: 120V, 60Hz
- Standby power consumption: 0.4W

### Still Picture Playback


- Playback Media: BD, DVD, DVD-R/-RW, DVD+R/+RW, CD, CD-R/RW, USB
- Picture Compression Format: JPEG, PNG
- Picture Enhancement: High Definition Resolution, Rotate, Slideshow

### Video Playback

- Playback Media: BD Video, BD-R/RE 2.0, DVD-Video, DVD-R/-RW, DVD+R/+RW, CD, CD-R/CD-RW, USB
- Video disc playback system: NTSC
- Compression formats: HEVC, VP9 Profile 0, H.264, MPEG4 (AVC), MPEG2, AVCHD
- Disc Playback Modes: Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play
- Picture Quality Enhancements: Video upscaling
- Video Enhancement: BT.2020 / BT.709, HDR -> SDR Convert, HDR10, Progressive Scan, Video Upscaling, Deep Color
- BD Region: A
- DVD Region.: 1

### Sound

- Sound System: DTS-HD Master Audio Essential, Dolby Audio

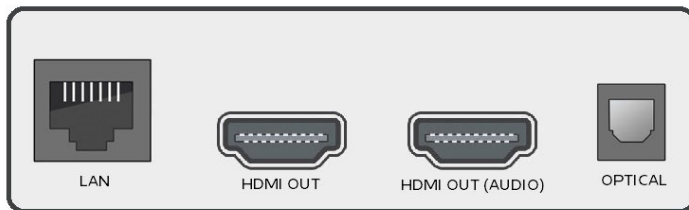

Issue date 2018-04-05

Version: 5.6.1

12 NC: 8670 001 42682  
UPC: 6 09585 25050 5

© 2018 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* P&F USA Inc. does not warrant access to the Portal or to any of the services, content, software and advertising. P&F USA Inc. may, in its sole discretion, add or remove access to any specific services, content, software and advertising at any time.

\* Although P&F USA Inc. will strive to provide a good selection of services, content or software, P&F USA Inc. does not warrant continued access to any specific services, and content or software.