




Philips
DVD player

HDMI 1080p

USB 2.0
DivX Ultra
CinemaPlus

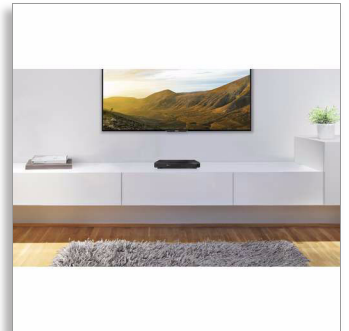

DVP2880

Get sharper, clearer pictures

with HDMI 1080p upscaling

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player DVP2880 delivers your movies and music entertainment experience.

Bring audio and video to life

- HDMI 1080p upscales to high definition for sharper pictures
- CinemaPlus for better, sharper and clearer images
- Screen Fit for optimal viewing every time

Play all your movies and music

- DivX Ultra Certified for enhanced DivX video playback
- ProReader Drive for smooth playback on virtually any disc
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW

Easy to use

- EasyLink to control all HDMI CEC devices via a single remote

PHILIPS

DVD player
HDMI 1080p USB 2.0, DivX Ultra, CinemaPlus

DVP2880/F8


Highlights

HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

CinemaPlus

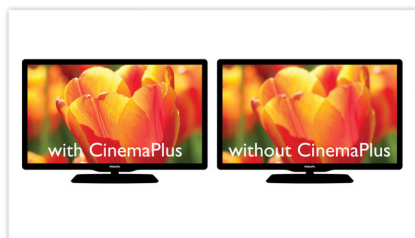

Feast your eyes on images that are razor sharp and a match for reality. An intelligent algorithm, CinemaPlus goes right down to each pixel in each frame, analyzing it before optimizing sharpness and color stability. The results are obvious - you get to see more details, pictures become crystal clear and everything looks superbly natural. Movie nights will never be the same again.

ProReader Drive




ProReader Drive lets you enjoy your movies and videos worry-free. Even when old discs get smudgy or scratched, you can rest assured that they will play right through from start to end - without any sign that they have been damaged. Using state-of-the-art technology, ProReader Drive converts weak analog signals into robust digital ones, extracting information that allows less-than-perfect discs to play smoothly through. Together with its ability to read virtually any video format, ProReader Drive gives you the unbeatable assurance that whatever you pop in will most definitely play.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Plays it all

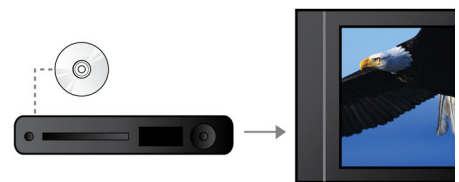

Play virtually any disc you want - whether they be CDs, (S)VCDs, DVDs, DVD+R, DVD-R, DVD+RW or DVD-RW. Experience unbeatable flexibility and the convenience of playing all your discs on one device.

DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.



HDMI™

DIVX
ULTRA

DOLBY
DIGITAL

ProReader
Drive

DVD
VIDEO

Specifications

File Format

- Picture: JPEG
- Video: avi, divx, mpeg, mpg

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4
- Video disc playback system: NTSC, PAL

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, Kodak Picture Disc, SVCD, VCD

Still Picture Playback

- Compression format: JPEG
- Picture Enhancement: Flip photos, Rotate, Slideshow, Zoom

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video Upscaling(720p, 1080i/p)

Audio Playback

- Compression format: Dolby Digital, PCM

Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Crosstalk (1kHz): > 100 dB
- Distortion and Noise (1kHz): > 85 dB
- Dynamic Range (1kHz): > 90 dB
- Sound System: Dolby Digital
- Signal to noise ratio: > 100 dB

Connectivity

- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, Digital coaxial out, HDMI output

Convenience

- Child Protection: Child Lock, Parental Control

Power

- Power supply: 110-127V, 60Hz
- Power consumption: < 11 W
- Standby power consumption: < 0.5 W

Accessories

- Included accessories: AAA Battery (x1), Remote Control, Warranty Leaflet, User Manual, Power cord

Dimensions

- Product (W x H x D): 10.7 x 1.5 x 7.9 inch
- Product (W x H x D): 270 x 37.5 x 209 mm
- Product weight: 1 kg
- Packaging (W x H x D): 12.44 x 3 x 11 inch
- Packaging (W x H x D): 316 x 77 x 280 mm
- Weight incl. Packaging: 1.38 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 28 x 31.6 x 7.7 cm
- Packaging dimensions (W x H x D): 11.0 x 12.4 x 3.0 inch
- Gross weight: 1.3 kg
- Gross weight: 2.866 lb
- Nett weight: 1 kg
- Nett weight: 2.205 lb
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.3 kg
- Tare weight: 0.661 lb
- Type of shelf placement: Laying
- UPC: 6 09585 23518 2

Outer Carton

- Gross weight: 2.866 lb
- Gross weight: 1.3 kg
- Outer carton (L x W x H): 12.4 x 11.0 x 3.0 inch
- Outer carton (L x W x H): 31.6 x 28 x 7.7 cm
- Nett weight: 2.205 lb
- Nett weight: 1 kg
- Number of consumer packagings: 1
- Tare weight: 0.661 lb
- Tare weight: 0.3 kg
- UPC: 6 09585 23518 2

Product dimensions

- Product dimensions (W x H x D): 10.6 x 8.3 x 1.3 inch
- Product dimensions (W x H x D): 27 x 21 x 3.3 cm
- Weight: 0.89 kg
- Weight: 1.962 lb



Issue date 2017-04-04

Version: 6.1.5

12 NC: 8670 001 04127
UPC: 6 09585 23518 2

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com