



Philips  
LCD TV with Digital  
Crystal Clear

**48 cm (19") class**

digital TV



**19PFL3505D**

## Clearly the smart choice

with an Eco TV™

Whether movies, sports or games - experience great pictures and sound with this HD ready TV. With Philips quality and its sophisticated design this TV is the right choice for any room of your house.

### See brilliant picture quality

- Digital Crystal Clear for detail depth and clarity
- HD LCD display, with a 1366 x 768p resolution

### Hear crisp and clear sound

- Dolby Digital output for connection to a home theatre system
- Incredible Surround for enhanced audio enjoyment

### Easy to connect and enjoy

- 2 HDMI inputs with Easylink for HD connection
- PC-input allows you to use your TV as a PC monitor

# PHILIPS


sense and simplicity

LCD TV with Digital Crystal Clear  
48 cm (19") class digital TV

19PFL3505D/F7

# Highlights

## Digital Crystal Clear

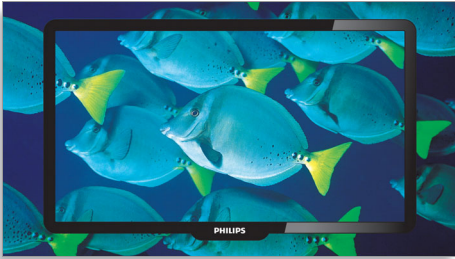

Digital Crystal Clear is a package of picture innovations that digitally adjusts and optimizes picture quality to optimal contrast, color and sharpness levels. It's like watching vivid cinema-like images.

## LCD display, 1366 x 768p

This WXGA display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1366 x 768p pixels. It produces brilliant flicker-free progressive scan pictures

with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience.

## Dolby Digital output

Dolby Digital output for connection to a home theatre system

## Incredible Surround

Incredible Surround is an audio technology from Philips that dramatically magnifies the sound field to immerse you in the audio. Using state-of-the-art electronic phase shifting, Incredible Surround mixes sounds from left and right in such a way that it expands the virtual distance between the two speakers. This wider spread greatly enhances the stereo effect and creates a more natural sound dimension. Incredible Surround allows you to experience total surround with greater depth and width of sound, without the use of additional speakers.

## 2 HDMI inputs with EasyLink

EasyLink uses the HDMI CEC industry standard protocol to share functionality between connected devices and the TV. With Easylink only one remote control is needed to operate main functionalities on your TV and connected devices. HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI uses HDCP copy protection. With 1 HDMI input on the back and 1 HDMI on the side of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and Game Console or Digital Camcorder.

## PC input (VGA)

With PC input you can connect your TV to a computer by a VGA cable and use the TV as a PC monitor.



# Specifications

## Picture/Display

- Aspect ratio: Widescreen
- Panel resolution: 1366 x 768p
- Brightness: 250 cd/m<sup>2</sup>
- Contrast ratio (typical): 800:1
- Response time (typical): 5 ms
- Diagonal screen size: 19 inch / 48.1 cm
- Visible screen diagonal (inch): 18.5 inch
- Viewing angle: 170° (H) / 160° (V)
- Picture enhancement: Digital Crystal Clear, 3D Combfilter, Digital Noise Reduction, Progressive scan

## Supported Display Resolution

### • Computer formats

Resolution	Refresh rate
640 x 480	60Hz
720 x 480	60Hz
800 x 600	60Hz
1024 x 768	60Hz
1280 x 768	60Hz
1360 x 768	60Hz

### • Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
720p	60Hz
1080i	60Hz

## Sound

- Equalizer: 5-bands
- Output power (RMS): 2 x 3W
- Sound System: Dolby Digital (AC-3), Stereo, SAP

## Loudspeakers

- Built-in speakers: 2

## Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer
- Ease of Installation: Autostore
- Ease of Use: Auto Volume Leveller (AVL), AutoPicture, AutoSound, Settings assistant Wizard, Side Control

- Remote Control: TV
- Screen Format Adjustments: 16:9, 4:3, Normal, Zoom, Full, Movie Expand, Wide, unscaled (dot by dot)

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm F-type
- TV system: ATSC, NTSC
- Video Playback: NTSC
- Tuner bands: UHF, VHF

## Connectivity

- AV 1: Audio L/R in, YPbPr
- AV 2: Audio L/R in, CVBS, S-Video
- HDMI 1: Analog audio L/R in, HDMI
- HDMI 2: HDMI
- Audio Output - Digital: Coaxial (cinch)
- Other connections: PC Audio in, PC-In VGA, Headphone out
- USB: USB
- EasyLink (HDMI-CEC): One touch play, Power status, System info (menu language), System audio control, System standby

## Power

- Mains power: 120V/60Hz
- Power consumption: 50 W
- Standby power consumption: < 0.5 W
- Ambient temperature: 5°C to 35°C (41°F to 95°F)


## Dimensions

- Set dimensions in inch (W x H x D): 19.0 x 13.2 x 3.1 inch
- Set dimensions with stand in inch (W x H x D): 19.0 x 14.7 x 7.1 inch
- Product weight (lb): 8.2
- Product weight (+stand) (lb): 9.1 lb
- Box dimensions in inch (W x H x D): 22.3 x 16.7 x 7.0 inch
- Weight incl. Packaging (lb): 11.5
- VESA wall mount compatible: 100 x 100 mm

## Accessories

- Included accessories: Table top stand, Power cord, Quick start guide, User Manual, Registration card,

Remote Control, Batteries for remote control

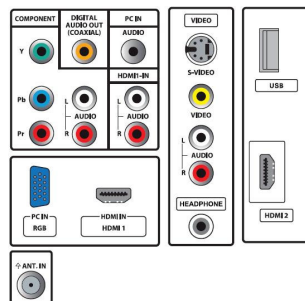

Issue date 2012-01-22

Version: 3.1.1

12 NC: 8670 000 60463  
UPC: 6 09585 18614 9

© 2012 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

