



**Philips
Blu-ray Surround Base**

2.1 CH Integrated subwoofer

Bluetooth® and NFC
HDMI ARC
Blu-ray Disc playback



HTB3525B

Everything you need to boost your TV's sound

The best TV companion

Place this Blu-ray Surround Base on top of your TV, connect one cable and start enjoying your movie and online services - Netflix and Vudu wirelessly. What's more? NFC for one touch Bluetooth® pairing allows effortless music listening.

Connect and enjoy all your entertainment

- Built-in Wi-Fi to enjoy your connected media wirelessly
- Direct remote access to Netflix and Vudu movie services
- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- HDMI for high definition movies and picture quality
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Bluetooth wireless music streaming from your music devices

Designed for simplicity

- Perfect match with your TV, just place it on top
- Touch panel for intuitive playback and volume control

Richer sound for watching TV and movies

- Dolby Digital and DTS for great surround sound
- Integrated subwoofer for powerful bass
- Virtual Surround Sound for a realistic movie experience

PHILIPS

Blu-ray Surround Base

2.1 CH Integrated subwoofer Bluetooth® and NFC, HDMI ARC, Blu-ray Disc playback

Highlights


Direct remote Netflix and Vudu

To speed up the process, and make it more user-friendly, there are Netflix and VUDU shortcut buttons on remote control that allow you to do the basic commands necessary both for watching your video and for controlling the general interface.

Built-in Wi-Fi

With built-in Wi-Fi, you can access your media content wireless. Say goodbye to squinting at the computer screen, and lean back and enjoy your media files on your TV - in the comfort of your living room.

Dolby Digital and DTS

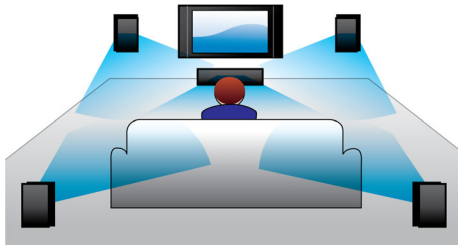

Go digital and get the most out of your music and movies. Even stereo music sounds great because Dolby Digital and DTS Digital Surround enhance digital music and videos, pumping it up so you get truly immersive surround sound out of your home cinema speaker.

Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for


real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.

NFC technology

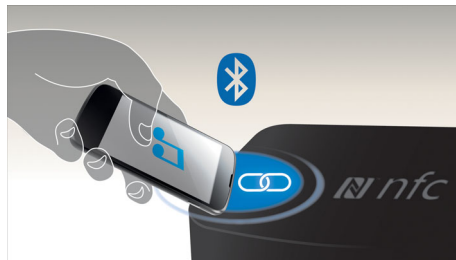


Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the

HTB3525B/F7


speaker on, start Bluetooth pairing, and begin streaming music.

Virtual Surround Sound

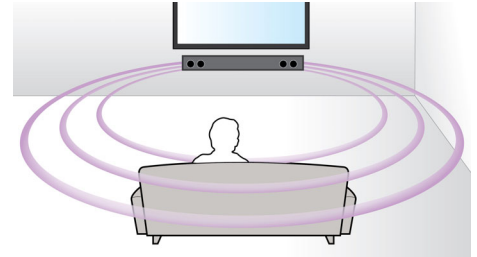

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

Bluetooth wireless streaming

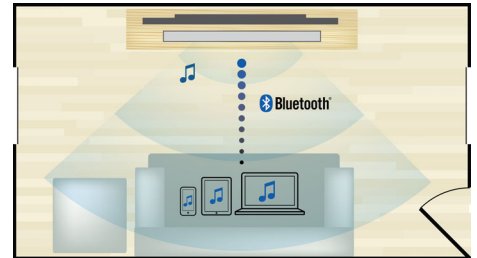

Bluetooth wireless music streaming from your music devices



NETFLIX



PANDORA



HDMI



Specifications

Sound

- Sound Enhancement: Night Mode, Virtual Surround Sound, Treble, Mid and Bass Control
- Sound System: DTS Digital Surround, Dolby True HD
- Subwoofer output power: 40W
- Speaker output power: 20 W x 2
- Total Power RMS @ 10% THD: 80 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers per side: 1 Mylar tweeter, 1 woofer
- Subwoofer type: Integrated Subwoofer
- Tweeter Impedance: 8 ohm

Connectivity

- Rear Connections: AUX in, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, HDMI 1.4 output (ARC), Fixed FM Antenna
- Integrated Connections: Bluetooth, Wi-Fi, NFC
- Front / Side connections: Audio in, USB
- Smart TV: Online Services
- iPod/iPhone: via 3.5mm Audio In, via bluetooth

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color
- Online services: Netflix, Pandora, Vudu, YouTube, Picasa

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, mkv, mp4, mpeg, mpg, wmv

Audio Playback

- Compression format: AAC, MP3, WAV, WMA, FLAC, Ogg Vorbis, Dolby Digital, DTS
- MP3 bit rates: 32 - 320kbps

Video Playback

- Compression formats: AVCHD, MPEG1, MPEG2, MPEG4, DivX Plus HD, H.264, ISO

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps)

Dimensions

- Main Unit (W x H x D): 701 x 70 x 325 mm
- Main Unit Weight: 6.8 kg
- Packaging (W x H x D): 840 x 135 x 176 mm
- Weight incl. Packaging: 9 kg

Accessories

- Included accessories: 2 x AAA Batteries, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, FM antenna

Packaging dimensions

- UPC: 6 09585 24172 5
- Packaging dimensions (W x H x D): 80 x 14.4 x 37.2 cm
- Packaging dimensions (W x H x D): 31.5 x 5.7 x 14.6 inch
- Gross weight: 9.13 kg
- Gross weight: 20.128 lb
- Nett weight: 7.115 kg
- Nett weight: 15.686 lb
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 2.015 kg
- Tare weight: 4.442 lb
- Type of shelf placement: Laying

Outer Carton

- Gross weight: 9.13 kg
- Gross weight: 20.128 lb
- Outer carton (L x W x H): 31.5 x 14.6 x 5.7 inch
- Outer carton (L x W x H): 80 x 37.2 x 14.4 cm
- Nett weight: 15.686 lb
- Nett weight: 7.115 kg
- Number of consumer packagings: 1
- Tare weight: 4.442 lb
- Tare weight: 2.015 kg
- UPC: 6 09585 24172 5

Power

- Power consumption: 40 W
- Power supply: 120 V (US), 60Hz
- Standby power consumption: < 0.5 W

Product dimensions

- Product dimensions (W x H x D): 27.6 x 3.1 x 12.2 inch
- Product dimensions (W x H x D): 70.06 x 7.8 x 31 cm

- Weight: 6.82 kg
- Weight: 15.035 lb



Issue date 2015-01-19

Version: 3.1.3

12 NC: 8670 001 12527
UPC: 6 09585 24172 5

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* To check whether Video on Demand is available in your country, please visit www.philips.com/blu-ray.
* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.
* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.