



Philips  
Blu-ray Disc/ DVD player

3D Blu-ray Disc playback

Netflix & Youtube  
DivX Plus HD  
Built-in WiFi

BDP2285



## 3D Blu-ray and DVD with built-in Wi-Fi

with Netflix & YouTube

Stunning 3D effect in picture depth and action that both leap off the screen, and draw you deep into the experience. Enjoy the best of internet on your TV with Netflix, Vudu and YouTube.

### See more

- DVD video upscaling to 1080p via HDMI for near-HD images
- Blu-ray 3D Disc playback for a full HD 3D experience at home
- DivX Plus HD Certified for high definition DivX playback
- Netflix-Streaming TV Episodes and Movies over the Internet
- Subtitle Shift for widescreen without any missing subtitles
- Access your favorite YouTube videos & Picasa photos easily

### Hear more

- Dolby TrueHD for high fidelity sound

### Engage more

- EasyLink to control all HDMI CEC devices via a single remote
- Direct remote access to Netflix and Vudu movie services
- USB 2.0 plays video/music from USB flash/hard disk drive
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- Built-in WiFi-n for faster, wider wireless performance

# PHILIPS

# Highlights

## Blu-ray 3D Disc playback



Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the full-HD 3D viewing experience is created.

## DVD video upscaling



HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering

perfect picture and sound quality, completely free from noise.

## WiFi-n




WiFi-n, also known as IEEE 802.11n, is the new wireless network standard. It includes many new options to improve the quality of the wireless link, offering faster speed and wider range compared to previous WiFi standards. WiFi-n also features backward compatibility, which makes it possible for this player to transmit to and receive from routers that operate on older WiFi standards.

## Direct remote Netflix and Vudu

To speed up the process, and make it more user-friendly, there are Netflix and VUDU shortcut buttons on remote control that allow you to do the basic commands necessary both for watching your video and for controlling the general interface.

## Dolby TrueHD

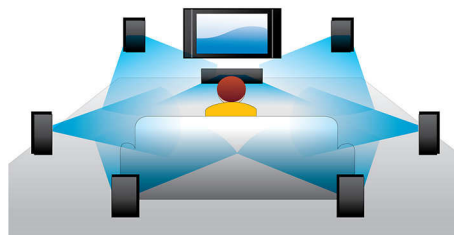

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is

virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

## DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

# Specifications

## Picture/Display

- Aspect ratio: 16:9, 21:9, 4:3
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

## Sound

- Sound System: Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out
- Sound Enhancement: Night Mode

## Convenience

- Child Protection: Parental Control
- BD-Live(1GB USB memory needed)
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- On-Screen Display languages: English, Mexican Spanish
- Online services: Netflix, Pandora, Vudu, Picasa, YouTube
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade

## Connectivity

- Front Connections: USB 2.0
- Integrated Connections: Wi-Fi
- Rear Connections: Digital coaxial out, Ethernet, HDMI output

## Power

- Power consumption: 11 W
- Standby power consumption: < 1W
- Power supply: 110V, 60Hz

## Dimensions

- Weight incl. Packaging: 1.56 kg
- Packaging (W x H x D): 355 x 87 x 279 mm
- Product (W x H x D): 310 x 40 x 217 mm
- Product weight: 1.2 kg

## Accessories

- Included accessories: 2 x AAA Batteries, Product Registration Card, Quick start guide, Remote Control, User Manual
- User Manual: Canadian French, English, Mexican Spanish

## Video Playback

- BD Region Code: A
- Compression formats: DivX Plus™ HD, H.264, MPEG1, MPEG2, XviD, MPEG4 (AVC)
- Video Enhancement: Deep Color, Progressive Scan, Video Upscaling, x.v. Color
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- DVD Region Code: 1

## Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Product dimensions

- Height: 3.95 cm
- Width: 31 cm
- Depth: 21.7 cm
- Width: 12.2 inch
- Height: 1.6 inch
- Depth: 8.5 inch
- Weight: 1.02 kg
- Weight: 2.249 lb

## Packaging dimensions

- Height: 27.9 cm

- Packaging type: Carton
- Width: 35.5 cm
- Height: 11.0 inch
- Number of products included: 1
- Depth: 8.7 cm
- Type of shelf placement: Laying
- Width: 14.0 inch
- Depth: 3.4 inch
- Nett weight: 1.2 kg
- Nett weight: 2.646 lb
- Gross weight: 1.56 kg
- Gross weight: 3.439 lb
- Tare weight: 0.36 kg
- Tare weight: 0.794 lb
- UPC: 6 09585 23971 5

## Outer Carton

- Length: 35.5 cm
- Number of consumer packagings: 1
- Length: 14.0 inch
- Width: 27.9 cm
- Height: 8.7 cm
- Width: 11.0 inch
- Height: 3.4 inch
- Nett weight: 1.2 kg
- Gross weight: 1.56 kg
- Nett weight: 2.646 lb
- Gross weight: 3.439 lb
- Tare weight: 0.36 kg
- Tare weight: 0.794 lb
- UPC: 6 09585 23971 5

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## File Format

- Audio: aac, mka, mp3, wma
- Video: avi, divx, m2ts, mkv, mp4, mpeg, mpg

# Specifications

- Picture: GIF, JPEG, JPG



Issue date 2024-08-16

Version: 9.9.8

UPC: 6 09585 23971 5

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)