

Philips  
Blu-ray home theater  
system



HTS3251B

## Spectacular high definition picture and sound

with Blu-ray Home Cinema.

High definition pictures and powerful surround sound delivered by this elegant system provide unbeatable home entertainment. Enjoy sharp pictures with 1080p HDMI upconversion.

### **Bring audio and video to life**

- Full HD 1080p for razor sharp images
- 1080p at 24 fps for cinema-like images
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- Blu-ray Disc playback for sharp images in full HD 1080p

### **Fits your space and lifestyle**

- Energy Star for energy efficiency and low power consumption

### **Easy to set up**

- EasyLink to control all HDMI CEC devices via a single remote

### **Play all your movies and music**

- Netflix-Streaming TV Episodes and Movies over the Internet

**PHILIPS**  
sense and simplicity

# Highlights

## Energy Star



Energy Star-labeled home electrical products are designed to use less energy - saving you money while reducing environmental pollution. In fact, Energy Star-compliant products consume less than 1 watt of power while in standby mode. As an Energy Star partner, Philips develops products that meet the Energy Star guidelines for energy efficiency. This is achieved by having low standby power consumption through innovatively designed standby circuitry and stringent selection of components made with high efficiency materials.

## Full HD 1080p



Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. This can only mean you get the best


possible TV picture quality available today - so prepare to feast your eyes.

## BD-Live (Profile 2.0)



BD-Live opens up your world of high definition even further. Receive up-to-date content just by connecting your Blu-ray Disc player to the internet. Exciting new things like exclusive downloadable content, live events, live chats, gaming and on-line shopping all await you. Ride the high definition wave with Blu-ray Disc playback and BD-Live

## Blu-ray Disc playback

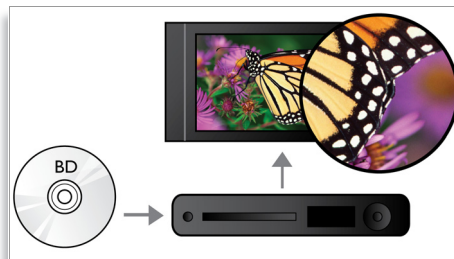

Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. Scenes come to life as details leap at you, movements smoothen and images turn crystal

clear. Blu-ray also delivers uncompressed surround sound - so your audio experience becomes unbelievably real. The high storage capacity of Blu-ray Discs also allow a host of interactive possibilities to be built in. Seamless navigation during playback and other exciting features like pop-up menus bring a whole new dimension to home entertainment.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.



# Specifications

## Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan

## Sound

- Total Power (RMS): 1000 W
- Sound System: Dolby Digital, Dolby Prologic II, Stereo, Dolby True HD, DTS HD
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode
- Equalizer settings: Action, Rock, Classic, Concert, Drama, Lounge, Gaming, Sports

## Video Playback

- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, WMV, DivX HD
- Playback Media: DVD-Video, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Video disc playback system: NTSC

## Audio Playback

- Compression format: MP3, WMA
- Playback Media: Audio CD, CD-R/RW, DVD-R/-RW

## Still Picture Playback

- Picture Compression Format: JPEG, Kodak Picture CD
- Playback Media: CD-R/RW, DVD-R/-RW
- Picture Enhancement: Rotate, Zoom, Slideshow with music playback

## Tuner/Reception/Transmission

- Tuner Bands: FM

## Connectivity

- Front / Side connections: MP3 Line-in
- Rear Connections: HDMI output, Component Video output, Composite video (CVBS) output, FM Antenna, Easy-Fit Speaker Connectors, Digital

- coaxial in, Aux in x2
- LAN wired: Ethernet (RJ 45) 1x

## Power

- Power supply: 120V, 60Hz

## Loudspeakers

- Satellite speaker drivers: 3" full range woofer
- Subwoofer type: Passive

## Accessories

- Included accessories: Remote Control, Product Registration Card, Quick start guide, User Manual, 2 x AAA Batteries, FM antenna

## Packaging dimensions

- Number of products included: 1
- Packaging type: Carton
- Type of shelf placement: Laying
- UPC: 6 09585 18466 4
- Packaging dimensions (W x H x D): 20.2 x 17.9 x 14.6 inch
- Packaging dimensions (W x H x D): 51.4 x 45.4 x 37.2 cm
- Gross weight: 28.660 lb
- Gross weight: 13 kg
- Nett weight: 8.157 lb
- Nett weight: 3.7 kg
- Tare weight: 20.503 lb
- Tare weight: 9.3 kg

## Product dimensions

- Product dimensions (W x H x D): 43.5 x 5.9 x 29.7 cm
- Product dimensions (W x H x D): 17.1 x 2.3 x 11.7 inch
- Weight: 3.7 kg
- Weight: 8.157 lb



Issue date 2013-01-22

Version: 10.3.5

12 NC: 8670 000 60024  
UPC: 6 09585 18466 4

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)