

Philips
Blu-ray Disc/ DVD player

3D Blu-ray Disc playback
DivX Plus HD

BDP2185



Wireless Streaming Entertainment

With 3D Blu-ray playback

Stunning 3D effect in picture depth and action that both leap off the screen, and draw you deep into the experience. Enjoy the best of internet on your TV with Netflix, Vudu and YouTube.

See more

- Blu-ray 3D Disc playback for a full HD 3D experience at home
- DivX Plus HD Certified for high definition DivX playback
- Netflix-Streaming TV Episodes and Movies over the Internet
- DVD video upscaling to 1080p via HDMI for near-HD images
- Subtitle Shift for widescreen without any missing subtitles

Hear more

- Dolby TrueHD for high fidelity sound

Engage more

- Direct remote access to Netflix and Vudu movie services
- USB 2.0 plays video/music from USB flash/hard disk drive
- Built-in WiFi-n for faster, wider wireless performance
- EasyLink to control all HDMI CEC devices via a single remote

PHILIPS

Blu-ray Disc/ DVD player
3D Blu-ray Disc playback DivX Plus HD

BDP2185/F7

Highlights

Blu-ray 3D Disc playback



Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the full-HD 3D viewing experience is created.

DVD video upscaling




HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering perfect

picture and sound quality, completely free from noise.

Direct remote Netflix and Vudu

To speed up the process, and make it more user-friendly, there are Netflix and VUDU shortcut buttons on remote control that allow you to do the basic commands necessary both for watching your video and for controlling the general interface.

Dolby TrueHD

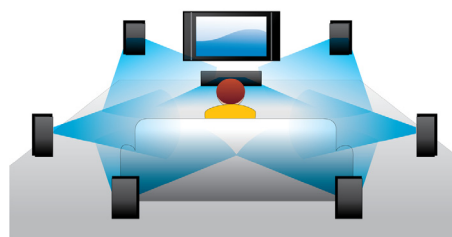

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

WiFi-n



WiFi-n, also known as IEEE 802.11n, is the new wireless network standard. It includes many new options to improve the quality of the wireless link, offering faster speed and wider

range compared to previous WiFi standards. WiFi-n also features backward compatibility, which makes it possible for this player to transmit to and receive from routers that operate on older WiFi standards.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Netflix video streaming

NETFLIX

Instantly watch TV episodes and movies as often as you want on your TV. All you need is an internet connection (either Wi-Fi or Ethernet) and a Netflix membership package that includes streaming*, and you are ready to go.



NETFLIX



Specifications

Accessories

- Included accessories: 2 x AAA Batteries, Product Registration Card, Quick start guide, Remote Control, User Manual
- User Manual: Canadian French, English, Mexican Spanish

Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- BD Region Code: A
- DVD Region Code: 1
- Compression formats: DivX Plus™ HD, H.264, MPEG1, MPEG2, MPEG4, XviD
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- Video Enhancement: Progressive Scan, Video Upscaling, Deep Color, x.v. Color

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, m2ts, mkv, mp4, mpeg, mpg

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Connectivity

- Front Connections: USB 2.0
- Integrated Connections: Wi-Fi
- Rear Connections: Digital coaxial out, Ethernet, HDMI output

Convenience

- BD-Live(1GB USB memory needed)
- Child Protection: Parental Control
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade
- On-Screen Display languages: English, Mexican Spanish
- Online services: Pandora

Dimensions

- Product (W x H x D): 310 x 40 x 203 mm
- Product weight: 1.25 kg
- Packaging (W x H x D): 420 x 90 x 303 mm
- Weight incl. Packaging: 2.0 kg

Picture/Display

- Aspect ratio: 4:3, 16:9, 21:9
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling
- D/A converter: 12Bit/148MHz

Power

- Power consumption: 11 W
- Power supply: 110V, 60Hz
- Standby power consumption: < 1W

Sound

- Sound Enhancement: Night Mode
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out

Outer Carton

- Gross weight: 1.56 kg
- Gross weight: 3.439 lb
- Outer carton (L x W x H): 14.4 x 11.8 x 3.4 inch
- Outer carton (L x W x H): 36.5 x 29.9 x 8.7 cm
- Nett weight: 1.2 kg
- Nett weight: 2.646 lb
- Number of consumer packagings: 1
- Tare weight: 0.794 lb
- Tare weight: 0.36 kg
- UPC: 6 09585 23295 2

Packaging dimensions

- Packaging dimensions (W x H x D): 36.5 x 29.9 x 8.7 cm
- Packaging dimensions (W x H x D): 14.4 x 11.8 x 3.4 inch
- Gross weight: 1.56 kg
- Gross weight: 3.439 lb
- Nett weight: 2.646 lb
- Nett weight: 1.2 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.794 lb
- Tare weight: 0.36 kg
- Type of shelf placement: Laying
- UPC: 6 09585 23295 2

Product dimensions

- Product dimensions (W x H x D): 12.2 x 1.6 x 8.5 inch
- Product dimensions (W x H x D): 31 x 3.95 x 21.7 cm
- Weight: 2.249 lb
- Weight: 1.02 kg



Issue date 2015-09-02

Version: 2.2.5

12 NC: 8670 001 01984
UPC: 6 09585 23295 2

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com