



Philips
5.1 Home theater

1000W RMS power
DVD playback

HTS3371D

Spectacular surround sound with superb clarity

Just like in the movies

High definition pictures and powerful surround sound delivered by this elegant system provide unbeatable home entertainment. Enjoy sharp pictures with 1080p HDMI upconversion, as well as convenient iPod playback via the dock included.

Fits your space and lifestyle

- Energy Star for energy efficiency and low power consumption

Bring audio and video to life

- HDMI 1080p upscales to high definition for sharper pictures
- Advanced Class D Amplifier for compact, powerful sound

Easy to set up and use

- EasyLink to control all HDMI CEC devices via a single remote

Connect and enjoy multiple sources

- Dock included for convenient playback from your iPod/iPhone
- Hi-Speed USB 2.0 Link plays video/music from USB flash drive

Play all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays WMV, DivX, WMA, MP3 and JPEG digital camera photos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW, DVD+R DL


PHILIPS

5.1 Home theater
1000W RMS power DVD playback

HTS3371D/F7

Highlights

Dock included for iPod/iPhone

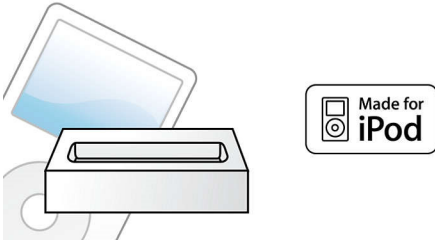


Use the docking station for your iPod and iPhone, and enjoy music from your iPod and iPhone on the home theater system.

HDMI 1080p

HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

Hi-Speed USB 2.0 Link

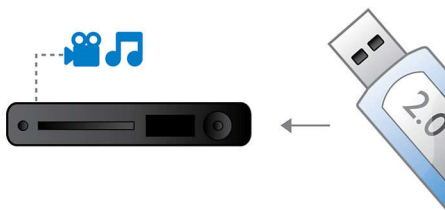

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment.

Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.


DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files like movies,


trailers and music videos on media like CD-R/RW, and DVD recordable discs. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Plays it all

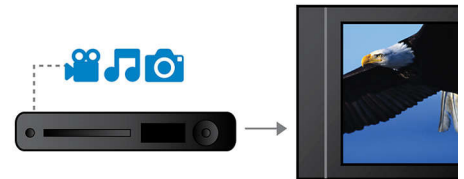

Play virtually any media format you want - whether they be WMV, DivX, MP3s or JPEGs. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system - in the comfort of your living room.

Plays it all

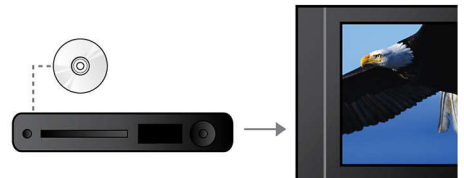

Play virtually any disc you want - whether they be CDs, (S)VCDs, DVDs, DVD-R, DVD-R, DVD+RW, DVD-RW or DVD+R DL. Experience unbeatable flexibility and the convenience of playing all your discs on the one device.



Specifications

Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan
- D/A converter: 12 bit, 108 MHz

Sound

- Sound System: Dolby Digital, Dolby Prologic II, Stereo
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode
- D/A converter: 24 bit, 192 kHz
- Frequency response: 40-20000 Hz
- Equalizer settings: Action, Rock, Classic, Concert, Drama, Lounge, Gaming, Sports
- Signal to noise ratio: >60 dB

Loudspeakers

- Center freq range: 150-20000 Hz
- Center speaker drivers: 3" full range woofer
- Satellite speaker freq range: 150-20000 Hz
- Satellite speaker impedance: 4 ohm
- Center speaker impedance: 4 ohm
- Satellite speaker drivers: 3" full range woofer
- Subwoofer type: Passive
- Subwoofer driver: 6.5" high efficiency woofer
- Subwoofer freq range: 40-150 Hz
- Subwoofer impedance: 4 ohm

Tuner/Reception/Transmission

- Tuner Bands: FM

Connectivity

- Front / Side connections: Hi-Speed USB, MP3 Line-in
- Rear Connections: HDMI output, Component Video output, Composite video (CVBS) output, Dock connector, AUX in, FM Antenna, Easy-Fit Speaker Connectors, Digital coaxial in, Digital optical in
- Dock for iPod compatibility: iPod 5th gen, iPod classic, iPod mini, iPod mini 2nd gen, iPod nano 1st gen, iPod nano 2nd gen, iPod nano 3rd gen, iPod touch, iPod with color display

Power

- Power consumption: 180 W
- Standby power consumption: < 1 W
- Power supply: 120V, 60Hz

Dimensions

- Set Height: 57 mm
- Set Width: 360 mm
- Set Depth: 331 mm
- Center Speaker Depth: 75 mm
- Packaging Depth: 425 mm
- Weight incl. Packaging: 12.3 kg
- Center Speaker Height: 100 mm
- Packaging Height: 307 mm
- Center Speaker Weight: 0.67 kg
- Packaging Width: 557 mm
- Center Speaker Width: 100 mm
- Set weight: 3.01 kg
- Subwoofer Weight: 4.703 kg
- Surround Speaker Width: 100 mm
- Surround Speaker Height: 100 mm
- Surround Speaker Depth: 75 mm
- Subwoofer Depth: 369 mm
- Subwoofer Height: 363 mm
- Subwoofer Width: 163 mm
- Surround speaker Weight: 0.48 kg

Accessories

- Included accessories: Dock for iPod, Remote Control, 2 x AAA Batteries, CVBS video cable, FM antenna, Product Registration Card, Quick start guide, User Manual, World Wide Warranty leaflet

Video Playback

- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, WMV
- Video disc playback system: NTSC

Audio Playback

- Compression format: MP3, WMA
- Playback Media: CD, CD-R/RW, DVD+R/+RW, DVD-R/-RW, USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: DVD+R/+RW, CD-R/RW, DVD-R/-RW, USB flash drive
- Picture Enhancement: Rotate, Zoom, Slideshow with music playback



Issue date 2024-08-16

Version: 5.5.14

UPC: 6 09585 16453 6

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com