



Philips
Blu-ray Disc/ DVD player

3D Blu-ray Disc playback

Netflix & Youtube
DivX Plus HD
Built-in WiFi

BDP2385

3D Blu-ray and DVD with built-in Wi-Fi

with Netflix & YouTube

Stunning 3D effect in picture depth and action that both leap off the screen, and draw you deep into the experience. Enjoy the best of internet on your TV with Netflix, Vudu and YouTube.

Engage more

- Direct remote access to Netflix and Vudu movie services
- USB 2.0 plays video/music from USB flash/hard disk drive
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- Built-in WiFi-n for faster, wider wireless performance

Hear more

- Dolby TrueHD for high fidelity sound
- DTS2.0 Digital Out

See more

- Blu-ray 3D Disc playback for a full HD 3D experience at home
- DivX Plus HD Certified for high definition DivX playback
- Netflix-Streaming TV Episodes and Movies over the Internet
- DVD video upscaling to 1080p via HDMI for near-HD images

Connect and enjoy all your entertainment

- Watch YouTube videos directly on your big screen TV*

PHILIPS

Highlights

Blu-ray 3D Disc playback




Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the full-HD 3D viewing experience is created.

DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

Dolby TrueHD

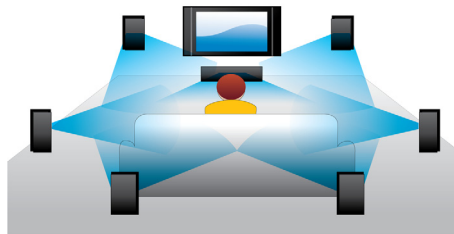

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

DVD video upscaling



HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

WiFi-n



WiFi-n, also known as IEEE 802.11n, is the new wireless network standard. It includes many new options to improve the quality of the wireless link, offering faster speed and wider range compared to previous WiFi standards. WiFi-n also features backward compatibility, which makes it possible for this player to transmit to and receive from routers that operate on older WiFi standards.

Direct remote Netflix and Vudu

To speed up the process, and make it more user-friendly, there are Netflix and VUDU shortcut buttons on remote control that allow you to do the basic commands necessary both for watching your video and for controlling the general interface.

Netflix video streaming

NETFLIX

Instantly watch TV episodes and movies as often as you want on your TV. All you need is an internet connection (either Wi-Fi or Ethernet) and a Netflix membership package that includes streaming*, and you are ready to go.



Specifications

Picture/Display

- Aspect ratio: 16:9, 21:9, 4:3
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

Sound

- Sound Enhancement: Night Mode
- Sound System: Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out

Video Playback

- BD Region Code: A
- Compression formats: DivX Plus™ HD, H.264, MPEG2, MPEG4 (AVC), XviD, MPEG1
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- DVD Region Code: 1
- Video Enhancement: Deep Color, Progressive Scan, Video Upscaling, x.v. Color

Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, m2ts, mkv, mp4, mpeg, mpg

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Connectivity

- Front Connections: USB 2.0
- Integrated Connections: Wi-Fi
- Network connections: 802.11 b/g/n, Built-in WiFi
- Rear Connections: Digital coaxial out, Ethernet, HDMI output

Convenience

- BD-Live(1GB USB memory needed)
- Child Protection: Parental Control
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade

- Online services: Netflix, Pandora, Vudu, YouTube
- On-Screen Display languages: English, Mexican Spanish

Power

- Power consumption: 11 W
- Power supply: 110V, 60Hz
- Standby power consumption: < 1W

Dimensions

- Packaging (W x H x D): 315 x 81 x 259 mm
- Product (W x H x D): 270 x 41 x 199 mm
- Product weight: 1.02 kg
- Weight incl. Packaging: 1.3 kg

Accessories

- Included accessories: 2 x AAA Batteries, Product Registration Card, Quick start guide, Remote Control, User Manual
- User Manual: Canadian French, English, Mexican Spanish

Product dimensions

- Product dimensions (W x H x D): 27 x 4.1 x 19.93 cm
- Product dimensions (W x H x D): 10.6 x 1.6 x 7.8 inch
- Weight: 0.91 kg
- Weight: 2.006 lb

Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 31.5 x 25.9 x 8.1 cm
- Packaging dimensions (W x H x D): 12.4 x 10.2 x 3.2 inch
- Gross weight: 1.3 kg
- Nett weight: 1.02 kg
- Tare weight: 0.28 kg
- Gross weight: 2.866 lb
- Nett weight: 2.249 lb
- Tare weight: 0.617 lb
- UPC: 6 09585 24844 1

Outer Carton

- Number of consumer packagings: 1
- Outer carton (L x W x H): 31.5 x 25.9 x 8.1 cm
- Outer carton (L x W x H): 12.4 x 10.2 x 3.2 inch
- Gross weight: 1.3 kg
- Nett weight: 1.02 kg
- Tare weight: 0.28 kg
- Gross weight: 2.866 lb
- Nett weight: 2.249 lb
- Tare weight: 0.617 lb
- UPC: 6 09585 24844 1



Issue date 2015-03-13

Version: 4.1.2

12 NC: 8670 001 21954
UPC: 6 09585 24844 1

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com