

Philips  
4K Ultra HD Blu-ray Player

4K Ultra HD Blu-ray playback  
Dolby Vision HDR and HDR 10  
4K Netflix & YouTube streaming  
Built-in WiFi

BDP7502



## Enjoy 4K Blu-ray with HDR

The Philips BDP7502 4K Ultra HD Blu-ray player with HDR support is the best way to realize the full potential of your 4K TV. With incredibly sharp 4K images with vivid colors and contrast made possible thanks to High Dynamic Range support.

### See more

- Dramatic Imaging powered by Dolby Vision
- 4K Ultra HD performance for years of worry free enjoyment
- Expanding the possibilities of visual perception
- Higher peak bitrate ensures more detail in fast action scene
- Experience television in vivid colorful glory

### Hear more

- Dolby TrueHD and DTS-HD MA for HD 7.1 surround sound

### Play all your movies and music

- Easily enjoy local media from you home network
- Enjoy your favorite Netflix content in HD and 4K!
- Watch YouTube videos directly on your big screen TV\*

# PHILIPS

## 4K Ultra HD Blu-ray Player

4K Ultra HD Blu-ray playback Dolby Vision HDR and HDR 10, 4K Netflix & YouTube streaming, Built-in WiFi

# Highlights

### 4K UltraHD Connected 4K BDP




With a 4K Ultra HD platform built from the ground up you can rest assured that your 4K Ultra HD Blu-ray player will work flawlessly with other 4K display devices for years to come. Featuring HDMI 2.0/2.0a with HDCP 2.2 and VP9 decoders, your 4K Ultra HD Blu-ray player is built to output glorious 4K HDR content to the latest 4K HDR TVs from 4K HDR Blu-ray discs, streaming media from Netflix and Youtube, and also playback local 4K content from USB and home network multimedia.

### High Dynamic Range 4K BDP



High Dynamic Range technology in Blu-ray Players when connected to a compatible 4K HDR television lets you experience more detail and captivating colors for an even more engaging television experience. More perceivable shades of blacks, whites and all other colors. This boils down to greater perceived brightness and contrast with darker shadows creating a breathtaking image.

### Higher peak bitrate 4K BDP

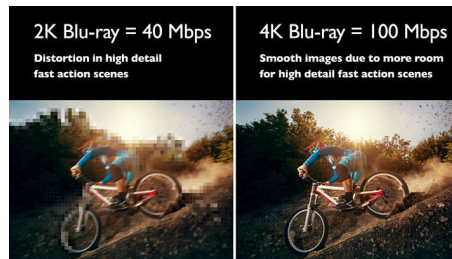

4K Blu-ray format supports more than twice the peak bitrate of 2K Blu-ray which comes in especially handy when watching action movies which have fast paced scenes with a lot of detail. The 100 Mbps peak bitrate of 4K Blu-ray provides enough headroom to store the extra data required to encode high detail fast action scenes and avoid block artifacts.

### Wide Color Gamut (BT.2020)



Wide Color Gamut televisions with BT.2020 video input support, reproduce rich colors almost twice as saturated as a standard television, which look more vivid and life-like to enhance the TV viewing experience.

### Netflix

Enjoy your favorite Netflix content in HD and 4K!

### YouTube videos




Get YouTube videos on your TV now. Enjoy the huge collection of online videos on a larger

BDP7502/F7

screen, without even having to turn your computer on. Simply ensure that your Blu-ray player or Home theater system is connected to the Internet, either wirelessly\* or through cables - then sit back and enjoy the best of YouTube.

### Dolby TrueHD and DTS-HD MA

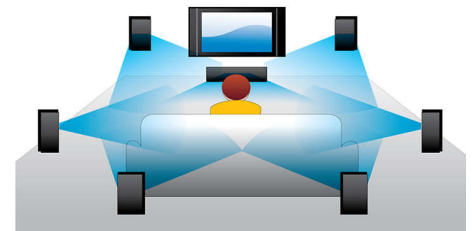

DTS-HD Master Audio and Dolby TrueHD delivers 7.1 channels of the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. DTS-HD Master Audio and Dolby TrueHD complete your high definition entertainment experience.

### HomeNetwork Multimedia Browser



With support for a vast number of formats such as H.264, AAC, MP3, JPEG, HEVC\*, VP9\* (\* on 4K TVs) and more, conveniently enjoying your personal media via Home Network Multimedia Browser has never been easier.



## 4K Ultra HD Blu-ray Player

4K Ultra HD Blu-ray playback Dolby Vision HDR and HDR 10, 4K Netflix & YouTube streaming, Built-in WiFi

BDP7502/F7

# Specifications

### Picture/Display

- Picture enhancement: Video upscaling, Noise Reduction

### Sound

- Sound System: DTS-HD Master Audio Essential, Dolby Audio

### Convenience

- Child Protection: Parental Control
- On-Screen Display languages: English, French, Spanish

### Multimedia Applications

- Playback Formats: JPEG Still pictures, PNG still pictures, FLAC, M2TS, M4A, MOV, MP4, MPG, MTS, TS, WAV, AAC, AIF, APE, MP3, Ogg Vorbis

### Connectivity

- Wireless connection: Wi-Fi (Built-in)
- Front Connections: USB
- Rear Connections: HDMI output, HDMI out for Audio, Ethernet, Optical out

### Power

- Standby power consumption: 0.4W
- Power supply: 120V, 60Hz

### Dimensions

- Set Height: 46 mm
- Set Width: 430 mm
- Set Depth: 208 mm
- Product weight (lb): 3.75 lb
- Packaging (W x H x D): 20.5 x 4.5 x 11.3 inch
- Packaging Depth: 286 mm
- Packaging Height: 112 mm
- Packaging Width: 520 mm
- Set Width (inch): 17.0 inch
- Gross Weight: 5.3 lb
- Set Height (inch): 1.9 inch
- Gross weight: 2.4 kg

- Set Depth (inch): 8.2 inch
- Product weight: 1.7 kg

### Accessories

- Included accessories: HDMI cable, Product Registration Card, Quick start guide, Remote Control, 2 x AAA Batteries
- User Manual: English, French, Spanish

### Video Playback


- Playback Media: BD Video, BD-R/RE 2.0, DVD-Video, DVD-R/-RW, DVD+R/+RW, CD, CD-R/CD-RW, USB
- Compression formats: HEVC, VP9 Profile 0, H.264, MPEG4 (AVC), MPEG2, AVCHD
- Video disc playback system: NTSC
- Video Enhancement: BT.2020 / BT.709, HDR -> SDR Convert, HDR10, Progressive Scan, Video Upscaling, Deep Color
- Disc Playback Modes: Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play
- DVD Region: 1
- Picture Quality Enhancements: Video upscaling
- BD Region: A

### Audio Playback

- Compression format: Dolby Digital, DTS, PCM, MP3, AAC, FLAC, WAV, AIFF, APE, M4A, Ogg Vorbis
- Playback Media: BD, DVD, DVD-R/-RW, CD, CD-R/-RW, USB
- Multichannel decoding: Dolby Digital

### Still Picture Playback

- Picture Compression Format: JPEG, PNG
- Playback Media: BD, DVD, DVD-R/-RW, DVD+R/+RW, CD, CD-R/-RW, USB
- Picture Enhancement: High Definition Resolution, Rotate, Slideshow

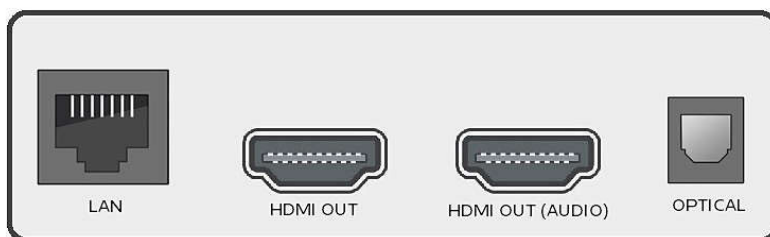

Issue date 2023-12-11

Version: 5.6.1

UPC: 6 09585 25050 5

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* P&F USA Inc. does not warrant access to the Portal or to any of the services, content, software and advertising. P&F USA Inc. may, in its sole discretion, add or remove access to any specific services, content, software and advertising at any time.

\* Although P&F USA Inc. will strive to provide a good selection of services, content or software, P&F USA Inc. does not warrant continued access to any specific services, and content or software.