

Philips
DVD player

HDMI 1080p
DivX Ultra

DVP3982



DVD playback with 1080p HDMI upconversion

with one-cable connectivity

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

Easy to set up and use

- EasyLink to control all HDMI CEC devices via a single remote

Bring video to life

- HDMI digital output for easy connection with only one cable
- High definition JPEG playback for images in true resolution

Bring audio and video to life

- 12-bit/108MHz video processing for sharp and natural images
- 192kHz/24 bit audio DAC enhances analogue sound input
- Progressive Scan component video for optimized image quality

Play all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW
- Plays DivX, MP3, WMA and JPEG digital camera photos


PHILIPS

DVD player
HDMI 1080p DivX Ultra

DVP3982/F7


Highlights

192kHz/24 bit audio DAC

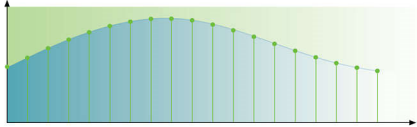

192KHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

Progressive Scan

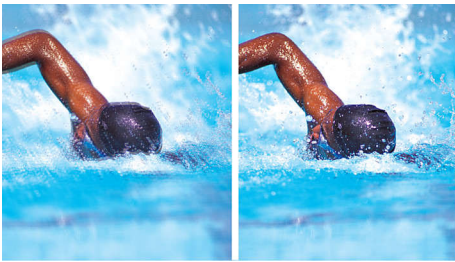


Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Plays it all

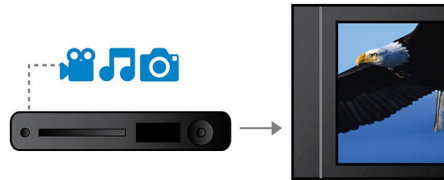

Play virtually any media format you want - whether they be DivX, MP3s, WMA or JPEGs. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system - in the comfort of your living room.

HDMI for simple AV connection



HDMI stands for High Definition Multimedia Interface. It is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. HDMI is fully backward-compatible with (Digital Video Interface) DVI.

High definition JPEG playback



High definition JPEG playback lets you view your pictures on your television in resolutions as high as two megapixels. Now you can view your digital pictures in absolute clarity, without loss of quality or detail - and share them with friends and family in the comfort of your living room.

12-bit
Video DAC

PROGRESSIVE
SCAN

DIVX
ULTRA

easy
LINK

HDMI

HD JPEG

Dolby
Digital

DOLBY
DIGITAL

ENERGY STAR

Specifications

Picture/Display

- Picture enhancement: Progressive scan, Video Upscaling(720p, 1080i/p)
- D/A converter: 12 bit, 108 MHz

Sound

- Sound System: Dolby Digital
- Crosstalk (1kHz): > 70 dB
- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Distortion and Noise (1kHz): > 65 dB
- Signal to noise ratio: > 90 dB
- Dynamic Range (1kHz): > 80 dB

Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: Canadian French, English, Mexican Spanish

Multimedia Applications

- Playback Formats: JPEG Still pictures, MP3

Connectivity

- Rear Connections: Analog audio Left/Right out, Component/Video out Progressive, Composite video (CVBS) output, Digital coaxial out, HDMI output

Power

- Power consumption: < 10 W
- Standby power consumption: < 1.0 W
- Power supply: 120V, 60Hz

Dimensions

- Set Height: 37 mm
- Set Width: 360 mm
- Set Depth: 210 mm
- Packaging Depth: 282 mm
- Packaging Height: 82 mm
- Packaging Width: 415 mm

Accessories

- Included accessories: 2 x AAA Batteries, Audio/Video cable, Remote Control, User Manual, Power cord, Quick start guide, Warranty Leaflet

Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DivX, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2
- Video disc playback system: NTSC, PAL

Audio Playback

- Compression format: MP3, Dolby Digital, PCM, WMA
- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- MP3 bit rates: 32 - 320 kbps

Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD
- Picture Enhancement: Rotate, Zoom, Slideshow, Flip photos



Issue date 2024-08-16

Version: 2.2.6

UPC: 6 09585 17227 2

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com