



Philips
5.1 DVD Home theater

DVD

HTD3514

Powerful surround sound from compact speakers

Pump up your home entertainment experience with this Philips home cinema system. Exposed speakers drivers offering 300W powerful surround sound and DVD video upscaling to 1080p via HDMI for near-HD images.

Great listening experience

- 300W RMS power delivers great sound for movies and music
- Exposed speaker drivers for powerful surround sound
- Dolby Digital for ultimate movie experience

Simply enjoy all your entertainment

- Audio in to enjoy music from iPod/iPhone/MP3 player
- EasyLink to control all HDMI CEC devices via a single remote
- HDMI for high definition movies and picture quality
- Plays DVD, VCD, CD and USB devices
- DivX Ultra Certified for enhanced DivX video playback

Designed to enhance your cinema at home

- Modern design to complement your home environment

PHILIPS

Highlights

300W RMS power



300W RMS power delivers great sound for movies and music

Exposed speaker drivers



Exposed speaker drivers for powerful surround sound

Audio in




Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Dolby Digital

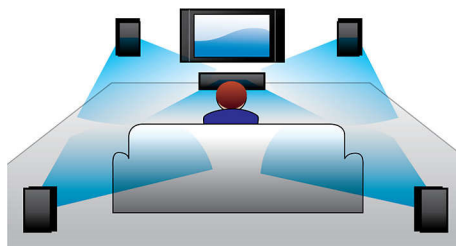

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.



Specifications

Picture/Display

- Picture enhancement: Video upscaling

Sound

- Sound System: Dolby Digital 5.1
- Sound Enhancement: Night Mode
- Subwoofer output power: 50 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Cube speaker output power: 5 x 50 W
- Total Power RMS @ 30% THD: 300 W

Loudspeakers

- Loudspeaker types: 5 x Cube speakers
- Cube speaker freq range: 150 - 20k Hz
- Cube speaker impedance: 4 ohm
- Subwoofer type: Passive
- Drivers per Cube speaker: 1 x 2.5" woofer
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: Audio Return Channel (ARC)

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

Connectivity

- Front Connections: Audio in, Hi-Speed USB
- Rear Connections: AUX in, Composite video (CVBS) output, Digital optical in, Fixed FM Antenna, HDMI 1.4 output (ARC), Mini Easy-Fit Speaker Jacks

Power

- Power consumption: 50 W

- Standby power consumption: < 0.5W
- Power supply: 110V, 60Hz

Dimensions

- Main Unit (W x H x D): 360 x 55 x 290 mm
- Main Unit Weight: 2.40 kg
- Center Speaker (W x H x D): 85 x 88 x 83 mm
- Center Speaker Weight: 0.26 kg
- Centre Speaker cable length: 1.2 m
- Front Speaker (W x H x D): 85 x 88 x 83 mm
- Subwoofer (W x H x D): 160 x 265 x 265 mm
- Front Speaker Weight: 0.28 kg
- Subwoofer Weight: 2.5 kg
- Front Speaker cable length: 2.2 m
- Rear Speaker (W x H x D): 85 x 88 x 83 mm
- Rear Speaker Weight: 0.26 kg
- Rear Speaker cable length: 7.2 m
- Subwoofer cable length: 2.2 m

Accessories

- Included accessories: Remote Control, Safety & Legal Leaflet, Trademarks Sheet, AAA Battery (x1), User Manual
- Compatible accessories: STS3001 Speaker stand

Video Playback

- Compression formats: MPEG1, MPEG2, DivX Ultra

Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320kbps

Still Picture Playback

- Picture Compression Format: BMP, GIF, JPEG, TIFF
- Picture Enhancement: Rotate, Zoom

Product dimensions

- Height: 5.8 cm
- Width: 36 cm
- Depth: 33.5 cm
- Width: 14.2 inch

- Height: 2.3 inch
- Depth: 13.2 inch
- Weight: 2.2 kg
- Weight: 4.850 lb

Packaging dimensions

- Height: 31 cm
- Packaging type: Carton
- Width: 52 cm
- Height: 12.2 inch
- Number of products included: 1
- Depth: 37.7 cm
- Type of shelf placement: Laying
- Width: 20.5 inch
- Depth: 14.8 inch
- Nett weight: 6.07 kg
- Nett weight: 13.382 lb
- Gross weight: 7.15 kg
- Gross weight: 15.763 lb
- Tare weight: 1.08 kg
- Tare weight: 2.381 lb
- UPC: 6 09585 23323 2

Outer Carton

- Length: 52 cm
- Number of consumer packagings: 1
- Length: 20.5 inch
- Width: 37.7 cm
- Height: 31 cm
- Width: 14.8 inch
- Height: 12.2 inch
- Nett weight: 6.07 kg
- Gross weight: 7.15 kg
- Nett weight: 13.382 lb
- Gross weight: 15.763 lb
- Tare weight: 1.08 kg
- Tare weight: 2.381 lb
- UPC: 6 09585 23323 2

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD,

Specifications

DVD +R/+RW, DVD -R/-RW, SVCD, VCD

- Video: avi, divx, mpeg, mpg
- Picture: GIF, JPEG, BMP

File Format

- Audio: mp3, wma



Issue date 2024-08-16

Version: 5.5.3

UPC: 6 09585 23323 2

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* DivX, DivX Certified, and associated logos are trademarks of
DivXNetworks, Inc. and are used under license.

* Dolby and the double-D symbol are registered trademarks of Dolby
Laboratories Inc.