

Philips  
5.1 DVD Home theater

DVD

HTD3514



## Powerful surround sound from compact speakers

Pump up your home entertainment experience with this Philips home cinema system. Exposed speaker drivers offering 300W powerful surround sound and DVD video upscaling to 1080p via HDMI for near-HD images.

### Great listening experience

- 300W RMS power delivers great sound for movies and music
- Dolby Digital for ultimate movie experience
- Exposed speaker drivers for powerful surround sound

### Simply enjoy all your entertainment

- DivX Ultra Certified for enhanced DivX video playback
- EasyLink to control all HDMI CEC devices via a single remote
- HDMI for high definition movies and picture quality
- Plays DVD, VCD, CD and USB devices
- Audio in to enjoy music from iPod/iPhone/MP3 player

### Designed to enhance your cinema at home

- Modern design to complement your home environment

# PHILIPS

# Highlights

## 300W RMS power



300W RMS power delivers great sound for movies and music

## Exposed speaker drivers



Exposed speaker drivers for powerful surround sound

## Audio in




Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

## DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

## Dolby Digital

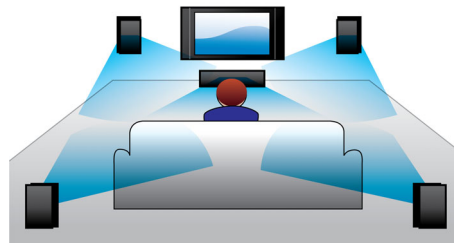

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.



# Specifications

## Sound

- Sound System: Dolby Digital 5.1
- Cube speaker output power: 5 x 50 W
- Subwoofer output power: 50 W
- Total Power RMS @ 30% THD: 300 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Night Mode

## Loudspeakers

- Loudspeaker types: 5 x Cube speakers
- Drivers per Cube speaker: 1 x 2.5" woofer
- Cube speaker freq range: 150 - 20k Hz
- Cube speaker impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm

## Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## Video Playback

- Compression formats: MPEG1, MPEG2, DivX Ultra

## Picture/Display

- Picture enhancement: Video upscaling

## Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320kbps

## Still Picture Playback

- Picture Enhancement: Rotate, Zoom
- Picture Compression Format: BMP, GIF, JPEG, TIFF

## File Format

- Audio: mp3, wma
- Picture: GIF, JPEG, BMP
- Video: avi, divx, mpeg, mpg

## Connectivity

- Front Connections: Audio in, Hi-Speed USB
- Rear Connections: AUX in, Composite video (CVBS) output, Digital optical in, Fixed FM Antenna, HDMI 1.4 output (ARC), Mini Easy-Fit Speaker Jacks

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: Audio Return Channel (ARC)

## Power

- Power consumption: 50 W
- Power supply: 110V, 60Hz
- Standby power consumption: < 0.5W

## Accessories

- Included accessories: Remote Control, Safety & Legal Leaflet, Trademarks Sheet, AAA Battery (x1), User Manual
- Compatible accessories: STS3001 Speaker stand

## Dimensions

- Main Unit (W x H x D): 360 x 55 x 290 mm
- Main Unit Weight: 2.40 kg
- Center Speaker (W x H x D): 85 x 88 x 83 mm
- Center Speaker Weight: 0.26 kg
- Centre Speaker cable length: 1.2 m
- Front Speaker (W x H x D): 85 x 88 x 83 mm
- Front Speaker Weight: 0.28 kg
- Front Speaker cable length: 2.2 m
- Rear Speaker (W x H x D): 85 x 88 x 83 mm
- Rear Speaker Weight: 0.26 kg
- Rear Speaker cable length: 7.2 m
- Subwoofer (W x H x D): 160 x 265 x 265 mm
- Subwoofer Weight: 2.5 kg
- Subwoofer cable length: 2.2 m

## Outer Carton

- Gross weight: 15.763 lb
- Gross weight: 7.15 kg
- Outer carton (L x W x H): 52 x 37.7 x 31 cm
- Outer carton (L x W x H): 20.5 x 14.8 x 12.2 inch
- Nett weight: 13.382 lb
- Nett weight: 6.07 kg
- Number of consumer packagings: 1
- Tare weight: 2.381 lb
- Tare weight: 1.08 kg
- UPC: 6 09585 23323 2

## Packaging dimensions

- Packaging dimensions (W x H x D): 52 x 31 x 37.7 cm
- Packaging dimensions (W x H x D): 20.5 x 12.2 x 14.8 inch
- Gross weight: 7.15 kg
- Gross weight: 15.763 lb
- Nett weight: 13.382 lb
- Nett weight: 6.07 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 2.381 lb
- Tare weight: 1.08 kg
- Type of shelf placement: Laying
- UPC: 6 09585 23323 2

## Product dimensions

- Product dimensions (W x H x D): 14.2 x 2.3 x 13.2 inch
- Product dimensions (W x H x D): 36 x 5.8 x 33.5 cm
- Weight: 2.2 kg
- Weight: 4.850 lb



Issue date 2016-04-17

Version: 4.0.2

12 NC: 8670 001 02326  
UPC: 6 09585 23323 2

© 2016 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.

\* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.