



Philips
LCD TV with Digital
Crystal Clear

81cm/32"

digital TV



32PFL3505D

Clearly the smart choice

with an Eco TV™

Whether movies, sports or games - experience great pictures and sound with this HD ready TV. With Philips quality and its sophisticated design this TV is the right choice for any room of your house.

See brilliant picture quality

- HD LCD display, with a 1366 x 768p resolution
- Digital Crystal Clear for detail depth and clarity

Hear crisp and clear sound

- Dolby Digital output for connection to a home theatre system
- Incredible Surround for enhanced audio enjoyment

Easy to connect and enjoy

- 3 HDMI inputs with Easylink for HD connection
- PC input (HDMI)

PHILIPS


sense and simplicity

Highlights

LCD display, 1366 x 768p

This WXGA display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1366 x 768p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience.

Digital Crystal Clear

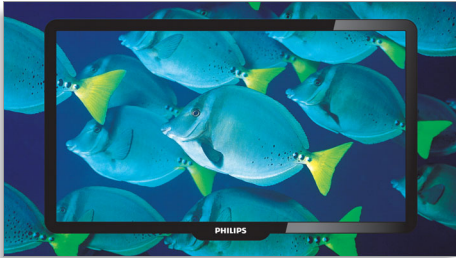

Digital Crystal Clear is a package of picture innovations that digitally adjusts and optimizes picture quality to optimal contrast, color and

sharpness levels. It's like watching vivid cinema-like images.

Dolby Digital output

Dolby Digital output for connection to a home theatre system

Incredible Surround

Incredible Surround is an audio technology from Philips that dramatically magnifies the sound field to immerse you in the audio. Using state-of-the-art electronic phase shifting, Incredible Surround mixes sounds from left and right in such a way that it expands the virtual distance between the two speakers. This wider spread greatly enhances the stereo effect and creates a more natural sound dimension. Incredible Surround allows you to experience total surround with greater depth and width of sound, without the use of additional speakers.

3 HDMI inputs with EasyLink

EasyLink uses the HDMI CEC industry standard protocol to share functionality between connected devices and the TV. With Easylink only one remote control is needed to operate main functionalities on your TV and connected devices. HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI uses HDCP copy protection. With 2 HDMI input on the back and 1 HDMI on the side of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and Game Console or Digital Camcorder.

PC input (HDMI)

With PC input you can use your TV as a PC monitor via a HDMI-DVI cable/converter.

Specifications

Picture/Display

- Aspect ratio: Widescreen
- Panel resolution: 1366 x 768p
- Brightness: 380 cd/m²
- Contrast ratio (typical): 2500:1
- Dynamic screen contrast: 10000:1
- Response time (typical): 8 ms
- Diagonal screen size: 32 inch / 81 cm
- Visible screen diagonal (inch): 31.5 inch
- Viewing angle: 170° (H) / 170° (V)
- Picture enhancement: Digital Crystal Clear, 3/2 - 2/2 motion pull down, 3D Combfilter, Digital Noise Reduction, Dynamic contrast enhancement, Progressive scan

Supported Display Resolution

Computer formats

Resolution	Refresh rate
640 x 480	60Hz
720 x 480	60Hz
800 x 600	60Hz
1024 x 768	60Hz
1280 x 768	60Hz
1360 x 768	60Hz

Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
720p	60Hz
1080i	60Hz

Sound

- Equalizer: 5-bands
- Output power (RMS): 2 x 10W
- Sound Enhancement: Virtual Surround Sound
- Sound System: Dolby Digital (AC-3), Stereo, SAP

Loudspeakers

- Built-in speakers: 2

Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer
- Ease of Installation: Autostore

- Ease of Use: Auto Volume Leveller (AVL), AutoPicture, AutoSound, Settings assistant Wizard, Side Control
- Remote Control: TV
- Screen Format Adjustments: 4:3, 16:9, Normal, Zoom, Full, Movie Expand, Wide, unscaled (dot by dot)

Tuner/Reception/Transmission

- Aerial Input: 75 ohm F-type
- TV system: ATSC, NTSC
- Video Playback: NTSC
- Tuner bands: UHF, VHF

Connectivity

- AV 1: Audio L/R in, YPbPr
- AV 2: Audio L/R in, CVBS, S-Video
- HDMI 1: HDMI, Analog audio L/R in
- HDMI 2: HDMI
- HDMI 3: HDMI
- Audio Output - Digital: Coaxial (cinch)
- Other connections: Analog audio Left/Right out
- USB: USB
- EasyLink (HDMI-CEC): One touch play, Power status, System info (menu language), System audio control, System standby

Power


- Mains power: 120V/60Hz
- Power consumption: 145 W
- Standby power consumption: < 0.5 W
- Ambient temperature: 5°C to 35°C (41°F to 95°F)

Dimensions

- Set dimensions in inch (W x H x D): 30.8 x 20.3 x 3.8 inch
- Set dimensions with stand in inch (W x H x D): 30.8 x 22.5 x 8.7 inch
- Product weight (lb): 19.2
- Product weight (+stand) (lb): 20.8 lb
- Box dimensions in inch (W x H x D): 35.9 x 24.8 x 9.0 inch
- Weight incl. Packaging (lb): 26.1
- VESA wall mount compatible: 200 x 200 mm

Accessories

- Included accessories: Table top stand, Power cord, Quick start guide, User Manual, Registration card, Remote Control, Batteries for remote control

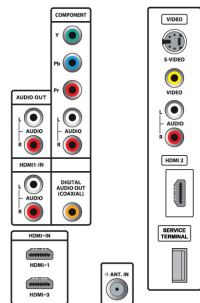

Issue date 2012-01-22

Version: 3.1.1

12 NC: 8670 000 60465
UPC: 6 09585 18616 3

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com

