



Philips
DVD/VCR Player

Direct Dubbing
Progressive Scan

DVP3345V

DVD and VHS Combo

The ultimate all-in-one player that plays your movie collections in DVDs & VHS tapes. This combination is the only player that maximizes convenience and enhances your movie experience. One player plays it all.

Easy to set up and use

- Direct Dubbing for easy transfer of videos from DVD to VCR

Bring audio and video to life

- Hi-Fi stereo VHS enhances audio playback
- Progressive Scan component video for optimized image quality


Play all your movies and music

- Plays MP3 and JPEG digital camera photos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW, DVD+R DL, VHS

PHILIPS

Highlights

Progressive Scan

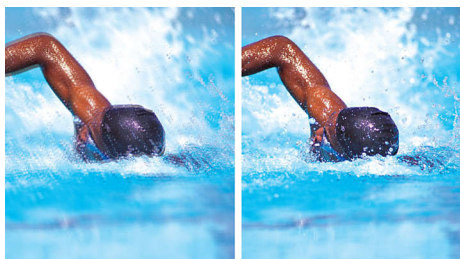

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the

odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

Hi-Fi stereo VHS



Hi-Fi Stereo VHS plays back true stereo VHS



Specifications

Picture/Display

- Picture enhancement: Progressive scan
- D/A converter: 10 bit / 54MHz

Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 20 - 20 000 Hz
- Signal to noise ratio: 90
- Dynamic Range (1kHz): >80 dB
- THD: -80dB

Convenience

- Programming/Timer Enhancements: Daily/Weekly Repeat Program, One Touch Recording

Connectivity

- Front / Side connections: Audio L/R in, CVBS in
- Rear Connections: Analog audio Left/Right out, Component Video output, Composite video (CVBS) output, Digital coaxial out, S-Video out, Analog audio Left/Right in, Composite video (CVBS) input

Power

- Power consumption: 21 W
- Standby power consumption: 3.8 W
- Power supply: 120V, 60Hz

Dimensions

- Set Height: 94 mm
- Set Width: 435 mm
- Set Depth: 233 mm
- Packaging Depth: 342 mm
- Weight incl. Packaging: 3.4 kg
- Packaging Height: 182 mm

- Packaging Width: 539 mm
- Set weight: 2.7 kg

Accessories

- Included accessories: 2 x AA Batteries, Audio/Video cable, Quick start guide, Remote Control, User Manual, Warranty Leaflet

Video Playback

- Playback Media: CD-R/CD-RW, DVD-R/-RW, DVD+R/+RW, DVD-Video, Video CD/SVCD, VHS Tapes
- Compression formats: MPEG1
- Video disc playback system: NTSC
- Number of Video Heads: 4
- Video tape playback system: NTSC

Audio Playback

- Compression format: MP3, WMA, Dolby Digital, PCM
- Playback Media: Audio CD, CD-R/RW, DVD-R/-RW, DVD+R/+RW
- Number of Audio Heads: 2 Hi-Fi

Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: CD-R/RW
- Picture Enhancement: Rotate, Slideshow, Zoom

Container Loading

- Container 20 feet: 900
- Container 40 feet: 1800
- Container 40 feet (HC): 2000



Issue date 2024-08-16

Version: 2.2.4

UPC: 6 09585 17230 2

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com