

Philips  
4000 series LED-LCD TV

40" class/po



40PFL4709



## LED Performance

Enjoy a great picture in a LED-LCD TV. Amazingly sharp pictures delivered in full high-definition 1080p clarity. All the connection options you need from HDMI and USB, to PC-In for complete versatility.

### **Greener every day**

- Energy Star rated for low power consumption

### **Enlarge your viewing experience**

- Digital Crystal Clear for detail depth and clarity
- Brilliant LED images with low power consumption
- Full 1080p HD display, with a 1920x1080p resolution
- Enjoy rich sound and clear dialog with DTS TruSurround

### **Complete digital connectivity made simple**

- PC-input allows you to use your TV as a PC monitor
- Seamless connectivity with 3 HDMI inputs and Easylink
- Enjoy video and photo playback via USB


### **Simple to set up, easy to use**

- Auto picture mode for an optimized viewing experience
- Picture setting made fast and easy with Setting Assistant

# PHILIPS

# Highlights

## Digital Crystal Clear

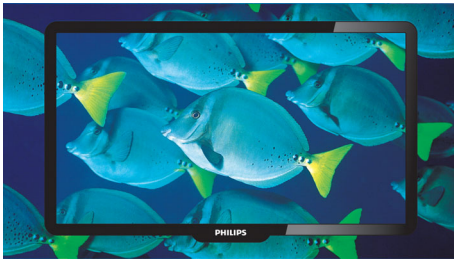

Digital Crystal Clear is a package of picture innovations that digitally adjusts and optimizes picture quality to optimal contrast, color and sharpness levels. It's like watching vivid cinema-like images.

## USB for movie & photo playback



The USB connector allows access to jpeg photos and motion jpeg movie(320x240 30fps, PCM) of most USB-sticks (USB memory-class device). Plug the USB into the slot at the side of the TV and access the multimedia content using the easy on screen content browser. You can now view and share your movie and photos.

## PC input (VGA)

With PC input you can connect your TV to a computer by a VGA cable and use the TV as a PC monitor.

## Picture setting with Assistant

Settings assistant for effortless personalized TV settings. The new settings assistant personalization wizard guides you to personalized settings with unparalleled ease. It includes not only picture, but the complete viewing experience, including sound setting. The wizard shows a few screens with easy to choose options to select the essential settings. The TV performance is set to the your personal preference without difficult terms or settings, and this very quickly.

## Seamless connectivity

EasyLink uses the HDMI CEC industry standard protocol to share functionality between connected devices and the TV. HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI uses HDCP copy protection. With HDMI input of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and Game Console or Digital Camcorder.

## LED with low power consumption

LED lighting technology is the most advanced available. In this TV it combines an eye-catching minimalistic design with stunning image quality, as well as being the lowest power consumption

in its category. Another environmental benefit is that LED lighting technology does not contain hazardous materials. With an LED backlight you can enjoy low power consumption, high brightness, incredible contrast and sharpness and vibrant colors.

## Full HD 1080p display

Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. This can only mean you get the best possible TV picture quality available today - so prepare to feast your eyes.

## DTS TruSurround



DTS TruSurround creates an immersive, feature-rich surround sound experience from two speakers, complete with rich bass, high frequency detail and clear dialog. Extremely broad sweet spot for maximum realism and enjoyment, sculpted bass to optimize low frequency performance of small drivers and enclosures, dialog enhancement to ensure clear and intelligible vocals and definition control for maximum high-frequency realism and clarity.



# Specifications

## Picture/Display

- Aspect ratio: Widescreen(16:9)
- Brightness: 270 cd/m<sup>2</sup>
- Contrast ratio (typical): 5000:1
- Response time (typical): 8 ms
- Viewing angle: 178° (H) / 178° (V)
- Diagonal screen size: 40 inch / 101.6 cm
- Visible screen diagonal (inch): 40.0 inch
- Display screen type: LED Full HD Display
- Panel resolution: 1920x1080p
- Picture enhancement: 3D Combfilter, Active Control + Light sensor, Digital Crystal Clear, Digital Noise Reduction, Progressive scan

## Supported Display Resolution

### Computer formats

Resolution	Refresh rate
640 x 480	60Hz
720 x 480	60Hz
800 x 600	60Hz
1024 x 768	60Hz
1280 x 768	60Hz
1280 x 1024	60Hz
1360 x 768	60Hz
1440 x 900	60 Hz
1920 x 1080	60Hz
1680 x 1050	60Hz
1400 x 1050	60Hz

### Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
720p	60Hz
1080i	60Hz
1080p	24,30,60Hz

## Sound

- Equalizer: 5-bands
- Output power (RMS): 2 x 10W
- Sound Enhancement: DTS TruSurround™
- Sound System: Dolby Digital (AC-3), Mono, Stereo, SAP

## Loudspeakers

- Built-in speakers: 2

## Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer
- Ease of Installation: Autostore
- Ease of Use: Auto Volume Leveller (AVL), AutoPicture, AutoSound, Settings assistant Wizard, EasyLink
- Remote Control: TV
- Screen Format Adjustments: 4:3, unscaled (dot by dot), 16:9, Normal, Zoom, Full, Movie Expand, Wide
- Multimedia: auto slideshow

## Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: JPEG Still pictures, Motion JPEG 320x240 30fps, PCM

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm F-type
- TV system: ATSC, NTSC
- Video Playback: NTSC
- Tuner bands: UHF, VHF

## Connectivity

- AV 1: Shared audio L/R in, CVBS/YpPr
- Audio Output - Digital: Coaxial (cinch)
- Other connections: Headphone out, PC-In VGA, Shared audio L/R in
- USB: USB
- HDMI 1: HDMI, Shared audio L/R in
- HDMI 2: HDMI, Shared audio L/R in
- HDMI 3: HDMI, Shared audio L/R in
- EasyLink (HDMI-CEC): One touch play, Power status, System info (menu language), Remote control pass-through, System audio control, System standby

## Power

- Ambient temperature: 5°C to 40°C (41°F to 104°F)
- Mains power: 120V/60Hz
- Power consumption: 89 W
- Standby power consumption: < 0.5W


## Dimensions

- Set dimensions in inch (W x H x D): 36.4 x 21.8 x 3.9 inch

- Product weight (lb): 19.63 lb
- Set dimensions with stand in inch (W x H x D): 36.4 x 23.7 x 8.1 inch
- Product weight (+stand) (lb): 21.39 lb
- Box dimensions in inch (W x H x D): 42.2 x 25.2 x 6.5 inch
- Weight incl. Packaging (lb): 26.46 lb
- VESA wall mount compatible: 200 x 200 mm

## Accessories

- Included accessories: Table top stand, Quick start guide, User Manual, Remote Control, Batteries for remote control

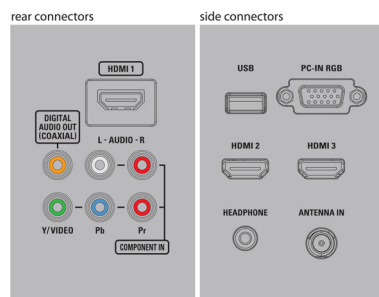

Issue date 2014-10-27

Version: 2.1.1

12 NC: 8670 001 13031  
UPC: 6 09585 24209 8

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)