

Philips  
DVD player



DVP3560

## Get sharper, clearer pictures

with HDMI 1080p upscaling

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

### **Bring audio and video to life**

- HDMI 1080p upscales to high definition for sharper pictures
- Progressive Scan component video for optimized image quality
- Screen Fit for optimal viewing every time

### **Connect and enjoy multiple sources**

- Hi-Speed USB 2.0 Link plays video/music from USB flash drive

### **Easy to use**

- EasyLink to control all HDMI CEC devices via a single remote
- One-touch MP3 creation directly from CDs onto USB sticks
- My Wallpaper for a personalized welcome screen

### **Play all your movies and music**

- DivX Ultra Certified for enhanced DivX video playback
- Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG

# PHILIPS

# Highlights

## HDMI 1080p

HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

## DivX Ultra Certified




With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

## Multimedia DivX


Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG

## Hi-Speed USB 2.0 Link

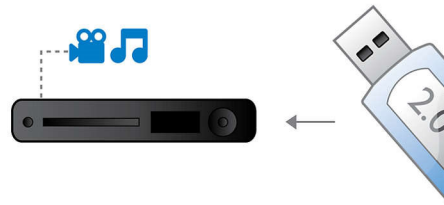

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

## Screen Fit



Whatever you're watching, and on any TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full-screen

## One-touch MP3 creation



Convert the contents of your favorite CDs to MP3 files on your Philips product, and store it directly on a thumbdrive or on your portable media player through a USB cable. Enjoy the convenience of creating MP3 files right in your living room, without a PC, and even while the CD is playing.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.



# Specifications

## Picture/Display

- Picture enhancement: Progressive scan, Video Upscaling(720p, 1080i/p)
- D/A converter: 12 bit, 108 MHz

## Sound

- Sound System: Dolby Digital
- Crosstalk (1kHz): > 100 dB
- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Distortion and Noise (1kHz): > 85 dB
- Signal to noise ratio: > 100 dB
- Dynamic Range (1kHz): > 90 dB

## Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Brazilian Portuguese, Canadian French, Mexican Spanish

## Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: DivX, JPEG Still pictures, MP3

## Connectivity

- Front / Side connections: USB
- Rear Connections: Analog audio Left/Right out, ComponentVideo out Progressive, Composite video (CVBS) output, Digital coaxial out, HDMI output

## Power

- Power consumption: < 10 W
- Standby power consumption: < 0.5 W
- Power supply: 120V, 60Hz

## Dimensions

- Set Height: 39 mm

- Set Width: 360 mm
- Set Depth: 209 mm
- Packaging Depth: 282 mm
- Weight incl. Packaging: 1.8 kg
- Packaging Height: 80 mm
- Packaging Width: 400 mm
- Set weight: 1.3 kg

## Accessories

- Included accessories: 2 x AAA Batteries, Remote Control, User Manual, Quick start guide, Audio/Video cable, Power cord, Warranty Leaflet

## Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DivX, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra
- Video disc playback system: PAL, NTSC

## Audio Playback

- Compression format: MP3, Dolby Digital, PCM, WMA
- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- MP3 bit rates: 32 - 320 kbps

## Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD
- Picture Enhancement: Flip photos, Rotate, Zoom, Slideshow, Slideshow with MP3 playback



Issue date 2024-08-10

Version: 4.4.2

UPC: 6 09585 19120 4

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)