

Philips
Blu-ray Disc player

BDP5506



Limitless possibilities

3D Playback, certified Wi-Fi, MediaConnect

Enjoy the latest in Blu-ray technology. From 3D playback to Wireless access to Video on Demand favorites and social networking. Surf the web, view any content from your PC, and wirelessly share it on your TV with Philips MediaConnect.

See more

- 1080p at 24 fps for cinema-like images
- Blu-ray Disc playback for sharp images in full HD 1080p
- Full HD 3D for a truly immersive 3D movie playback
- Netflix-Streaming TV Episodes and Movies over the Internet

Hear more

- Dolby Digital Plus for high fidelity 7.1 surround sound
- Dolby TrueHD for high fidelity 7.1 surround sound

Engage more

- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- Connect a PC to a TV wirelessly with MediaConnect
- NetTV with Wireless access to online services on your TV
- Wirelessly connect to the internet right out of the box

PHILIPS

Highlights

3D



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the Full HD 3D viewing experience is created. Premium 3D movie releases on Blu-ray offer a wide and high quality content selection.

MediaConnect



Share your videos and pictures from your laptop on the TV wirelessly. Once installed on your laptop operation is very easy. With a click of your mouse you share the whole of your laptop screen with the TV. Use the familiar media player in your laptop, or browse webpages via your favorite web browser. No more worries about file types, if your PC can play it, your TV will

show it. For your own enjoyment, and great fun to share with others.

NetTV




Experience a rich selection of online services with Net TV wirelessly. Enjoy movies, pictures, infotainment and other online content directly on your TV whenever you like. Wirelessly navigate and select what you want to watch with the TV remote control. The Philips menu gives you access to popular Net TV services fitted for your TV screen.

1080p at 24 fps



Bring true cinema experience into your living room with 24 frames-per-second video. Original films are all recorded at this frame rate, providing an ambience and image texture that is so unique. Philips Blu-ray Disc players are equipped to bring you 24fps directly from Blu-ray Discs - thus giving you sensational cinema-like high definition images that will astound you.

Dolby TrueHD

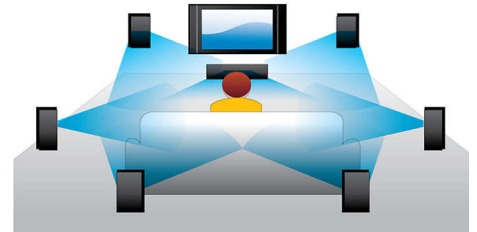

Dolby TrueHD delivers 7.1 channels of the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD completes your high definition entertainment experience.

Netflix

NETFLIX

Instantly watch TV episodes and movies as often as you want on your Philips TV. All you need is an internet connection (either Wi-Fi or Ethernet) and a Netflix membership package that includes streaming, and you are ready to go.

Online Premium Video on Demand

Enjoy Premium movies wirelessly to your TV from Vudu and Netflix. From the greatest romantic classics to fast action movies, it's all there at a push of a button from the comfort of your sofa. Free yourselves from fixed program timeslots, and watch what you like, when you like.



Specifications

Picture/Display

- Aspect ratio: 16:9, 4:3
- Picture enhancement: Progressive scan, Video upscaling, High Def (720p, 1080i, 1080p), Noise Reduction
- D/A converter: 12 bit / 150MHz

Sound

- Sound System: Dolby Digital Plus, Dolby True HD, DTS-HD Master Audio Essential

Convenience

- Child Protection: Parental Control
- OSD Languages: English, French, Spanish

Multimedia Applications

- Playback Formats: JPEG Still pictures, MP3

Connectivity

- Front / Side connections: USB
- Rear Connections: Analog audio Left/Right out, Analog audio Multi-channel out, Composite video (CVBS) output, Digital coaxial out, HDMI output, Ethernet

Power

- Power consumption: 15 W
- Standby power consumption: 0.4W
- Power supply: 120V, 60Hz

Dimensions

- Set Height: 38.9 mm
- Set Width: 435 mm
- Set Depth: 213.85 mm
- Packaging Depth: 329 mm
- Weight incl. Packaging: 3.3 kg
- Packaging Height: 97 mm

- Packaging Width: 541 mm
- Set weight: 2 kg

Accessories

- Included accessories: Audio Cable, Quick start guide, IFU / User Manual, Product Registration Card, Remote Control, 2 x AAA Batteries
- User Manual: English, French, Spanish

Video Playback

- Playback Media: CD-R/CD-RW, DVD-Video, DVD-R/-RW, CD, DVD, BD 3D, BD Video, BD-R/RE 2.0, BD-ROM
- Compression formats: MPEG2, H.264, AVCHD
- Video disc playback system: NTSC
- Video Enhancement: Progressive Scan, Video Upscaling
- Disc Playback Modes: Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Skip, Search forward/reverse, Slow Forward, Standard Play
- DVD Region: 1
- Picture Quality Enhancements: Video upscaling
- BD Region: A

Audio Playback

- Compression format: MP3, PCM, Dolby Digital, DTS
- Playback Media: MP3-CD, CD-R/RW, CD, MP3-DVD
- Multichannel decoding: Dolby Digital

Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: CD-R/RW, DVD-R/-RW, Kodak Picture CD
- Picture Enhancement: Slideshow, Rotate, Zoom, High Definition Resolution



Issue date 2024-08-10

Version: 3.3.3

UPC: 6 09585 19562 2

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* In order to enjoy viewing 3D content, the following is required: a Blu-Ray 3D compatible television with a 3D emitter; a pair of television compliant 3D glasses; a HDMI cable connection; and a Blu-Ray Disc with 3D content.

* In order to enjoy Internet services and content on your television, broadband internet service is required. Internet services and content, picture quality and picture size may vary depending on your broadband speed. For best results, your broadband speed should be at least 2.5 Mbps for SD content.

* Internet content displayed on your television is made available by Third Party Providers who reserve the right to change and/or terminate such content at any time with or without notice. Additional fees and/or PC registration may be required in order to receive Premium content.