

Philips  
Blu-ray Disc player



BDP7520



## Limitless Possibilities with wireless 3D Blu-ray

### & Philips MediaConnect

Enjoy the latest in Blu-ray technology. From 3D playback to Wireless access to Video on Demand favorites and social networking. Surf the web, view any content from your PC, and wirelessly share it on your TV with Philips MediaConnect.

#### See more

- Full HD 3D for a truly immersive 3D movie playback
- Blu-ray Disc playback for sharp images in full HD 1080p
- 1080p at 24 fps for cinema-like images
- DivX Certified for standard playback of DivX videos

#### Engage more

- Wirelessly connect to the internet right out of the box
- Connect a PC to a TV wirelessly with MediaConnect
- DLNA Network Link to enjoy photos and videos from your PC
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- NetTV with Wireless access to online services on your TV

#### Hear more

- Dolby TrueHD for high fidelity 7.1 surround sound

# PHILIPS

# Highlights

## 3D

Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the Full HD 3D viewing experience is created. Premium 3D movie releases on Blu-ray offer a wide and high quality content selection.

## MediaConnect



Share your videos and pictures from your laptop on the TV wirelessly. Once installed on your laptop operation is very easy. With a click of your mouse you share the whole of your laptop screen with the TV. Use the familiar media player in your laptop, or browse webpages via your favorite web browser. No more worries about file types, if your PC can play it, your TV will show it. For your own enjoyment, and great fun to share with others.

## Online Premium video on Demand


Enjoy Premium movies wirelessly to your TV from Vudu and Netflix. From the greatest romantic classics to fast action movies, it's all there at a push of a button from the comfort of your sofa. Free yourselves from fixed program timeslots, and watch what you like, when you like.

## NetTV



Experience a rich selection of online services with Net TV wirelessly. Enjoy movies, pictures, infotainment and other online content directly on your TV whenever you like. Wirelessly navigate and select what you want to watch with the TV remote control. The Philips menu gives you access to popular Net TV services fitted for your TV screen.

## DivX Certified

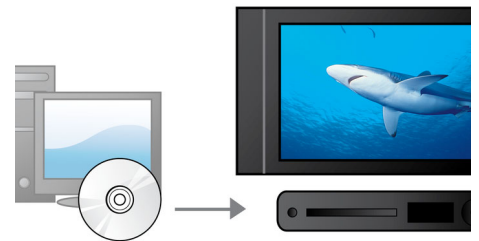

With DivX support, you are able to enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs.

## 1080p at 24 fps

Bring true cinema experience into your living room with 24 frames-per-second video. Original films are all recorded at this frame rate, providing an ambience and image texture that is so unique. Philips Blu-ray Disc players are equipped to bring you 24fps directly from Blu-ray Discs - thus giving you sensational cinema-like high definition images that will astound you.

## Dolby TrueHD

Dolby TrueHD delivers 7.1 channels of the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD completes your high definition entertainment experience.



# Specifications

## Picture/Display

- D/A converter: 12 bit / 150MHz
- Picture enhancement: Progressive scan, Video upscaling, High Def (720p, 1080i, 1080p), Noise Reduction
- Aspect ratio: 16:9, 4:3

## Sound

- D/A converter: 24 bit, 192 kHz
- Dynamic Range (1kHz): 100 dB
- Frequency response: (20kHz)  $\pm 0.5$ dB (Max./Min. 2ch, DVD) Hz
- Signal to noise ratio: 120 dB
- Sound System: DTS, Dolby Digital Plus, Dolby True HD

## Video Playback

- Playback Media: CD-R/CD-RW, DVD-Video, DVD-R/-RW, CD, DivX, DVD, BD Video, BD-R/RE 2.0, BD-ROM
- Compression formats: MPEG2, H.264, VC-1, DivX 6.0
- Video disc playback system: NTSC
- Disc Playback Modes: Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Skip, Search forward/reverse, Slow Forward, Standard Play
- DVD Region.: 1
- Picture Quality Enhancements: Video upscaling
- Video Enhancement: Progressive Scan, Video Upscaling

## Audio Playback

- Playback Media: MP3-CD, CD-R/RW, CD, MP3-DVD
- Compression format: MP3, PCM, Dolby Digital, DTS
- Multichannel decoding: Dolby Digital

## Still Picture Playback

- Playback Media: CD-R/RW, DVD-R/-RW
- Picture Compression Format: JPEG
- Picture Enhancement: Slideshow, Rotate, Zoom, High Definition Resolution

## Multimedia Applications

- Playback Formats: JPEG Still pictures, MP3

## Connectivity

- Rear Connections: Analog audio Left/Right out, Analog audio Multi-channel out, Component Video output, Composite video (CVBS) output, Digital coaxial out, HDMI output, Ethernet

## Convenience

- Child Protection: Parental Control
- OSD Languages: English, French, Spanish

## Accessories

- Included accessories: Audio Cable, Quick start guide, IFU / User Manual, Product Registration Card, Remote Control, 2 x AAA Batteries
- User Manual: English, French, Spanish

## Power

- Power supply: 120V, 60Hz
- Power consumption: 29 W
- Standby power consumption: 0.8W

## Dimensions

- Set dimensions (W x H x D): 435 x 50 x 215 mm
- Packaging dimensions (W x H x D): 540 x 106 x 328 mm
- Weight incl. Packaging: 3.4 kg
- Set weight: 2.3 kg



Issue date 2019-03-05

Version: 1.9.1

12 NC: 8670 000 67958  
UPC: 6 09585 19615 5

© 2019 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)