



Philips  
5.1 3D Blu-ray Home  
theater

3D Blu-ray  
WiFi

HTB3524

## Powerful Surround Sound

with Wi-Fi connectivity and 3D Blu-ray

Be amazed with Blu-ray 3D and discover a new dimension in your movie experience at home. Enjoy the best of internet on your TV with Netflix and Vudu, hassle-free with speedy built-in Wi-Fi and playback more than ever before with DivX+ HD.

### Simply enjoy all your entertainment

- Audio in to enjoy music from iPod/iPhone/MP3 player
- Built-in WiFi to enjoy your connected media wirelessly
- DivX Plus HD Certified for high definition DivX playback
- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- HDMI for high definition movies and picture quality

### Designed to enhance your cinema at home

- Dolby TrueHD and DTS-HD for high fidelity surround sound
- Exposed speaker drivers for powerful surround sound
- 300W RMS power delivers great sound for movies and music

# PHILIPS

# Highlights

## Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your

home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

## HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.

## 300W RMS power




300W RMS power delivers great sound for movies and music

## Built-in WiFi



Thanks to built-in WiFi, by simply connecting your home theater directly to your home network, you can experience a rich selection of popular online services. You can enjoy some of the best websites offering movies, pictures, infotainment and other online contents tailored to fit your TV screen.

## Dolby TrueHD and DTS-HD

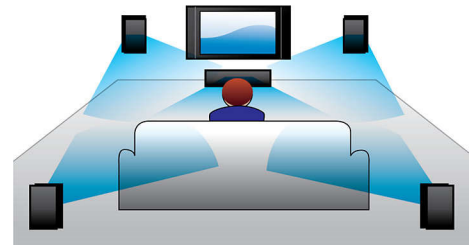

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.



# Specifications

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps)

## Sound

- Sound System: Dolby True HD, DTS-HD Master Audio Essential, Dolby Digital 5.1, Dolby Digital Plus
- Subwoofer output power: 50 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Center speaker output power: 50 W
- Satellite speaker output power: 4 x 50 W
- Total Power RMS @ 30% THD: 300 W

## Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers
- Center speaker drivers: 1 x 2.5" woofers
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 4 ohm
- Center speaker impedance: 4 ohm
- Subwoofer type: Passive
- Center speaker freq range: 150 - 20k Hz
- Drivers per Satellite speaker: 1 x 2.5" woofer
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby, Dynamic Lipsync
- HDMI Features: 3D, Audio Return Channel (ARC), Deep color, Content Type
- Online services: Netflix, Vudu, Pandora, Picasa, YouTube

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

## Connectivity

- Front Connections: Audio in, USB
- Integrated Connections: Wi-Fi
- Rear Connections: Digital coaxial in, Digital optical in, Easy-Fit Speaker Jacks, Ethernet, HDMI 1.4 output (ARC), AUX IN 1, Fixed FM Antenna
- Smart TV: Online Services

## Power

- Power consumption: 60 W
- Standby power consumption: <0.35 W
- Power supply: 110V, 60Hz

## Dimensions

- Main Unit (W x H x D): 360 x 55 x 290 mm
- Main Unit Weight: 2.40 kg
- Center Speaker (W x H x D): 84.5 x 89 x 89 mm
- Center Speaker Weight: 0.28 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 84.5 x 89 x 89 mm
- Subwoofer (W x H x D): 160 x 267.5 x 265mm mm
- Front Speaker Weight: 0.28 kg
- Subwoofer Weight: 2.5 kg
- Front Speaker cable length: 3 m
- Rear Speaker Weight: 0.28 kg
- Rear Speaker cable length: 7 m
- Subwoofer cable length: 3 m

## Accessories

- Included accessories: Remote Control, FM antenna, User Manual, 2 x AAA Batteries

## Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, H.264, ISO

## Audio Playback

- Compression format: AAC, FLAC, MP3, WAV, WMA, Dolby Digital, DTS, Ogg Vorbis
- MP3 bit rates: 32 - 320kbps

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Zoom

## Product dimensions

- Height: 5.8 cm
- Width: 36 cm
- Depth: 32.5 cm
- Width: 14.2 inch
- Height: 2.3 inch
- Depth: 12.8 inch
- Weight: 2.45 kg
- Weight: 5.401 lb

## Packaging dimensions

- Height: 30 cm
- Packaging type: Carton
- Width: 52 cm
- Height: 11.8 inch
- Number of products included: 1
- Depth: 37.7 cm
- Type of shelf placement: Laying
- Width: 20.5 inch
- Depth: 14.8 inch
- Nett weight: 6.45 kg
- Nett weight: 14.220 lb
- Gross weight: 7.8 kg
- Gross weight: 17.196 lb
- Tare weight: 1.35 kg
- Tare weight: 2.976 lb
- UPC: 6 09585 24075 9

## Outer Carton

- Length: 52 cm
- Number of consumer packagings: 1
- Length: 20.5 inch
- Width: 37.7 cm
- Height: 30 cm
- Width: 14.8 inch
- Height: 11.8 inch

# Specifications

- Nett weight: 6.45 kg
- Gross weight: 7.8 kg
- Nett weight: 14.220 lb
- Gross weight: 17.196 lb
- Tare weight: 1.35 kg
- Tare weight: 2.976 lb
- UPC: 6 09585 24075 9

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## File Format

- Audio: aac, mka, mp3, wma
- Video: avi, divx, mkv, mp4, mpeg, mpg, wmv
- Picture: GIF, JPEG, JPG



Issue date 2024-08-16

Version: 3.3.9

UPC: 6 09585 24075 9

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* To check whether Video on Demand is available in your country,  
please visit [www.philips.com/blu-ray](http://www.philips.com/blu-ray).

\* DivX, DivX Certified, and associated logos are trademarks of  
DivXNetworks, Inc. and are used under license.

\* Dolby and the double-D symbol are registered trademarks of Dolby  
Laboratories Inc.