

Philips  
DVD player

DVP1013



## Simply plays it all

Introducing a dream player that promises flawless, true-to-life picture quality and the ability to play virtually any disc! This Philips DVD player delivers your movies and music entertainment experience right in your personal environment.

### Bring audio and video to life

- 12-bit/108MHz video processing for sharp and natural images
- 192kHz/24 bit audio DAC enhances analogue sound input
- Progressive Scan component video for optimized image quality
- High quality outputs for analog and digital audio

### Fits any space, any lifestyle

- Ultra-slim design that fits anywhere

### Play all your movies and music

- Plays MP3, WMA and JPEG digital camera photos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW


# PHILIPS

# Highlights

## Plays it all

Play MP3s, WMA and JPEGs, and experience the convenience of sharing media files on your TV or home theater system - in the comfort of your living room.


## 192kHz/24 bit audio DAC

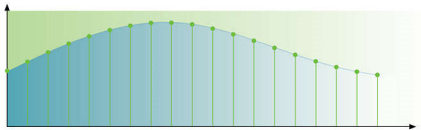

192KHz sampling enables you to have an accurate representation of the original sound

curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

## Progressive Scan

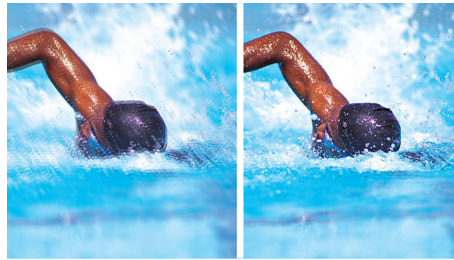

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the

odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

# Specifications

## Picture/Display

- Picture enhancement: Progressive scan, Video upsampling
- D/A converter: 12 bit, 108 MHz

## Sound

- Crosstalk (1kHz): 70 dB
- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Distortion and Noise (1kHz): 65 dB
- Signal to noise ratio: 90
- Dynamic Range (1kHz): 80 dB

## Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: Canadian French, English, Mexican Spanish

## Connectivity

- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, Digital coaxial out, ComponentVideo out Progressive

## Power

- Power consumption: < 10 W
- Standby power consumption: < 1 W
- Power supply: 120V, 60Hz

## Dimensions

- Packaging Depth: 290 mm

- Packaging Height: 95 mm
- Packaging Width: 314 mm

## Accessories

- Included accessories: 2 x AAA Batteries, Audio/Video cable, Remote Control, Product Registration Card, User Manual, World Wide Warranty leaflet

## Video Playback

- Playback Media: CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, DVD-Video, Video CD/SVCD, CD, DVD
- Compression formats: MPEG1, MPEG2
- Video disc playback system: NTSC, PAL

## Audio Playback

- Compression format: Dolby Digital, MP3, PCM, WMA
- Playback Media: Audio CD, CD-R/RW, CD, MP3-CD, MP3-DVD, WMA-CD
- MP3 bit rates: 32 - 256 kbps

## Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Kodak Picture CD, Picture CD
- Picture Enhancement: Flip photos, Rotate, Slideshow, Zoom



Issue date 2024-08-16

Version: 3.3.5

UPC: 6 09585 17188 6

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)