


Philips
Blu-ray Disc/ DVD player

3D playback



BDP2985

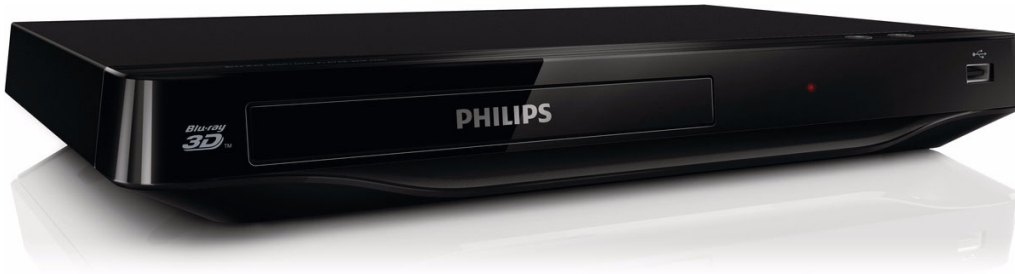

Wireless Streaming Entertainment

With 3D Blu-ray playback

Stunning 3D effects in picture depth and action that both leaps off the screen, and draws you deep into the experience. Enjoy the best of internet on your TV with Netflix, Vudu and YouTube.

See more

- Netflix-Streaming TV Episodes and Movies over the Internet
- Watch YouTube videos directly on your big screen TV*
- Blu-ray 3D Disc playback for a full HD 3D experience at home
- DivX Plus HD Certified for high definition DivX playback
- DVD video upscaling to 1080p via HDMI for near-HD images

Hear more

- Dolby TrueHD for high fidelity sound

Engage more

- Direct remote access to Netflix and Vudu movie services
- USB 2.0 plays video/music from USB flash/hard disk drive
- Built-in WiFi-n for faster, wider wireless performance
- EasyLink to control all HDMI CEC devices via a single remote
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content

PHILIPS

Blu-ray Disc/ DVD player
3D playback


Highlights

Blu-ray 3D Disc playback



Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the full-HD 3D viewing experience is created.

Dolby TrueHD

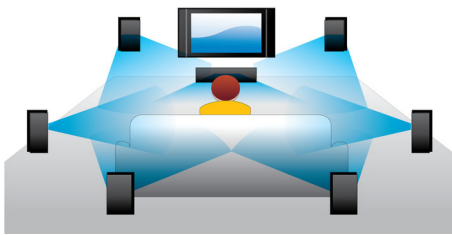

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

Netflix

NETFLIX

Instantly watch TV episodes and movies as often as you want on your Philips TV. All you need is an internet connection (either Wi-Fi or

Ethernet) and a Netflix membership package that includes streaming, and you are ready to go.

Direct remote Netflix and Vudu

To speed up the process, and make it more user-friendly, there are Netflix and VUDU shortcut buttons on remote control that allow you to do the basic commands necessary both for watching your video and for controlling the general interface.

YouTube videos



Get YouTube videos on your TV now. Enjoy the huge collection of online videos on a larger screen, without even having to turn your computer on. Simply ensure that your Blu-ray player or Home theater system is connected to the Internet, either wirelessly* or through cables - then sit back and enjoy the best of YouTube.

DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

BDP2985/F7

WiFi-n



WiFi-n, also known as IEEE 802.11n, is the new wireless network standard. It includes many new options to improve the quality of the wireless link, offering faster speed and wider range compared to previous WiFi standards. WiFi-n also features backward compatibility, which makes it possible for this player to transmit to and receive from routers that operate on older WiFi standards.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

USB 2.0

The Universal Serial Bus or USB is an industry standard that allows high-speed, easy connection of peripherals to PCs, consumer electronics and mobile products. The USB 2.0 provides better and faster performance - up to 40 times quicker than the USB 1.0 and with a data transfer rate of up to 480 Mbps from the original 12 Mbps. When plugged in, everything configures automatically. With USB 2.0, simply plug in your USB portable devices or hard disk drives, select the movie, music or photo and play away.

NETFLIX



YouTube



Specifications

Accessories

- Included accessories: 2 x AAA Batteries, Product Registration Card, Quick start guide, Remote Control, User Manual
- User Manual: Canadian French, English, Mexican Spanish

Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- BD Region Code: A
- DVD Region Code: 1
- Compression formats: DivX Plus™ HD, H.264, MPEG1, MPEG2, MPEG4, XviD
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- Video Enhancement: Progressive Scan, Video Upscaling, Deep Color, x.v. Color

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, m2ts, mkv, mp4, mpeg, mpg

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Connectivity

- Front Connections: USB 2.0
- Rear Connections: Digital coaxial out, HDMI output
- Integrated Connections: Wi-Fi

Convenience

- BD-Live(1GB USB memory needed)
- Child Protection: Parental Control
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade
- Online services: Netflix, Vudu, YouTube
- On-Screen Display languages: English, Mexican Spanish

Dimensions

- Product (W x H x D): 310 x 40 x 203 mm
- Product weight: 1.25 kg
- Packaging (W x H x D): 420 x 90 x 303 mm
- Weight incl. Packaging: 2.0 kg

Picture/Display

- Aspect ratio: 4:3, 16:9, 21:9
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling
- D/A converter: 12Bit/148MHz

Power

- Power consumption: 11 W
- Power supply: 110V, 60Hz
- Standby power consumption: < 1W

Sound

- Sound Enhancement: Night Mode
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out



Issue date 2019-02-28

Version: 4.3.4

12 NC: 8670 000 96221
UPC: 6 09585 22964 8

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com