

Philips  
Smart clothes drying rack

### Split level rods

LED lighting  
Air drying and heat drying  
Remote controlling



SDR601UBW0

## Split level rods

Keep your clothes fully bathing in sunshine

SDR601 makes proper use of space with split level rods, enabling every piece of your clothes to fully bath in sunshine. You can also enjoy smarter clothes drying with LED lighting, automatic rack lifting, air drying and heat drying.

#### **Caring design for more drying possibilities**

- Meet different clothes drying needs
- Fit into different sizes of balconies
- To dry more clothes

#### **Designed to ease your life**

- Allow rack lifting with one click
- To stop and lift rack with ease

#### **Smart operations for convenient life**

- Ensure fast clothes drying
- Allow worry-free clothes drying in all weathers

# PHILIPS

# Highlights

## 2-mode air drying



Two cross flow fans of SDR601 can efficiently remove moisture from clothes with strong airflow, making clothes drying faster than ever. The 2 drying modes "Standard" and "Intensive" allow clothes drying to stop automatically after 2 hours and 4 hours. This brings higher efficiency, making worry-free clothes drying experience.

## 35 kg load capacity



SDR601 has 36 hanging holes and an impressive 35 kg load capacity, allowing more clothes to dry at one time. If clothing weigh more than 35 kg, the motor would stop automatically and initiate an alert to ensure your safety in use.

## 4 split level rods



The 2 clothes rods have well-distributed holes for hanging, ensuring sufficient ventilation and

sunshine for clothes to dry off. 2 more split level rods can dry both clothes and quilts. Bedding drying will no longer be a trouble for you.

## Adjustable rods




With its 1.2+1.0meters adjustable rods, the drying rack adapts to many family use scenarios. It gives more drying space when extended and save space when retracted, making it perfectly fit for small-sized balconies. You can also install it at two sides of your balcony to avoid its influences to your leisure activities and the look of the balcony.

## Obstacle sensing




Gently hold the descending rack to stop it. After hanging clothes up, slightly push with your hands, and the rack will go up automatically. No need to turn around for remote control, clothes drying becomes much easier.

## Remote control

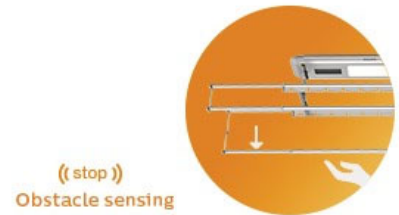

Enjoy one click on remote control to monitor clothes drying. The DC motor lets the drying rack move quietly and fast. It takes only 20 seconds for the rack to go up or down. Without too much waiting, you can enjoy an efficient life as you like.

## Smart heat drying

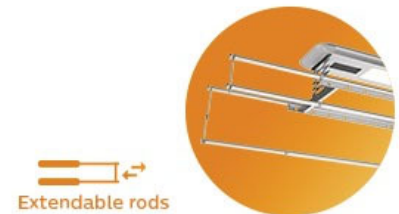

With two cross flow fans and a temperature-controlled heater, the drying rack can keep venting 40-50 jãC warm air, creating a dry space within the rack area. So even during plum rain season, your clothes can dry fast. Two heat drying modes 'Standard' and 'Intensive' support automatic stopping of clothes drying after 2 hours and 4 hour. While ensuring fast clothes drying, it also helps to save energy and protect clothes from aging due to long heating.

Smart clothes drying rack  
Split level rods LED lighting, Air drying and heat drying, Remote controlling

SDR601UBW0/97

# Specifications

## Color scheme

- White

## Net weight of product

- 13 kg

## Dimensions of product (LxWxH)

- 2,200x513x194 mm

## Drop distance

- 0-1,100 mm

## Maximum load

- 35 kg

## Power supply

- Input voltage: 220 V
- Rated power of product: 712 W
- Rated power of heat drying: 350 W\*2
- Rated power of air drying: 12 W\*2
- Rated power of LED lamp: 12 W



Issue date 2022-10-07

Version: 1.0.1

12 NC: 8670 001 86173  
EAN: 69 73746 14070 2

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)