


Philips
Smart safe box

Keyless unlocking

Free handle
Backup system
Abnormal alert

SBX701B7G0

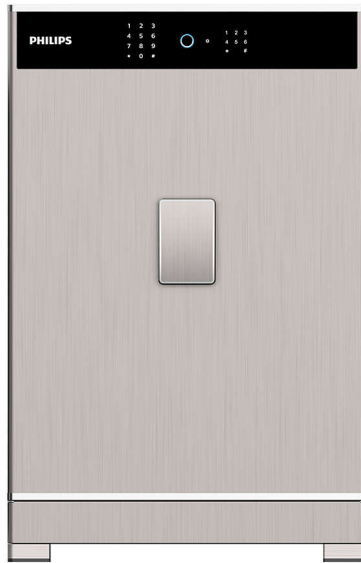

Secure your valuables

With quality alloy steel casting

Philips SBX701 secures your valuables with keyless unlocking and 2 independent unlocking systems. The primary system supports both fingerprints and PIN codes, the backup system is for emergency use and supports PIN codes only.

Caring details for better protection to privacy

- Keep your valuables stored in order
- Offer additional protection for your valuables
- For easy use in dark environment
- Give full-time protection

Craftsmanship ensures safety and reliability

- Leave no hidden risk and give full security
- Prevent violent unlocking
- Locked tight at four sides for better protection

Convenience at core, highly secure

- Support both fingerprints and PIN codes
- Provide enhanced security

PHILIPS

Smart safe box

Keyless unlocking Free handle, Backup system, Abnormal alert

SBX701B7G0/97

Highlights

Back-up system



The safe box has 2 independent unlocking systems. When the primary system crashes, enabling the backup system can ensure the normal operation of the safe and avoid being unable to take out your belongings due to blocking or system crash.

Keyless unlocking



Unlike the traditional safe box with mechanical key, this safe box adopts a semi-conductor fingerprint sensor and a touch keypad, allowing unlocking with both fingerprints and PIN codes. A light touch to wake up the system and have quick identification. No need to use mechanic key brings smoother and faster unlocking experience.

Abnormal alert



SBX701 has multiple alert functions such as vibration alert, false alert, low-voltage alert, etc. In case of abnormal situations, it gives high-

pitch sound to give your valuables all-day protection.

Hidden compartment



With the hidden compartment at the bottom, the safe box provides you a more secure and private storing space.

Interior light



The safe has interior light that turns on upon opening of the safe door, ensuring worry-free use experience in dark environment.

Separate storage sections



The proper interior layout and the sliding drawers make the safe perfectly fit for small valuables such as jewelry. The stylish and high-quality interior material gives the safe soft touch and brings pleasant storing experience.

32 mm solid deadbolts



32 mm solid deadbolts at four sides of the door provide excellent anti-prying performance and enhance security. The deadbolts are made of stainless steel, making it resistant to rusting and corrosion.

Free handle



After the safe is locked, the handle separates from gearing and enters into free state. It eliminates the threat of forced unlocking from outside by breaking the handle.

One-piece cabinet



SBX701 has an one-piece cabinet, making it solid and secure. The built-in touch keypad gives it a simplistic look and offers better protection to the electronic circuit board. All makes this safe box highly functional, stylish, secure and trustworthy.

Smart safe box

Keyless unlocking Free handle, Backup system, Abnormal alert

SBX701B7G0/97

Specifications

Color scheme

- Gray

Power supply

- Battery life*: 6-12 months
- Working voltage: 4.5 ~ 6 V
- Battery for backup system: 4 pieces AA battery

Net weight of product

- 131 kg

Dimensions of product (LxWxH)

- 750x500x460 mm

Unlocking methods

- Fingerprint: maximum 30 sets
- PIN code: maximum 10 sets

Indicator lights

- Blue: normal working
- Green: recognition succeeded
- Red: recognition failed
- Red light flashing: low voltage, abnormal alert



Issue date 2024-06-03

Version: 1.0.1

EAN: 69 73746 14063 4

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* The battery life (stand-by time) depends on the actual usage.