

PHILIPS

Smart rim lock

5000 series


Auto locking

Hidden PIN code

One-time PIN code



DDL151Z00GB

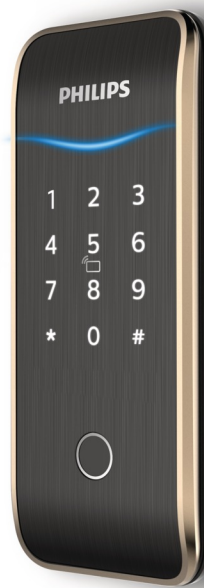

Simple and compact design

Allow easy installation

Simple design, which is also compact and thin, allows easy installation of different types of doors. Automatic locking, etc. provide you with a better smart life.

Smart life locked with excellence

- Say goodbye to the key-only era
- Eliminate the hassle of manually locking

Easy life doesn't stop here

- Convenient for the visitors
- Easy installation in different scenario

Intensive protection for home security

- Protect your password from being peeping

Highlights

Various ways of unlocking



Various ways of unlocking



Multiple choices as fingerprint, PIN code, key tag, and app meet different unlocking needs and allow users to enjoy a smart and convenient door opening experience.

Fully auto mortise



Fully auto mortise




Philips 5100-6HBS employs fully automatic mortise. Without the need for any extra action, the deadbolt will spontaneously pop up after closing the door. If the door is not locked properly, the mortise will give an alert to remind you of the door lock status.

One-time PIN code



One-time PIN code

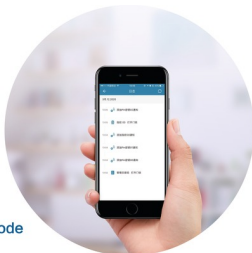

When visitors or cleaners come while you are not at home, you can set a one-time password in advance, and it will become invalid after

being used. There is no need to change the master PIN code frequently, which eliminates the hassle of resetting the PIN code(s).

Compact design



Compact design



The simple and compact design allows easy installation for home, studio, office, etc., which is widely suitable for installation on both inside and outside doors, which could also ensure a private space.

Hidden PIN code



Hidden PIN code



Featured 32-digit hidden PIN code technology, Philips 5100-6HBS allows you to enter any random number combination to get identified and unlock the door as long as there is a consecutive input of the real password. This feature can effectively prevent peeping and safeguard your real password.

Access Solution

Card/Key Tag
Fingerprint
Password/PIN Code

Design & Appearance

Color: Champagne gold, Obsidian black
Fingerprint Sensor: Semiconductor

Easy Operation

Indicator: Door locks status prompt, Low battery prompt, Mute status prompt, Outside forced lock prompt, System locking prompt
Voice Guide: Human voice guide

Installation

Door Opening Direction: Left inward opening, Left outward opening, Right inward opening, Right outward opening
Door Thickness: 30-50 mm, 50-90 mm, Other range*
Door Type: Antitheft door, Copper door, Wooden door

Lock Capacity

Master PIN Code: 1
One-time PIN Code: 1

Mode

Operating Mode: Auto mode, Manual mode

Power Specification

Emergency Power Supply: 5V power bank
Maximum Batteries Capacity: 4 batteries

