

Philips  
Blu-ray Disc player

BDP5506



## Limitless possibilities

3D Playback, certified Wi-Fi, MediaConnect

Enjoy the latest in Blu-ray technology. From 3D playback to Wireless access to Video on Demand favorites and social networking. Surf the web, view any content from your PC, and wirelessly share it on your TV with Philips MediaConnect.

### Engage more

- Connect a PC to a TV wirelessly with MediaConnect
- Net TV with Wireless access to online services on your TV
- Wirelessly connect to the internet right out of the box
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content

### See more

- Full HD 3D for a truly immersive 3D movie playback
- Blu-ray Disc playback for sharp images in full HD 1080p
- 1080p at 24 fps for cinema-like images
- Netflix-Streaming TV Episodes and Movies over the Internet

### Hear more

- Dolby TrueHD for high fidelity 7.1 surround sound
- Dolby Digital Plus for high fidelity 7.1 surround sound

# PHILIPS

# Highlights

## 3D



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the Full HD 3D viewing experience is created. Premium 3D movie releases on Blu-ray offer a wide and high quality content selection.

## MediaConnect



Share your videos and pictures from your laptop on the TV wirelessly. Once installed on your laptop operation is very easy. With a click of your mouse you share the whole of your laptop screen with the TV. Use the familiar media player in your laptop, or browse webpages via your favorite web browser. No more worries about file types, if your PC can

play it, your TV will show it. For your own enjoyment, and great fun to share with others.

## Net TV with Wireless




Experience a rich selection of online services with Net TV wirelessly. Enjoy movies, pictures, infotainment and other online content directly on your TV whenever you like. Wirelessly navigate and select what you want to watch with the TV remote control. The Philips menu gives you access to popular Net TV services fitted for your TV screen.

## 1080p at 24 fps



Bring true cinema experience into your living room with 24 frames-per-second video. Original films are all recorded at this frame rate, providing an ambience and image texture that is so unique. Philips Blu-ray Disc players are equipped to bring you 24fps directly from Blu-ray Discs - thus giving you sensational cinema-like high definition images that will astound you.-

## Dolby TrueHD

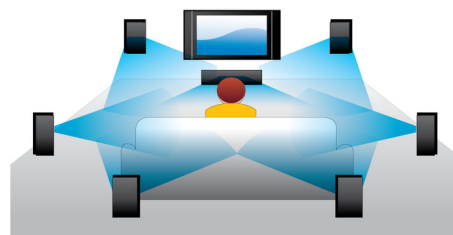

Dolby TrueHD delivers 7.1 channels of the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD completes your high definition entertainment experience.

## Netflix

# NETFLIX

Instantly watch TV episodes and movies as often as you want on your Philips TV. All you need is an internet connection (either Wi-Fi or Ethernet) and a Netflix membership package that includes streaming, and you are ready to go.

## Online Premium Video on Demand

Enjoy Premium movies wirelessly to your TV from Vudu and Netflix. From the greatest romantic classics to fast action movies, it's all there at a push of a button from the comfort of your sofa. Free yourselves from fixed program timeslots, and watch what you like, when you like.

# Specifications

## Picture/Display

- D/A converter: 12 bit / 150MHz
- Picture enhancement: Progressive scan, Video upscaling, High Def (720p, 1080i, 1080p), Noise Reduction
- Aspect ratio: 16:9, 4:3

## Sound

- Sound System: Dolby Digital Plus, Dolby True HD, DTS-HD Master Audio Essential

## Video Playback

- Playback Media: CD-R/CD-RW, DVD-Video, DVD-R/-RW, CD, DVD, BD 3D, BD Video, BD-R/RE 2.0, BD-ROM
- Compression formats: MPEG2, H.264, AVCHD
- Video disc playback system: NTSC
- Disc Playback Modes: Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Skip, Search forward/reverse, Slow Forward, Standard Play
- DVD Region.: 1
- Picture Quality Enhancements: Video upscaling
- Video Enhancement: Progressive Scan, Video Upscaling
- BD Region: A

## Audio Playback

- Playback Media: MP3-CD, CD-R/RW, CD, MP3-DVD
- Compression format: MP3, PCM, Dolby Digital, DTS
- Multichannel decoding: Dolby Digital

## Still Picture Playback

- Playback Media: CD-R/RW, DVD-R/-RW, Kodak Picture CD

- Picture Compression Format: JPEG
- Picture Enhancement: Slideshow, Rotate, Zoom, High Definition Resolution

## Multimedia Applications

- Playback Formats: JPEG Still pictures, MP3

## Connectivity

- Rear Connections: Analog audio Left/Right out, Analog audio Multi-channel out, Composite video (CVBS) output, Digital coaxial out, HDMI output, Ethernet
- Front / Side connections: USB

## Convenience

- Child Protection: Parental Control
- OSD Languages: English, French, Spanish

## Accessories

- Included accessories: Audio Cable, Quick start guide, IFU / User Manual, Product Registration Card, Remote Control, 2 x AAA Batteries
- User Manual: English, French, Spanish

## Power

- Power supply: 120V, 60Hz
- Power consumption: 15 W
- Standby power consumption: 0.4W

## Dimensions

- Set dimensions (W x H x D): 435 x 38.9 x 213.85 mm
- Packaging dimensions (W x H x D): 541 x 97 x 329 mm
- Weight incl. Packaging: 3.3 kg
- Set weight: 2 kg



Issue date 2019-03-11

Version: 2.9.2

12 NC: 8670 000 67663  
UPC: 6 09585 19562 2

© 2019 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* In order to enjoy viewing 3D content, the following is required: a Blu-Ray 3D compatible television with a 3D emitter; a pair of television compliant 3D glasses; a HDMI cable connection; and a Blu-Ray Disc with 3D content.

\* In order to enjoy Internet services and content on your television, broadband internet service is required. Internet services and content, picture quality and picture size may vary depending on your broadband speed. For best results, your broadband speed should be at least 2.5 Mbps for SD content.

\* Internet content displayed on your television is made available by Third Party Providers who reserve the right to change and/or terminate such content at any time with or without notice. Additional fees and/or PC registration may be required in order to receive Premium content.