



Philips 7000 series
Push pull lock

Intuitive push-pull use

Auto locking function
Indoor infrared sensor unlock
Wi-Fi connection

DDL702SLAFCW

Touch to unlock

Way easier with Wi-Fi connection

Wi-Fi connection enables you to check the access records without space constraints.
Indoor infrared sensor unlocking, auto-locking, etc., which can make your life easier.

Upgraded smart chip enhances home security

- Verification combination provides double security
- Effectively reminds security risks

Smart life lock with excellence

- Easy access to the Internet
- The door will open when the hand is detected

PHILIPS

Push pull lock
Intuitive push-pull use Auto locking function, Indoor infrared sensor unlock, Wi-Fi connection

Specifications

Design & Appearance

- Color: Red copper
- Handle: Push-pull handle

Access Solution

- Fingerprint
- Password/PIN Code
- Temporary PIN code
- Card/Key Tag
- Mechanical Key

Power Specification

- Power Supply: 4 AA batteries

- Battery Type: Alkaline Batteries
- Time of Use: 10 months*
- Maximum Batteries Capacity: 8 batteries

Easy Operation

- Voice Guide: Human voice guide

Smart Lock Functions

- Mortise: C grade lock cylinder


Installation

- Door Thickness: 38-60 mm, 60-90 mm, 90-120 mm, Other range*

DDL702SLAFCW/97

Highlights

Built-in Wi-Fi module

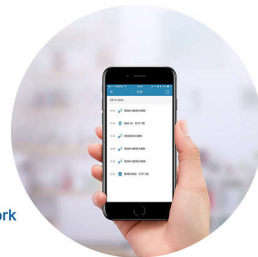

A built-in Wi-Fi module allows you to connect to the Wi-Fi without a gateway. You can check the smart lock access records and PIN code information via the Philips EasyKey app anywhere. Remote distribution of a one-time PIN code saves more time for your visitors. you don't need to worry about keeping them waiting at the door for a long time even if you are not at home.

Indoor infrared sensor unlock



With a touch sensor and an infrared sensor on the handle, the door could be opened much easier. Once the hand touches the touch sensor and the infrared sensor detects the obstruction, the lock will open.

Dual verification



In the dual verification mode, you could open the door with any two verification methods (fingerprint, PIN code, and key tag), which provides double protection for home security.



Issue date 2024-08-19

Version: 3.3.1

EAN: 69 71318 50276 7

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* 10 months: this is internal test data; actual duration may vary with usage frequency.

* Other range: The included installation kit is suitable for doors with the mentioned thickness. For doors outside this range, please contact authorized Philips smart lock consumer care centers or designated offline dealers.

* The digital keypad shown in the product photos may differ from the actual display. Please refer to the digital keypad's appearance during actual use.