

Philips
4K Ultra HD Blu-ray Player

Built-in WiFi

BDP7501



Enjoy everything in 4K HDR vibrance

The Philips BDP7501 4K Ultra HD Blu-ray player with HDR support is the best way to realize the full potential of your 4K TV. With incredibly sharp 4K images with vivid colors and contrast made possible thanks to High Dynamic Range support.

See more

- 4K Ultra HD performance for years of worry free enjoyment
- Expanding the possibilities of visual perception
- Experience television in vivid colorful glory
- Enjoy HD content in 4K UHD with a 4K upscaling engine
- Higher peak bitrate ensures more detail in fast action scene
- Premium design with aluminium finishing
- Full HD 3D for a truly immersive 3D movie playback

Hear more

- Discrete HDMI output for connecting to legacy audio receiver
- Dolby TrueHD and DTS-HD MA for HD 7.1 surround sound

Play all your movies and music

- Easily enjoy local media from you home network
- Enjoy local media easily via USB
- Enjoy your favorite Netflix content in HD and 4K!

PHILIPS

4K Ultra HD Blu-ray Player
Built-in WiFi

Highlights

4K UltraHD Connected 4K BDP



With a 4K Ultra HD platform built from the ground up you can rest assured that your 4K Ultra HD Blu-ray player will work flawlessly with other 4K display devices for years to come. Featuring HDMI 2.0/2.0a with HDCP 2.2 and VP9 decoders, your 4K Ultra HD Blu-ray player is built to output glorious 4K HDR content to the latest 4K HDR TVs from 4K HDR Blu-ray discs, streaming media from Netflix and Youtube, and also playback local 4K content from USB and home network multimedia.

4K Upscaling



Your Standard Definition and High Definition videos have never looked better. 4K upscaling processor delivers images that are crystal clear. Movies in standard definition and high definition can now be enjoyed in 4K Ultra HD, ensuring more details and more true-to-life pictures.

High Dynamic Range 4K BDP



High Dynamic Range technology in Blu-ray 4K Players when connected to a compatible 4K HDR television lets you experience more detail and captivating colors for an even more engaging television experience. More perceivable shades of blacks, whites and all other colors. This boils down to greater perceived brightness and contrast with darker shadows creating a breathtaking image.

Higher peak bitrate 4K BDP



4K Blu-ray format supports more than twice the peak bitrate of 2K Blu-ray which comes in especially handy when watching action movies which have fast paced scenes with a lot of detail. The 100 Mbps peak bitrate of 4K Blu-ray provides enough headroom to store the extra data required to encode high detail fast action scenes and avoid block artifacts.

BDP7501/F7

HomeNetwork Multimedia Browser



With support for a vast number of formats such as H.264, AAC, MP3, JPEG, HEVC*, VP9* (* on 4K TVs) and more, conveniently enjoying your personal media via Home Network Multimedia Browser has never been easier.

USB Multimedia



With support for a vast number of formats such as H.264, AAC, MP3, JPEG, HEVC*, VP9* (* on 4K TVs) and more, conveniently enjoying your personal media via USB has never been easier.

Wide Color Gamut (BT.2020)



Wide Color Gamut televisions with BT.2020 video input support, reproduce rich colors almost twice as saturated as a standard television, which look more vivid and life-like to enhance the TV viewing experience.



Specifications

Accessories

- User Manual: English, French, Spanish
- Included accessories: HDMI cable, Product Registration Card, Quick start guide, Remote Control, 2 x AAA Batteries

Audio Playback

- Compression format: Dolby Digital, DTS, PCM
- Multichannel decoding: Dolby Digital
- Playback Media: CD, CD-R/RW, DVD-R/-RW

Connectivity

- Rear Connections: HDMI output, USB, HDMI out for Audio

Convenience

- On-Screen Display languages: English, French, Spanish
- Child Protection: Parental Control

Dimensions

- Product dimension (WxDxH) inch: 8.7 x 2.4 x 8.7 inch
- Product dimensions (WxDxH): 220 x 59.5 x 220 mm
- Product weight (lb): 3.53 lbs. lb
- Product weight: 1.6 kg
- Packaging (W x H x D): 11.9 x 7.0 x 13.1 inch
- Packaging dimensions (W x H x D): 331 x 176 x 301 mm
- Gross Weight: 6.2 lb
- Gross weight: 2.8 kg

Multimedia Applications

- Playback Formats: JPEG Still pictures, FLAC, M2TS, M4A, MOV, MP4, MPG, MTS, TS, WAV

Picture/Display

- Picture enhancement: Video upscaling, Noise Reduction

Power

- Adaptor type: Adapter: 120V 60Hz
- Power consumption: 26 W
- Standby power consumption: 0.2W

Still Picture Playback


- Playback Media: CD-R/RW, DVD+R/+RW, DVD-R/-RW
- Picture Compression Format: JPEG
- Picture Enhancement: High Definition Resolution, Rotate, Slideshow

Video Playback

- Playback Media: CD, CD-R/CD-RW, DVD, DVD-R/-RW, DVD-Video, BD-R/RE 2.0, BD-ROM, BD Video, DVD+R/+RW
- Video disc playback system: NTSC
- Compression formats: HEVC, VP9 Profile 0, H.264, MPEG4 (AVC), MPEG2, AVCHD
- Disc Playback Modes: Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play
- Picture Quality Enhancements: Video upscaling
- Video Enhancement: BT.2020 / BT.709, HDR -> SDR Convert, HDR10, Progressive Scan, Video Upscaling, Deep Color
- BD Region: A
- DVD Region.: 1

Sound

- Sound System: DTS-HD Master Audio Essential, Dolby Audio

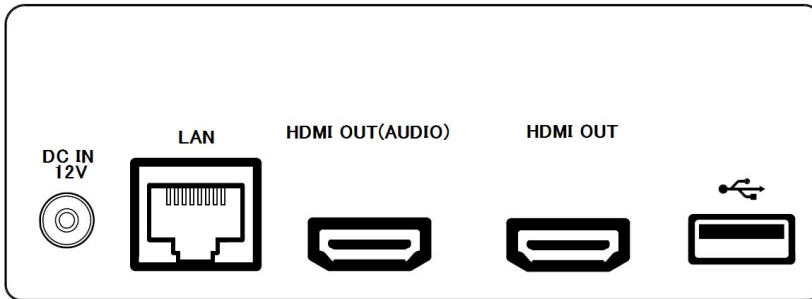

Issue date 2018-05-24

Version: 5.4.1

12 NC: 8670 001 35163
UPC: 6 09585 24933 2

© 2018 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* P&F USA Inc. does not warrant access to the Portal or to any of the services, content, software and advertising. P&F USA Inc. may, in its sole discretion, add or remove access to any specific services, content, software and advertising at any time.

* Although P&F USA Inc. will strive to provide a good selection of services, content or software, P&F USA Inc. does not warrant continued access to any specific services, and content or software.