

Philips
4K Ultra HD Blu-ray Player

Built-in WiFi

BDP7501



Enjoy everything in 4K HDR vibrance

The Philips BDP7501 4K Ultra HD Blu-ray player with HDR support is the best way to realize the full potential of your 4K TV. With incredibly sharp 4K images with vivid colors and contrast made possible thanks to High Dynamic Range support.

See more

- 4K Ultra HD performance for years of worry free enjoyment
- Enjoy HD content in 4K UHD with a 4K upscaling engine
- Expanding the possibilities of visual perception
- Higher peak bitrate ensures more detail in fast action scene
- Experience television in vivid colorful glory
- Premium design with aluminium finishing
- Full HD 3D for a truly immersive 3D movie playback

Hear more

- Dolby TrueHD and DTS-HD MA for HD 7.1 surround sound
- Discrete HDMI output for connecting to legacy audio receiver

Play all your movies and music

- Enjoy your favorite Netflix content in HD and 4K!
- Watch YouTube videos directly on your big screen TV*
- Easily enjoy local media from you home network

PHILIPS

Highlights

4K UltraHD Connected 4K BDP



With a 4K Ultra HD platform built from the ground up you can rest assured that your 4K Ultra HD Blu-ray player will work flawlessly with other 4K display devices for years to come. Featuring HDMI 2.0/2.0a with HDCP 2.2 and VP9 decoders, your 4K Ultra HD Blu-ray player is built to output glorious 4K HDR content to the latest 4K HDR TVs from 4K HDR Blu-ray discs, streaming media from Netflix and Youtube, and also playback local 4K content from USB and home network multimedia.

4K Upscaling




Your Standard Definition and High Definition videos have never looked better. 4K upscaling processor delivers images that are crystal clear. Movies in standard definition and high definition can now be enjoyed in 4K Ultra HD, ensuring more details and more true-to-life pictures.

High Dynamic Range 4K BDP



High Dynamic Range technology in Blu-ray Players when connected to a compatible 4K HDR television lets you experience more detail and captivating colors for an even more engaging television experience. More perceivable shades of blacks, whites and all other colors. This boils down to greater perceived brightness and contrast with darker shadows creating a breathtaking image.

Higher peak bitrate 4K BDP

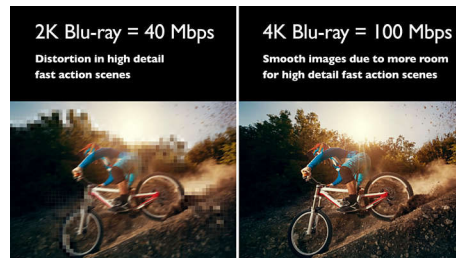

4K Blu-ray format supports more than twice the peak bitrate of 2K Blu-ray which comes in especially handy when watching action movies which have fast paced scenes with a lot of detail. The 100 Mbps peak bitrate of 4K Blu-ray provides enough headroom to store the extra data required to encode high detail fast action scenes and avoid block artifacts.

HomeNetwork Multimedia Browser



With support for a vast number of formats such as H.264, AAC, MP3, JPEG, HEVC*, VP9* (* on 4K TVs) and more, conveniently enjoying your personal media via Home Network Multimedia Browser has never been easier.

USB Multimedia



With support for a vast number of formats such as H.264, AAC, MP3, JPEG, HEVC*, VP9* (* on 4K TVs) and more, conveniently enjoying your personal media via USB has never been easier.

Wide Color Gamut (BT.2020)



Wide Color Gamut televisions with BT.2020 video input support, reproduce rich colors almost twice as saturated as a standard television, which look more vivid and life-like to enhance the TV viewing experience.

Specifications

Picture/Display

- Picture enhancement: Video upscaling, Noise Reduction

Sound

- Sound System: DTS-HD Master Audio Essential, Dolby Audio

Convenience

- Child Protection: Parental Control
- On-Screen Display languages: English, French, Spanish

Multimedia Applications

- Playback Formats: JPEG Still pictures, FLAC, M2TS, M4A, MOV, MP4, MPG, MTS, TS, WAV

Connectivity

- Rear Connections: HDMI output, USB, HDMI out for Audio

Power

- Power consumption: 26 W
- Standby power consumption: 0.2W
- Adaptor type: Adaptor: 120V 60Hz

Dimensions

- Product weight (lb): 3.53 lbs. lb
- Packaging (W x H x D): 11.9 x 7.0 x 13.1 inch
- Packaging Depth: 301 mm
- Packaging Height: 176 mm
- Packaging Width: 331 mm
- Gross Weight: 6.2 lb
- Gross weight: 2.8 kg
- Product dimension (WxDxH) inch: 8.7 x 2.4 x 8.7 inch
- Product dimensions (WxDxH): 220 x 59.5 x

220 mm

- Product weight: 1.6 kg

Accessories

- Included accessories: HDMI cable, Product Registration Card, Quick start guide, Remote Control, 2 x AAA Batteries
- User Manual: English, French, Spanish

Video Playback


- Playback Media: CD, CD-R/CD-RW, DVD, DVD-R/-RW, DVD-Video, BD-R/RE 2.0, BD-ROM, BD Video, DVD+R/+RW
- Compression formats: HEVC, VP9 Profile 0, H.264, MPEG4 (AVC), MPEG2, AVCHD
- Video disc playback system: NTSC
- Video Enhancement: BT.2020 / BT.709, HDR -> SDR Convert, HDR10, Progressive Scan, Video Upscaling, Deep Color
- Disc Playback Modes: Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play
- DVD Region: 1
- Picture Quality Enhancements: Video upscaling
- BD Region: A

Audio Playback

- Compression format: Dolby Digital, DTS, PCM
- Playback Media: CD, CD-R/RW, DVD-R/-RW
- Multichannel decoding: Dolby Digital

Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: CD-R/RW, DVD+R/+RW, DVD-R/-RW
- Picture Enhancement: High Definition Resolution, Rotate, Slideshow

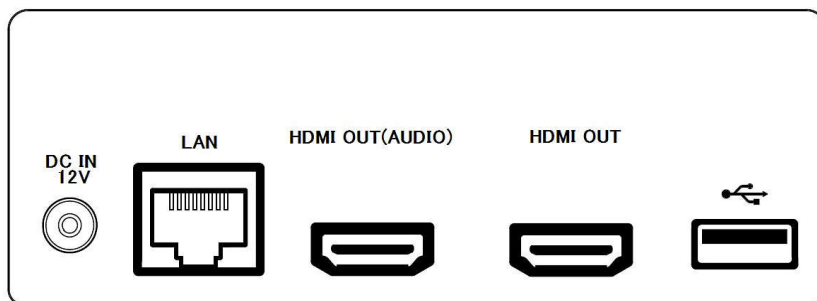

Issue date 2024-08-16

Version: 6.6.2

UPC: 6 09585 24933 2

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* P&F USA Inc. does not warrant access to the Portal or to any of the services, content, software and advertising. P&F USA Inc. may, in its sole discretion, add or remove access to any specific services, content, software and advertising at any time.

* Although P&F USA Inc. will strive to provide a good selection of services, content or software, P&F USA Inc. does not warrant continued access to any specific services, and content or software.