



Philips  
LCD TV

107cm (42")

Full HD 1080p

42TA648BX

## Brilliant design, powerful performance.

Panache and performance meet in one stylish experience. Combining a full HD 1080p display and fantastic invisible sound, this Flat TV ensures brilliant design and powerful performance for years to come.

### See vivid and razor sharp pictures

- Full HD LCD display, with a 1920x1080p resolution

### Hear pure and powerful sound

- Invisible speakers with incredible surround
- 25 watt with BBE for powerful sound and great voice clarity
- Dolby Digital output for connection to a home theatre system

### Easy to connect and enjoy

- Enjoy photo and music playback via USB
- 4 HDMI inputs for full digital HD connection in one cable
- EasyLink: easy control of TV & connected device via HDMI CEC
- Settings assistant for effortless personalized TV settings

### Ready for digital

- ATSC & QAM tuner receives over the air and unscrambled cable

**PHILIPS**  
sense and simplicity

LCD TV  
107cm (42") Full HD 1080p

42TA648BX/F7

# Highlights

## Full HD LCD display 1920x1080p

The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future proof as it supports 1080p signals from all sources, including the most recent like Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive

scan pictures with superb brightness and colors.

## Invisible speakers

An invisible sound system that blends perfectly with the design of the cabinet. The Incredible Surround allows you to experience total surround with greater depth and width of sound. It gives a clear and spacious sound stage complementary to the rich viewing experience.

## EasyLink

EasyLink uses the HDMI CEC industry standard protocol to share functionality between connected devices and the TV. With EasyLink only one remote control is needed to operate main functionalities on your TV and connected devices. EasyLink uses the standard HDMI cable to transfer system commands. It works between all electronic devices equipped with HDMI CEC.



# Specifications

## Picture/Display

- Aspect ratio: Widescreen
- Brightness: 500 cd/m<sup>2</sup>
- Dynamic screen contrast: 29000:1
- Response time (typical): 5 ms
- Viewing angle: 178° (H) / 178° (V)
- Diagonal screen size: 42 inch / 107 cm
- Visible screen diagonal (inch): 42.02 inch
- Panel resolution: 1920x1080p
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control + Light sensor, Dynamic contrast enhancement, Progressive scan

## Supported Display Resolution

### Computer formats

Resolution	Refresh rate
640 x 480	60Hz
800 x 600	60Hz
1024 x 768	60Hz
1280 x 768	60Hz
1280 x 1024	60Hz
1360 x 768	60Hz
1920 x 1080i	60Hz
1920 x 1080p	60Hz

### Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
720p	60Hz
1080i	60Hz
1080p	60Hz

## Sound

- Equalizer: 5-bands
- Output power (RMS): 25W
- Sound Enhancement: Incredible Surround
- Sound System: Dolby Digital (AC-3), BBE

## Loudspeakers

- Built-in speakers: 4

## Convenience

- Child Protection: Child Lock+Parental Control
- Clock: On main display, Sleep Timer
- Ease of Installation: Autostore
- Ease of Use: 4 favorite lists, Auto Volume Leveller (AVL), Channel list, Settings assistant Wizard, Side Control

- Remote Control: TV
- Screen Format Adjustments: 4:3, Auto Format, Movie expand 14:9, Super expand 16:9, Super Zoom, Widescreen, unscaled (1080p dot by dot)

## Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: MP3, Slideshow files (.alb), JPEG Still pictures

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm F-type
- TV system: ATSC, NTSC
- Video Playback: NTSC
- Cable: Unscrambled Digital Cable -QAM
- Tuner bands: Hyperband, S-Channel, UHF, VHF

## Connectivity


- AV 1: Audio L/R in, YPbPr
- AV 2: Audio L/R in, YPbPr
- AV 3: CVBS in, S-Video in
- HDMI 1: HDMI v1.3
- HDMI 2: HDMI v1.3
- HDMI 3: Analog audio L/R in, HDMI v1.3
- EasyLink (HDMI-CEC): One touch play, Power status, System info (menu language), System standby
- Front / Side connections: HDMI, S-video in, CVBS in, Audio L/R in, Headphone out, USB
- Audio Output - Digital: Coaxial (cinch)

## Power

- Ambient temperature: 5 °C to 40 °C
- Mains power: 110-240V, 50-60Hz
- Power consumption: 260 W
- Standby power consumption: < 1 W

## Dimensions

- Set dimensions in inch (W x H x D): 41.19 x 25.39 x 3.48 inch
- Set dimensions with stand in inch (W x H x D): 41.19 x 28.19 x 10.31 inch
- Weight incl. Packaging (lb): 64.0
- Product weight (lb): 51.8 (with stand), 42.3 (without stand)
- Box dimensions in inch (W x H x D): 45.31 x 31.22 x 13.11 inch
- VESA wall mount compatible: 400 x 400 mm

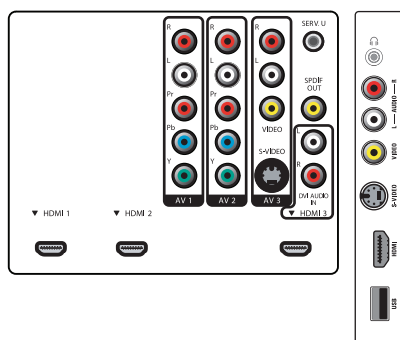

Issue date 2011-06-07

Version: 2.0.57

12 NC: 8670 000 47365  
UPC: 6 09585 16238 9

© 2011 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

## Accessories

- Included accessories: Tabletop swivel stand, Power cord, Quick start guide, User Manual, Registration card, Remote Control