



Philips
DVD player

DVP3345VB



DVD and VHS Combo

The ultimate all-in-one player that plays your movie collections in DVDs & VHS tapes. This combination is the only player that maximizes convenience and enhances your movie experience. One player plays it all.

Easy to set up and use

- Direct Dubbing for easy transfer of videos from DVD to VCR


Bring audio and video to life

- Hi-Fi stereo VHS enhances audio playback
- Progressive Scan component video for optimized image quality
- Dolby Digital Stream Out

PHILIPS

Highlights

Progressive Scan

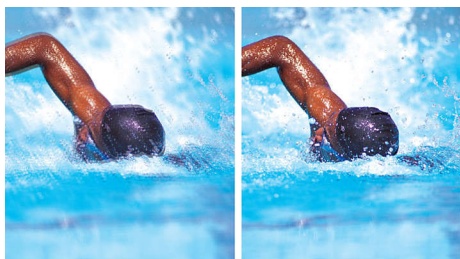

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the

odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

Hi-Fi stereo VHS



Hi-Fi Stereo VHS plays back true stereo VHS



Specifications

Picture/Display

- Picture enhancement: Progressive scan

Convenience

- Child Protection: Parental Control
- On-Screen Display languages: English, French, Spanish

Connectivity

- Front Connections: Analog Audio Left/Right In, Composite Video (CVBS) In
- Rear Connections: Analog audio Left/Right out, Component Video output, Composite video (CVBS) output, Digital coaxial out, S-Video out, Analog audio Left/Right in, Composite video (CVBS) input

Power

- Power consumption: 21 W
- Standby power consumption: 3.8W
- Power supply: 120V, 60Hz

Dimensions

- Set Height: 94 mm
- Set Width: 435 mm
- Set Depth: 233 mm
- Packaging Depth: 342 mm
- Weight incl. Packaging: 3.4 kg
- Packaging Height: 182 mm

- Packaging Width: 539 mm
- Set weight: 2.7 kg

Accessories

- Included accessories: 2 x AA Batteries, Audio/Video cable, Quick start guide, Remote Control, User Manual, Warranty Leaflet

Video Playback

- Playback Media: CD-R/CD-RW, DVD-R/-RW, DVD+R/+RW, DVD-Video, Video CD/SVCD, VHS Tapes
- Compression formats: MPEG1, MPEG2
- Video disc playback system: NTSC

Audio Playback

- Compression format: MP3, WMA
- Playback Media: Audio CD, CD-R/RW

Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: CD-R/RW
- Picture Enhancement: Rotate, Slideshow, Zoom

Container Loading

- Container 20 feet: 900
- Container 40 feet: 1800
- Container 40 feet (HC): 2000



Issue date 2024-08-10

Version: 3.3.2

UPC: 6 09585 19008 5

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com