



Philips  
6000 series Google Cast  
Ultra HDTV

55" class/po

55PFL6921



## Google Cast™ TV

Cast your favorite entertainment from mobile to TV

Google Cast™ is a technology that lets you cast your favorite entertainment from your mobile to your TV. Easily control your TV with apps you already know and love from your iPhone®, iPad®, Android™ phone or tablet, Mac® or Windows® PC.

### Enjoy the beauty of 4K Ultra HD

- 120 Perfect Motion Rate for increased pixel response times
- Pixel Plus UltraHD for vivid, natural, and real pictures
- Stunning Brightness
- Expanding the possibilities of visual perception
- Exceptional Contrast

### Authentic and clear sound experience.

- 20 Watts RMS of rich surround sound to complement 4K images
- Immersive sound with clear voice designed by sonic emotion
- Dolby Audio for the ultimate movie experience

### Complete digital TV connectivity made simple.


- HDMI 2.0 with HDCP 2.2 for 4K on all HDMI ports
- Cast your favorite entertainment from a mobile device to TV
- Wireless LAN 802.11ac with MIMO for seamless streaming of 4K
- Play HEVC, H.264, AAC, MP3, JPEG and more formats on USB

# PHILIPS

6000 series Google Cast Ultra HDTV  
55" class/po

# Highlights

## Google Cast™

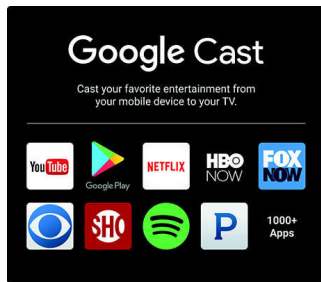

Google Cast™ is a technology that lets you cast your favorite entertainment from your phone, tablet or laptop right to your TV. Easily control your TV with apps you already know and love from your iPhone®, iPad®, Android™ phone or tablet, Mac® or Windows® laptop, or Chromebook

## High Dynamic Range



High Dynamic Range is a technology lets you experience more detail and captivating colors for an even more engaging television experience. More perceivable shades of blacks, whites and all other colors. This boils down to greater perceived brightness and contrast with darker shadows creating a breathtaking image.

## Bright Pro



BrightPro backlight boosts brighter areas of the image by up to twice as much as a regular LED backlight. Bright Pro enables to display exceptional brightness and contrast even in

brightly lit rooms. Video scenes which feature bright light sources such as sunlight, fireworks, police lights, flashlights, etc. look more realistic and lifelike.

## Micro Dimming



Micro Dimming televisions have an LED array backlight with multiple zones which can be controlled independently to set varying luminosity levels based on the input images' luminosity levels in those respective zones.

## Pixel Plus Ultra HD



Experience Ultra-HD sharpness from Philips. Now you can enjoy your favorite action films and sporting events in stunning 4K Ultra HD resolution. And whether you stream online or watch a DVD, Philips' Pixel Plus Ultra-HD Engine delivers sharper images with brighter whites and blacker blacks.

## 120 Perfect Motion Rate



120 Perfect Motion Rate (PMR) creates extreme motion sharpness for clear and

55PFL6921/F7

vibrant images in fast action movies. The new Philips PMR standard reduces response time of the HDTV to produce faster picture transitions and reduces motion artifacts.

## 20 Watts RMS

20 Watts RMS of rich surround sound to complement 4K images

## Sonic Emotion Premium



Immersive sound with clear voice designed by sonic emotion. Absolute3D sound fills your surroundings with the right ambience, clarifies voice, and details the sound stage, making your experience more immersive and enjoyable.

## Dolby Audio

Dolby Audio for the ultimate movie experience

## HDMI 2.0 with HDCP 2.2 for 4K

HDMI 2.0 with HDCP 2.2 for 4K on all HDMI ports

## USB multimedia playback



The USB connector allows access to HEVC, H.264, AAC, MP3, JPEG and more formats files of most USB-sticks (USB memory-class device). Plug the USB into the slot at the side of the TV and access the multimedia content using the easy on screen content browser. You can now view and share your videos, photos and music.

Google Cast

High Dynamic Range

BrightPro

MICRO DIMMING

PixelPlus ULTRA HD

120 PERFECT MOTION RATE

sonic emotion PREMIUM ABSOLUTE 3D SOUND

DOLBY AUDIO

# Specifications

## Picture/Display

- Aspect ratio: Widescreen(16:9)
- Contrast ratio (typical): 1200:1
- Response time (typical): 9 ms
- Diagonal screen size (inch): 55 inch
- Diagonal screen size (metric): 139.7 cm
- Panel resolution: 3840x2160p
- Picture enhancement: Black stretch, Digital Noise Reduction, MPEG artifact reduction, Pixel Plus UltraHD, 120 PMR, Color Enhancement, Dynamic contrast enhancement, Light sensor, Micro Dimming
- Brightness: 540 cd/m<sup>2</sup>
- Visible screen diagonal (inch): 54.6 inch
- Display screen type: LED UltraHD Display
- Viewing angle: 178° (H) / 178° (V)

## Supported Display Resolution

- Computer formats: 640 x 480, 60Hz, 720 x 480, 60Hz, 800 x 600, 60Hz, 1024 x 768, 60Hz, 1280 x 768, 60Hz, 1280 x 1024, 60Hz, 1360 x 768, 60Hz, 1440 x 900, 60 Hz, 1920 x 1080, 60Hz, 1680 x 1050, 60Hz, 1400 x 1050, 60Hz, 3840 x 2160, 60Hz, 4096 x 2160, 60Hz
- Video formats: 480i, 60Hz, 480p, 60Hz, 720p, 60Hz, 1080i, 60Hz, 1080p, 24,30,60Hz, 2160p, 24, 30, 60Hz

## Sound

- Equalizer: 5-bands
- Output power (RMS): 2 x 10W
- Sound System: Sonic Emotion Premium, Stereo, SAP, Dolby Audio

## Loudspeakers

- Built-in speakers: 2

## Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer
- Ease of Use: Auto Volume Leveller (AVL), AutoPicture, AutoSound, Settings assistant Wizard
- Remote Control: TV
- Screen Format Adjustments: 4:3, Auto Format, Movie expand 14:9, Movie expand 16:9, Super Zoom, Widescreen, unscaled (1080p dot by dot), Full
- Ease of Installation: Autostore
- Multimedia: auto slideshow, USB media browser

## Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: MP3, JPEG Still pictures, MPEG1, MPEG2, H.264/MPEG-4 AVC, MPEG 4 SP/ASP, H.265/HEVC

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm F-type
- TV system: ATSC, NTSC
- Video Playback: NTSC
- Tuner bands: UHF, VHF

## Connectivity

- Other connections: Ethernet, Headphone out, PC-In VGA, Wireless LAN(Built in)
- EasyLink (HDMI-CEC): One touch play, Power status, System info (menu language), Remote control pass-through, System audio control, System standby
- Audio Output - Digital: Optical (TOSLINK)
- AV 1: Shared audio L/R in, CVBS/YPbPr
- USB: USB
- HDMI 1: Shared audio L/R in, HDMI (Audio Return Channel)
- HDMI 2: HDMI, Shared audio L/R in
- HDMI 3: HDMI, Shared audio L/R in
- HDMI 4: HDMI, Shared audio L/R in

## Power


- Mains power: 120V/60Hz
- Power consumption: 155 W
- Standby power consumption: < 0.5W
- Ambient temperature: 5°C to 40°C (41°F to 104°F)

## Dimensions


- Product weight (lb): 33.52 lb
- Box height (inch): 32.8 inch
- Box width (inch): 58.3 inch
- Box depth (inch): 5.8 inch
- Wall mount compatible: 400 x 200 mm
- Set Width (inch): 48.8 inch
- Set Height (inch): 28.8 inch
- Set Depth (inch): 2.5 inch
- Set width (with stand) (inch): 48.8 inch
- Set depth (with stand) (inch): 9.7 inch
- Set height (with stand) (inch): 30.4 inch
- Product weight (+stand) (lb): 31.97 lb
- Weight incl. Packaging (lb): 44.10

## Connections

### Bottom Rear

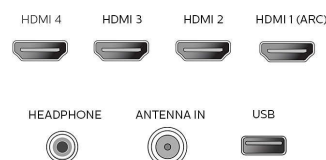

### Side

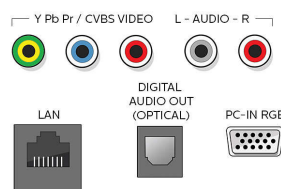

Issue date 2023-12-11

Version: 5.1.1

UPC: 6 09585 24966 0

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

## Accessories

- Included accessories: Table top stand, Quick start guide, User Manual, Remote Control, Batteries for remote control, Screws
- Power cord: 59.05 inch

## Network Services

- Network Features: Google Cast

\* This product was produced prior to FCC Enhanced Accessibility rule going into effect, older production may not have Enhanced Accessibility features. Please look for the "Enhanced Accessibility" logo on the packaging of the product before purchasing if you need Enhanced Accessibility features.