

Philips
6000 series Smart Ultra
HDTV

65" class/po
4K UHD 2160p

65PFL6601



Smart 4K UltraHDTV

Your favorite online content in UltraHD

Enjoy Smart 4K Ultra HD performance with HEVC and VP9 decoders for Netflix and YouTube 4K streaming, HDMI 2.0 with HDCP 2.2 and a built-in 4K upscaling engine.

Enjoy the beauty of 4K Ultra HD

- 120 Perfect Motion Rate for increased pixel response times
- An intelligent dimming backlight for dynamic contrast
- Expanding the possibilities of visual perception
- The beauty of 4K UltraHD TV is in savoring every detail

Complete digital TV connectivity made simple.

- HDMI 2.0 with HDCP 2.2 for 4K on all HDMI ports
- Wireless LAN 802.11ac with MIMO for seamless streaming of 4K
- Play HEVC, H.264, AAC, MP3, JPEG and more formats on USB
- NetTV with Wireless access to online services on your TV
- Wirelessly mirror the screen of smart device on your TV

Authentic and clear sound experience.

- 20 Watts RMS of rich surround sound to complement 4K images
- Immersive sound with clear voice designed by sonic emotion
- Dolby Audio for the ultimate movie experience

PHILIPS

Highlights

4K UltraHD



4 times the resolution of Full HD brings your viewing experience to the whole new level. Enjoy every detail and the breathtaking beauty of the pictures.

High Dynamic Range



High Dynamic Range is a technology lets you experience more detail and captivating colors for an even more engaging television experience. More perceivable shades of blacks, whites and all other colors. This boils down to greater perceived brightness and contrast with darker shadows creating a breathtaking image.

Macro dimming



Using a proprietary video processing algorithm which measures average luminance level of each video frame, Philips' Macro Dimming intelligent backlight dims the backlight to match every video frame to ensure you have a strain-free life-

like viewing experience with bright whites, vivid colors and dark blacks.

120 Perfect Motion Rate



120 Perfect Motion Rate (PMR) creates extreme motion sharpness for clear and vibrant images in fast action movies. The new Philips PMR standard reduces response time of the HDTV to produce faster picture transitions and reduces motion artifacts.

Sonic Emotion Premium



Immersive sound with clear voice designed by sonic emotion. Absolute3D sound fills your surroundings with the right ambience, clarifies voice, and details the sound stage, making your experience more immersive and enjoyable.

Wireless LAN 802.11ac w/ MIMO



Wireless LAN 802.11ac with MIMO antennas for seamless streaming of online 4K content.

Wireless Screencasting



Watch and surf anything and everything wirelessly from your smart phone, tablet or PC to your Philips TV. Imagine the ability to have unlimited access to every web destination like shopping, email, videos, social networking, as well as your favorite TV shows and sporting events. With Wireless Screencasting your source device screen is wirelessly projected on your TV, so sharing content and surfing the internet on your TV has truly become limitless.

NetTV



Experience a rich selection of online services with Net TV wirelessly. Enjoy movies, pictures, infotainment and other online content directly on your TV whenever you like. Wirelessly navigate and select what you want to watch with the TV remote control. The Philips menu gives you access to popular Net TV services fitted for your TV screen.

Specifications

Picture/Display

- Aspect ratio: Widescreen(16:9)
- Contrast ratio (typical): 1200:1
- Response time (typical): 8 ms
- Diagonal screen size (inch): 65 inch
- Diagonal screen size (metric): 165.1 cm
- Panel resolution: 3840x2160p
- Picture enhancement: Black stretch, Digital Noise Reduction, MPEG artifact reduction, Pixel Plus UltraHD, 120 PMR, Color Enhancement, Dynamic contrast, Gamma, Light sensor, Macro Dimming
- Visible screen diagonal (inch): 64.5 inch
- Display screen type: LED UltraHD Display
- Viewing angle: 178° (H) / 178° (V)

Supported Display Resolution

- Computer formats: 640 x 480, 60Hz, 720 x 480, 60Hz, 800 x 600, 60Hz, 1024 x 768, 60Hz, 1280 x 768, 60Hz, 1280 x 1024, 60Hz, 1360 x 768, 60Hz, 1440 x 900, 60 Hz, 1920 x 1080, 60Hz, 1680 x 1050, 60Hz, 1400 x 1050, 60Hz, 3840 x 2160, 60Hz, 4096 x 2160, 60Hz
- Video formats: 480i, 60Hz, 480p, 60Hz, 720p, 60Hz, 1080i, 60Hz, 1080p, 24,30,60Hz, 2160p, 24, 30, 60Hz

Sound

- Equalizer: 5-bands
- Sound System: Sonic Emotion Premium, Stereo, SAP, Dolby Audio

Loudspeakers

- Built-in speakers: 2

Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer
- Ease of Use: AutoPicture, AutoSound, Settings assistant Wizard, Auto Volume Leveling
- Remote Control: TV
- Screen Format Adjustments: 4:3, Movie expand 14:9, Movie expand 16:9, Super Zoom, Widescreen, unscaled (1080p dot by dot), Full, Automatic
- Ease of Installation: Autostore
- Multimedia: auto slideshow, USB media browser

Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: MP3, JPEG Still pictures, MPEG1, MPEG2, H.264/MPEG-4 AVC, MPEG 4 SP/ASP, H.265/HEVC, AAC, WAVE

Tuner/Reception/Transmission

- Aerial Input: 75 ohm F-type
- TV system: ATSC, NTSC
- Video Playback: NTSC
- Tuner bands: UHF, VHF

Connectivity

- Other connections: Ethernet, Headphone out, PC-In VGA, Wireless LAN 802.11ac MIMO
- EasyLink (HDMI-CEC): One touch play, Power status, System info (menu language), Remote control pass-through, System audio control, System standby
- Audio Output - Digital: Optical (TOSLINK)
- AV 1: Shared audio L/R in, CVBS/YPbPr
- USB: USB
- HDMI 1: Shared audio L/R in, HDMI (Audio Return Channel)
- HDMI 2: HDMI, Shared audio L/R in
- HDMI 3: HDMI, Shared audio L/R in
- HDMI 4: HDMI, Shared audio L/R in

Power


- Mains power: 120V/60Hz
- Power consumption: 190 W
- Standby power consumption: < 0.5W
- Ambient temperature: 5°C to 40°C (41°F to 104°F)

Dimensions


- Product weight (lb): 44.10 lb
- Box height (inch): 38.1 inch
- Box width (inch): 63.0 inch
- Box depth (inch): 8.6 inch
- Wall mount compatible: 400 x 200 mm
- Set Width (inch): 57.4 inch
- Set Height (inch): 33.8 inch
- Set Depth (inch): 3.0 inch
- Set width (with stand) (inch): 57.4 inch
- Set depth (with stand) (inch): 12.0 inch
- Set height (with stand) (inch): 35.8 inch

Connections

Bottom Rear

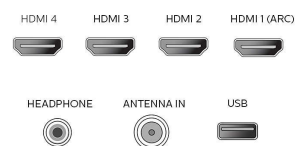

Side

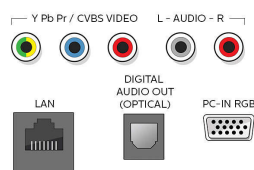

Issue date 2024-08-16

Version: 6.6.2

UPC: 6 09585 24974 5

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

- Product weight (+stand) (lb): 44.98 lb
- Weight incl. Packaging (lb): 58.65

Accessories

- Included accessories: Table top stand, Quick start guide, User Manual, Remote Control, Batteries for remote control, Screws
- Power cord: 59.05 inch

Network Services

- NetTV Apps: Netflix, Pandora, Vudu, YouTube, Cinema Now, Hotlist, Samba, Xumo
- Network Features: Home Network, Wireless Screencasting

* This product was produced prior to FCC Enhanced Accessibility rule going into effect, older production may not have Enhanced Accessibility features. Please look for the "Enhanced Accessibility" logo on the packaging of the product before purchasing if you need Enhanced Accessibility features.