



Philips  
Smart clothes drying rack

**Slim and compact**

LED lighting  
Easy stop  
Remote controlling



**SDR603ABS0**

# Care more than clothes drying

With thinner body

This drying rack features a slim and compact design. When the rack lifts to the top, the scissor frames retract and hide into the host along with poles. While saving your balcony space, it keeps your window view unblocked.

## **Clothes drying made effortless**

- For one tap rack lifting
- Hold to stop and push to lift

## **Slim and compact design**

- Save space and keep your window view unblocked
- Make easy clothes drying at night


## **Capable and safe**

- Meet drying needs of the whole family
- Ensure safe clothes drying
- Fit into balconies of different size

**PHILIPS**

# Highlights

## 35 kg load capacity

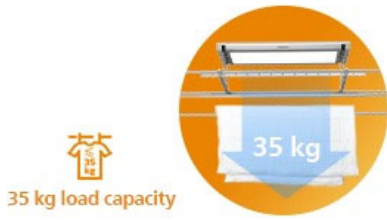

SDR603 has 35 kg load capacity, allowing more clothes to dry at one time. If clothes on the drying rack exceed 35 kg, it would alert and stop automatically to secure your safety.

## Adjustable rods



With its 1.4+0.4 m adjustable rods, the drying rack adapts to many family use scenarios. It gives more drying space when extended and save space when retracted, making it perfectly fit for small-sized balconies. The hanging holes of the clothes rods are well distributed to bring sufficient air flow and sunlight, ensuring excellent drying result.

## Easy stop



Gently hold the descending rack to stop it. After hanging clothes up, slightly push it with your hands, and it will go up automatically, making clothes drying more effortless. Without having to turn around and search for remote control, you can have clothes drying at ease.

## Large LED lamp



The 98 cm × 24 cm LED lamp can lighten up large balcony area to assist your laundry activities at night. Simplistic and elegant, it is designed to fit into balcony of any style.

## Remote control



Enjoy one tap on remote control to monitor clothes drying. The DC motor lets the drying

rack rise and descend quietly and fast. It takes only around 20 seconds for the rack to go up or down. Without too much waiting, you can enjoy the best of your home life.

## Stable structure



Enjoy safe and stable clothes drying. Triangle structure of the scissor frames gives the drying rack great stability and balance. The whole machine is made of aluminum alloy and uses stainless rivets and screws that conform to international standard 304#, making the drying rack rustproof and exquisite.

## Thinner body



The scissor frames and poles of this drying rack hide into host when the rack is fully retracted, making the 9 cm minimum body thickness possible. While making the drying rack more sleek, it also saves your balcony space.

# Specifications

## Color scheme

- Space gray

## Dimensions of product (LxWxH)

- 2,200x588x90 mm

## Net weight of product

- 10.4 kg

## Drop distance

- 0-1,200 mm

## Maximum load

- 35 kg

## Power supply

- Input voltage: 220 V
- Rated power of product: 84 W
- Rated power of LED lamp: 24 W



Issue date 2023-02-19

Version: 1.0.1

12 NC: 8670 001 86175  
EAN: 69 73746 14068 9

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)