



Philips 5000 series  
digital widescreen flat TV  
with Pixel Plus 3 HD

- 81 cm (32")
- LCD
- integrated digital



32PFL5332D



## Turn up your viewing experience

with Pixel Plus 3 HD

Experience the superior picture quality of this excellent integrated HDTV with the latest LCD technology and Pixel Plus packed into a stylish design. Share music and photos via the built-in USB.

### **Vivid, natural and razor sharp images**

- Integrated HDTV to receive digital HDTV and cable signals
- Pixel Plus 3 HD for most sharp and clear pictures
- Dynamic contrast enhancer delivering rich black details

### **Superb sound reproduction**

- Virtual Dolby Surround for a cinema-like audio experience

### **Slim, stylish design to complement your interior**

- Compact and slim design that fits in every room

### **Designed for your convenience**

- USB Connector for easy, instant multimedia playing
- Plug & Play for easier installation

### **For advanced performance**

- 2 HDMI inputs for full digital HD connection in one cable

# PHILIPS

Digital widescreen flat TV with Pixel Plus 3 HD  
81 cm (32") LCD, integrated digital

32PFL5332D/37

# Highlights

## Integrated HDTV Cable Ready

The built-in HDTV tuner that receives and displays terrestrial ATSC and unscrambled cable signals

## Pixel Plus 3 HD

Pixel Plus 3 HD offers the unique combination of ultimate sharpness, natural detail, vivid colors and smooth natural motion on all qualities of HD, standard TV signals and multimedia content, for high definition displays. Each pixel of the incoming picture is enhanced to better match the surrounding pixels, resulting in a more natural picture. Artifacts and noise in all sources from multimedia to standard TV and also in highly compressed HD are detected and reduced ensuring that the picture is clean and razor sharp.

## Virtual Dolby Surround

Virtual Dolby Surround is a processing technology for enhancing surround sound effects. It will create the sensation of Dolby Pro Logic without the necessity of additional rear speakers. You become totally immersed in your television experience.

## USB Multimedia Connector

The USB connector allows access to multimedia jpg, mp3 and alb files of most USB-sticks and most digital cameras (USB 1.1 memory-class device). Plug the USB into the slot at the side of the TV and access your photos or music files. This makes you easily viewing and sharing your photos and music.

## Plug & Play

Plug & Play gives you the ability to install or add a new component and have it work without

having to perform any complex installation procedure or technical analysis.

## 2 HDMI inputs

HDMI makes an uncompressed digital RGB connection from the source to the screen. By eliminating conversion to an analog signal, it delivers an unblemished image. The non-degraded signal reduces flicker and leads to a clearer picture. HDMI intelligently communicates the highest output resolution with the source device. The HDMI input is fully backward compatible with DVI sources but includes digital audio. HDMI uses HDCP copy protection. With 2 HDMI inputs you can connect multiple HD sources, for instance an HD settop box, and a Blu-ray player. Your TV is fully prepared for the HD future.



# Specifications

## Picture/Display

- Aspect ratio: 16:9, Widescreen
- Brightness: 500 cd/m<sup>2</sup>
- Dynamic screen contrast: 3200:1
- Response time (typical): 8 ms
- Viewing angle (H / V): 176 / 176 degree
- Diagonal screen size: 32 inch / 80 cm
- Panel resolution: 1366 x 768p
- Picture enhancement: Pixel Plus 3 HD, Dynamic contrast enhancement, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control, Progressive scan
- Screen enhancement: Anti-Reflection coated screen

## Supported Display Resolution

### Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
720p	60Hz
1080i	60Hz

## Sound

- Equalizer: 5-bands
- Output power (RMS): 2 x 10W
- Sound System: Dolby Digital (AC-3), Virtual Dolby Surround

## Loudspeakers

- Built-in speakers: 2

## Convenience

- Child Protection: Child Lock+Parental Control
- Clock: On main display
- Ease of Installation: Autostore, PLL Digital Tuning, Plug & Play
- Ease of Use: On Screen Display, Settings assistant Wizard, Side Control
- Remote Control: TV
- Remote control type: RC2033601
- Screen Format Adjustments: 7 Widescreen Modes, Auto Format
- VESA Mount: 200x100 mm

## Multimedia Applications

- Digital Content Management: Digital Media Reader
- Multimedia connections: USB memory class device
- Playback Formats: MP3, Slideshow files (.alb), JPEG Still pictures

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm F-type
- TV system: ATSC, NTSC
- Video Playback: NTSC
- Cable: Unscrambled Digital Cable QAM
- Tuner bands: Hyperband, S-Channel, UHF, VHF

## Connectivity

- AV 1: Audio L/R in, CVBS in, YPbPr
- AV 2: Audio L/R in, YPbPr
- AV 3: HDMI
- Front / Side connections: Audio L/R in, CVBS in, Headphone Out, S-video in, USB
- Audio Output - Digital: Coaxial (cinch)
- Other connections: HDMI

## Power


- Ambient temperature: 5 °C to 40 °C
- Mains power: 100-250V, 50-60Hz
- Power consumption: 140 W
- Standby power consumption: < 1 W

## Dimensions

- Set dimensions in inch (W x H x D): 31.6 x 21.5 x 4.6 inch
- Set dimensions with stand in inch (W x H x D): 31.7 x 24 x 8.3 inch
- Product weight (lb): 38.5 (with stand), 32.1 (without stand)
- Box dimensions in inch (W x H x D): 34.2 x 24.8 x 11.4 inch
- Weight incl. Packaging (lb): 51.8

## Accessories

- Included accessories: Tabletop swivel stand, Power cord, Quick start guide, User Manual, Registration card, Remote Control

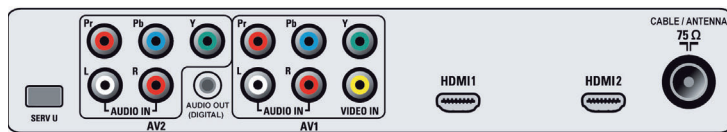

Issue date 2013-06-22

Version: 3.0.8

12 NC: 8670 000 29884  
UPC: 6 09585 13328 0

© 2013 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)