



Philips  
Blu-ray Disc/ DVD player

DVD video upscaling  
CinemaPerfect HD

BDP1300

## Enjoy super sharp movies in HD

With the Philips BDP1300 Blu-ray player, movies never looked better. Incredibly sharp images in full HD 1080p are delivered from Blu-ray discs, while DVD upscaling offers near-HD video quality.

### See more

- DVD video upscaling to 1080p via HDMI for near-HD images
- Blu-ray Disc playback for sharp images in full HD 1080p

### Hear more

- Dolby TrueHD for high fidelity sound
- DTS2.0 Digital Out

### Engage more


- Enjoy all your movies and music from CD and DVD
- EasyLink to control all HDMI CEC devices via a single remote

# PHILIPS

Blu-ray Disc/ DVD player  
DVD video upscaling CinemaPerfect HD


# Highlights

## Enjoy movies and music

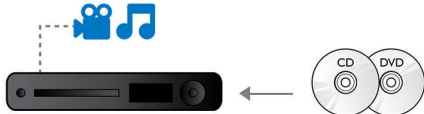


Enjoy all your movies and music from CD and DVD

## Blu-ray Disc playback

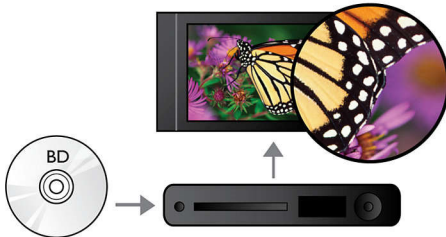

Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. Scenes come to life as details leap at you, movements smoothen and images turn crystal clear. Blu-ray also delivers uncompressed surround sound - so your audio experience becomes unbelievably real. The high storage capacity of Blu-ray Discs also allow a host of interactive possibilities to be built in. Seamless navigation during playback and other exciting features like pop-up menus bring a whole new dimension to home entertainment.

## Dolby TrueHD

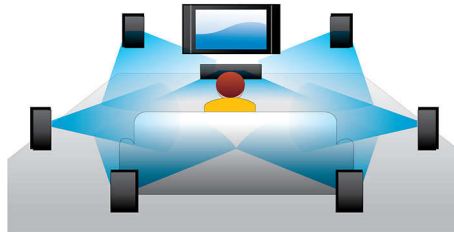

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

## DVD video upscaling



HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital

BDP1300/F7

HD video as well as digital multi-channel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.



# Specifications

## Picture/Display

- Aspect ratio: 16:9, 4:3
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

## Sound

- Sound System: Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out
- Sound Enhancement: Night Mode

## Convenience

- Child Protection: Parental Control
- EasyLink (HDMI-CEC): One touch play, One touch standby, Remote Control-Passthrough
- On-Screen Display languages: English, Mexican Spanish
- Firmware upgradeable: Firmware upgradeable via USB

## Connectivity

- Rear Connections: Digital coaxial out, HDMI output

## Power

- Power consumption: 11 W
- Standby power consumption: < 1W
- Power supply: 110V, 60Hz

## Accessories

- Included accessories: 2 x AAA Batteries, Product Registration Card, Quick start guide, Remote Control, User Manual
- User Manual: Canadian French, English, Mexican Spanish

## Video Playback

- BD Region Code: A
- Video Enhancement: Deep Color, Progressive Scan, Video Upscaling, x.v. Color
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- DVD Region Code: 1

## Product dimensions

- Height: 4.2 cm

- Width: 27 cm
- Depth: 19.31 cm
- Width: 10.6 inch
- Height: 1.7 inch
- Depth: 7.6 inch
- Weight: 0.915 kg
- Weight: 2.017 lb

## Packaging dimensions

- Height: 8.1 cm
- Packaging type: Carton
- Width: 31.5 cm
- Height: 3.2 inch
- Number of products included: 1
- Depth: 25.9 cm
- Type of shelf placement: Laying
- Width: 12.4 inch
- Depth: 10.2 inch
- Nett weight: 1.03 kg
- Nett weight: 2.271 lb
- Gross weight: 1.28 kg
- Gross weight: 2.822 lb
- Tare weight: 0.25 kg
- Tare weight: 0.551 lb
- UPC: 6 09585 24853 3

## Outer Carton

- Length: 31.5 cm
- Number of consumer packagings: 1
- Length: 12.4 inch
- Width: 25.9 cm
- Height: 8.1 cm
- Width: 10.2 inch
- Height: 3.2 inch
- Nett weight: 1.03 kg
- Gross weight: 1.28 kg
- Nett weight: 2.271 lb
- Gross weight: 2.822 lb
- Tare weight: 0.25 kg
- Tare weight: 0.551 lb
- UPC: 6 09585 24853 3

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD



Issue date 2024-08-16

Version: 6.6.5

UPC: 6 09585 24853 3

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)