



Philips
LCD TV

56cm/22"
digital TV



22PFL3505D

Clearly the smart choice

with an Eco TV™

Whether movies, sports or games - experience great pictures and sound with this HD ready TV. With Philips quality and its sophisticated design this TV is the right choice for any room of your house.

Hear crisp and clear sound

- Incredible Surround for enhanced audio enjoyment
- Dolby Digital output for connection to a home theatre system

Easy to connect and enjoy

- 2 HDMI inputs with Easylink for HD connection
- PC-input allows you to use your TV as a PC monitor

See brilliant picture quality

- Digital Crystal Clear for detail depth and clarity
- HD LCD display, with a 1366 x 768p resolution


PHILIPS

LCD TV
56cm/22" digital TV

22PFL3505D/F7

Highlights

Digital Crystal Clear

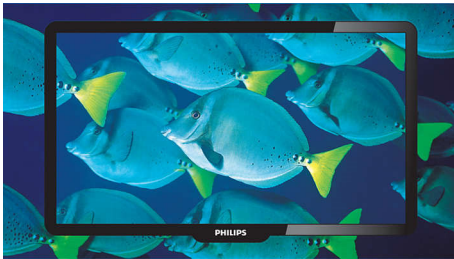

Digital Crystal Clear is a package of picture innovations that digitally adjusts and optimizes picture quality to optimal contrast, color and sharpness levels. It's like watching vivid cinema-like images.

LCD display, 1366 x 768p

This WXGA display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1366 x 768p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience.

Dolby Digital output

Dolby Digital output for connection to a home theatre system

Incredible Surround



Incredible Surround is an audio technology from Philips that dramatically magnifies the sound field to immerse you in the audio. Using state-of-the-art electronic phase shifting, Incredible Surround mixes sounds from left and right in such a way that it expands the virtual distance between the two speakers. This wider spread greatly enhances the stereo effect and creates a more natural sound dimension. Incredible

Surround allows you to experience total surround with greater depth and width of sound, without the use of additional speakers.

2 HDMI inputs with EasyLink

EasyLink uses the HDMI CEC industry standard protocol to share functionality between connected devices and the TV. With Easylink only one remote control is needed to operate main functionalities on your TV and connected devices. HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI uses HDCP copy protection. With 1 HDMI input on the back and 1 HDMI on the side of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and Game Console or Digital Camcorder.

PC input (VGA)

With PC input you can connect your TV to a computer by a VGA cable and use the TV as a PC monitor.



Specifications

Picture/Display

- Aspect ratio: Widescreen
- Contrast ratio (typical): 700:1
- Response time (typical): 8 ms
- Diagonal screen size (inch): 22 inch
- Diagonal screen size (metric): 56 cm
- Panel resolution: 1366 x 768p
- Picture enhancement: Digital Crystal Clear, 3D Combfilter, Digital Noise Reduction, Progressive scan
- Brightness: 300 cd/m²
- Visible screen diagonal (inch): 21.6 inch
- Viewing angle: 170° (H) / 160° (V)

Supported Display Resolution

- Computer formats: 640 x 480, 60Hz, 720 x 480, 60Hz, 800 x 600, 60Hz, 1024 x 768, 60Hz, 1280 x 768, 60Hz, 1360 x 768, 60Hz
- Video formats: 480i, 60Hz, 480p, 60Hz, 720p, 60Hz, 1080i, 60Hz

Sound

- Equalizer: 5-bands
- Sound System: Dolby Digital (AC-3), Stereo, SAP

Loudspeakers

- Built-in speakers: 2

Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer
- Ease of Use: Auto Volume Leveller (AVL), AutoPicture, AutoSound, Settings assistant Wizard, Side Control
- Remote Control: TV
- Screen Format Adjustments: 16:9, 4:3, Normal, Zoom, Movie Expand, Full, Wide, unscaled (dot by dot)
- Ease of Installation: Autostore

Tuner/Reception/Transmission

- Aerial Input: 75 ohm F-type

- TV system: ATSC, NTSC
- Video Playback: NTSC
- Tuner bands: UHF, VHF

Connectivity

- Other connections: PC Audio in, PC-In VGA, Headphone out
- EasyLink (HDMI-CEC): One touch play, Power status, System info (menu language), System audio control, System standby
- Audio Output - Digital: Coaxial (cinch)
- AV 1: Audio L/R in, YPbPr
- AV 2: Audio L/R in, CVBS, S-Video
- USB: USB
- HDMI 1: Analog audio L/R in, HDMI
- HDMI 2: HDMI

Power


- Mains power: 120V/60Hz
- Power consumption: 65 W
- Standby power consumption: < 0.5 W
- Ambient temperature: 5°C to 35°C (41°F to 95°F)

Dimensions

- Product weight (lb): 10.2 lb
- Box height (inch): 18.5 inch
- Box width (inch): 24.8 inch
- Box depth (inch): 7.3 inch
- Wall mount compatible: 100 x 100 mm
- Set Width (inch): 21.6 inch
- Set Height (inch): 14.8 inch
- Set Depth (inch): 3.5 inch
- Set width (with stand) (inch): 21.6 inch
- Set depth (with stand) (inch): 7.1 inch
- Set height (with stand) (inch): 16.3 inch
- Product weight (+stand) (lb): 10.9 lb
- Weight incl. Packaging (lb): 13.9

Accessories

- Included accessories: Table top stand, Power cord, Quick start guide, User Manual, Registration card, Remote Control, Batteries for remote control

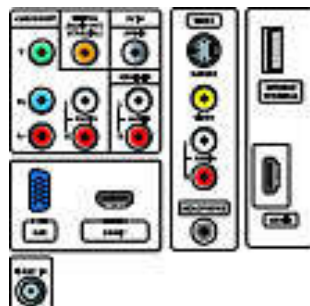

Issue date 2024-08-16

Version: 4.4.2

UPC: 6 09585 18615 6

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

