



Philips 3000 series  
Smart video door lock

### Remote unlocking

3.5-inch IPS screen  
Temporary PIN code unlock  
With 70mm door backset

**DDL303BFCBW**

# Remote unlocking

Easy life is under control

Philips DDL303-VP-5HWS integrates door viewer, doorbell, and door lock features. Stay connected via Wi-Fi and use Smart Life App for remote unlocking and lock records. Embrace a smart, convenient life without limitations!

#### Secure protection, smart embedded

- One-step mechanical rotation for unlocking
- Protect real password from being peeping
- Instantly protect home security at all times

#### Easy life goes beyond this

- Fit for multiple mechanical mortises
- One-key quick locking
- Say goodbye to the key-only era
- Leave a quiet place for the family

#### Smart life "locked" with excellence

- Allow easy life in one step
- Clear viewing at the doorway

# PHILIPS

# Highlights

## One-click remote unlock



The "#" key is used both as a doorbell button and a "#" key. When the door lock is in sleep mode and pressing the "#" key can activate the doorbell, and the camera will immediately capture the photo and uploads it to the Smart Life App. After viewing the logs and confirming the visitor's information, you can unlock the door remotely through the App with a single tap, allowing the visitors to enter the door easily.

## 3.5-inch IPS screen



The inside assembly is equipped with a 3.5-inch IPS display screen, allowing you to instantly view the situation outside the door without opening the door. This feature is especially beneficial for families with elderly individuals or young children, as there is no need to log into the Smart Life App. It ensures a more user-friendly and hassle-free experience for everyone.

## Indoor quick opening




The inside assembly of the door lock equips with a quick-open handle and a rotary knob. If an emergency leads to the malfunction of the smart door lock, it does not affect the opening of the door lock. Rotating the handle or the rotary knob allows emergency egress, which could ensure the users' safety.

## 20-digit hidden PIN code



With the 20-digit hidden PIN code technology, Philips DDL303-VP-5HWS lets you enter any random number combination of up to 20 digits, including the valid PIN code, to verify and unlock the door. This feature ensures security, prevents peeping, and safeguards your real PIN code.

## Multiple alerting

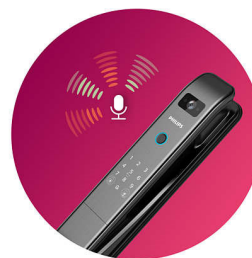

Our DDL303-VP-5HWS smart lock comes with multiple alerts including anti-disassembly,

system lock-out, low battery alert etc. It not only provides constant protection for your home, but also keeps you updated on the condition of the door lock in real time for your convenience.

## Universal structure design



The DDL303-VP-5HWS has a universal interchangeable design, compatible with various standard mechanical mortises\*. Enjoy a smart lifestyle without the need to replace the mortise. It can be installed on wooden doors, security doors, and various door types, including doors equipped with concealed lock rods, offering high adaptability and an easy installation experience for your convenience.

## "Lock" key settings



The "\*" key is used both as a "lock" button and an "\*" key. Upon normal use, the dead bolt will pop out and lock automatically upon door closing. If you want to achieve instant door locking upon closing, you can wake up the keypad and long press the "\*" key for 2 seconds to make the dead bolt pop out immediately, realizing one-key quick locking.

# Specifications

## Design & Appearance

- Color: Obsidian black
- Handle: Push-pull handle
- Main Material: Aluminium alloy
- Fingerprint Sensor: Semiconductor

## Access Solution

- Fingerprint
- Password/PIN Code
- Temporary PIN code
- Card/Key Tag
- Mechanical Key
- Mobile APP

## Power Specification

- Battery Type: Li-polymer Battery

- Time of Use: 3 months\*
- Emergency Power Supply: 5V power bank

## Easy Operation

- Voice Guide: Human voice guide

## Smart Lock Functions

- Mortise: C grade lock cylinder

## Installation

- Door Thickness: 38-60 mm, 60-90 mm, 90-120 mm, Other range\*
- Door Opening Direction: Left inward opening, Left outward opening, Right inward opening, Right outward opening
- Door Type: Antitheft door, Copper door, Wooden door



Issue date 2024-10-28

Version: 3.3.1

EAN: 69 71318 50427 3

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Standard mechanical mortises: generally refers to the Chinese standard 6068 type mechanical mortise, that is, the standard mortise with a backset of 60mm and a center distance of 68mm. For details, please consult our local dealer or consumer care service center.

\* 3 months standby time: It comes from laboratory data, and the actual battery time may vary upon the frequency of use.