



Philips  
Blu-ray Disc/ DVD player

### DivX Plus HD

USB2.0 Media Link  
DVD video upscaling  
RealMedia video playback

**BDP2100**

## Streaming entertainment with Netflix and Vudu

With BDP2100, movies never looked better. Incredibly sharp images in full HD 1080p are delivered from Blu-ray discs, while DVD upscaling offers near-HD video quality.

#### See more

- DVD video upscaling to 1080p via HDMI for near-HD images
- Blu-ray Disc playback for sharp images in full HD 1080p
- DivX Plus HD Certified for high definition DivX playback
- Subtitle Shift for widescreen without any missing subtitles
- Netflix-streaming TV Episodes and Movies over the internet

#### Hear more

- Dolby TrueHD for high fidelity sound


#### Engage more

- EasyLink to control all HDMI CEC devices via a single remote
- Direct remote access to Netflix and Vudu movie services
- USB 2.0 plays video/music from USB flash/hard disk drive
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content

# PHILIPS

# Highlights

## Blu-ray Disc playback

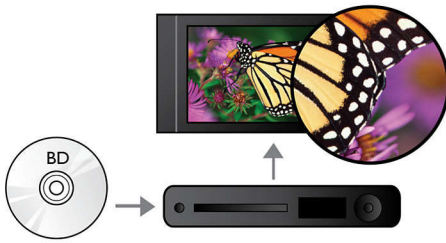

Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. Scenes come to life as details leap at you, movements smoothen and images turn crystal clear. Blu-ray also delivers uncompressed surround sound - so your audio experience becomes unbelievably real. The high storage capacity of Blu-ray Discs also allow a host of interactive possibilities to be built in. Seamless navigation during playback and other exciting features like pop-up menus bring a whole new dimension to home entertainment.

## DVD video upscaling




HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering

perfect picture and sound quality, completely free from noise.

## Direct remote Netflix and Vudu

To speed up the process, and make it more user-friendly, there are Netflix and VUDU shortcut buttons on remote control that allow you to do the basic commands necessary both for watching your video and for controlling the general interface.

## Dolby TrueHD

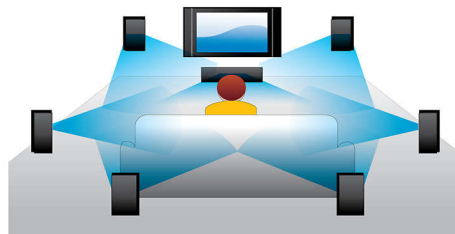

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

## Subtitle Shift



Subtitle Shift is an enhancement feature that lets users manually adjust a movie's subtitle positioning on the television or computer screen. Using the remote control, users can shift the subtitles up and down on the screen. On widescreen displays, such as 21:9 cinema and projectors, the subtitles sometimes get cut off.

In order to see them clearly, the user has to change the display aspect ratio, which defeats the purpose of the widescreen. With the Subtitle Shift feature, the user can retain the correct display aspect ratio and have the subtitles ideally positioned on the screen.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Netflix video streaming

# NETFLIX

Instantly watch TV episodes and movies as often as you want on your TV. All you need is a wired internet connection and a Netflix membership package that includes streaming\*, and you are ready to go.



# Specifications

## Picture/Display

- Aspect ratio: 16:9, 21:9, 4:3
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

## Sound

- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out
- Sound Enhancement: Night Mode

## Convenience

- Child Protection: Parental Control
- BD-Live(1GB USB memory needed)
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- On-Screen Display languages: English, Mexican Spanish
- Online services: Pandora
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade

## Connectivity

- Front Connections: USB 2.0
- Rear Connections: Digital coaxial out, Ethernet, HDMI output

## Power

- Power consumption: 11 W
- Standby power consumption: < 1W
- Power supply: 110V, 60Hz

## Dimensions

- Weight incl. Packaging: 2.0 kg
- Packaging (W x H x D): 420 x 90 x 303 mm
- Product (W x H x D): 310 x 40 x 203 mm
- Product weight: 1.25 kg

## Accessories

- Included accessories: 2 x AAA Batteries, Product

- Registration Card, Quick start guide, Remote Control, User Manual
- User Manual: Canadian French, English, Mexican Spanish

## Video Playback

- BD Region Code: A
- Compression formats: DivX Plus™ HD, H.264, MPEG1, MPEG2, XviD
- Video Enhancement: Deep Color, Progressive Scan, Video Upscaling, x.v. Color
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- DVD Region Code: 1

## Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Product dimensions

- Height: 3.95 cm
- Width: 31 cm
- Depth: 21.7 cm
- Width: 12.2 inch
- Height: 1.6 inch
- Depth: 8.5 inch
- Weight: 1.02 kg
- Weight: 2.249 lb

## Packaging dimensions

- Height: 29.9 cm
- Packaging type: Carton

- Width: 36.5 cm
- Height: 11.8 inch
- Number of products included: 1
- Depth: 8.7 cm
- Type of shelf placement: Laying
- Width: 14.4 inch
- Depth: 3.4 inch
- Nett weight: 1.2 kg
- Nett weight: 2.646 lb
- Gross weight: 1.56 kg
- Gross weight: 3.439 lb
- Tare weight: 0.36 kg
- Tare weight: 0.794 lb
- UPC: 6 09585 23257 0

## Outer Carton

- Length: 36.5 cm
- Number of consumer packagings: 1
- Length: 14.4 inch
- Width: 29.9 cm
- Height: 8.7 cm
- Width: 11.8 inch
- Height: 3.4 inch
- Nett weight: 1.2 kg
- Gross weight: 1.56 kg
- Nett weight: 2.646 lb
- Gross weight: 3.439 lb
- Tare weight: 0.36 kg
- Tare weight: 0.794 lb
- UPC: 6 09585 23257 0

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## File Format

- Audio: aac, mka, mp3, wma
- Video: avi, divx, m2ts, mkv, mp4, mpeg, mpg
- Picture: GIF, JPEG, JPG

Blu-ray Disc/ DVD player

DivX Plus HD USB2.0 Media Link, DVD video upscaling, RealMedia video playback

BDP2100/F7

# Specifications



Issue date 2024-08-16

Version: 8.8.6

UPC: 6 09585 23257 0

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Netflix unlimited streaming membership required.